




Read all instructions BEFORE
assembly and USE of product.
**KEEP INSTRUCTIONS FOR
FUTURE USE.**

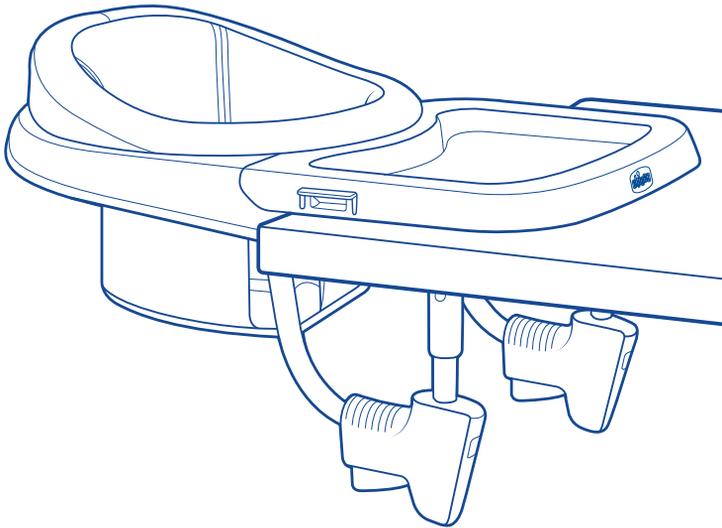

FastLock™ 360°

Rotating Hook-On Chair

Owner's Manual

⚠️ WARNING

Failure to follow all warnings and instructions could result in serious injury or death.

Fall Hazard. To prevent falls:

- **ALWAYS** use restraints. Adjust to fit snugly.
- Keep child in view.
- To prevent tip over, check stability of table before and after seating child.
- **NEVER** use with:
 - glass table top
 - loose table top
 - single pedestal table
 - card table
 - table leaf
 - table cloths or placemats
- Child can use nearby structures to kick or push chair off.
NEVER use hook-on chair:
 - with ordinary chair underneath
 - in reach of table legs
 - near island below countertop

Use only for:

- child who can sit upright without help.
- child up to 37 pounds (16.8 kg).
- tables 3/4 to 1 1/2 in. thick (19 to 38 mm).

⚠️ WARNING






Additional Warnings:

- Discontinue use if child, when seated in hook-on chair, is able to move the hook-on chair arms on the table top.
- Before removing child from hook-on chair, be sure child's legs are free from hook-on chair lower arms.
- Discontinue use if hook-on chair is broken or missing any components. Contact Chicco immediately for replacement parts or service.
- Do not use without all rubber on the arms attached securely to table surface.
- Keep table and seat clean and dry to prevent slipping.
- Do not allow other children to play near or walk under hook-on chair while in use.


Your child's safety is very important to us, so we urge you to take the following precautions when using this product:

- Do not use replacement parts other than those approved by Chicco.
- Frequently check the arm clamps and tighten them if required.
- Do not attach objects to the hook-on chair, since they might affect the stability and safety of the product.
- Do not fit or lock the hook-on chair to a table with the child sitting in the hook-on chair.
- Do not seat more than one child at a time in the hook-on chair.
- Do not attach the hook-on chair to drawers or movable parts of tables.
- Before use, remove and dispose of all plastic bags and packaging materials and keep them out of reach of children.
- Keep hot liquids/foods away from table while child is in hook-on chair.



Components

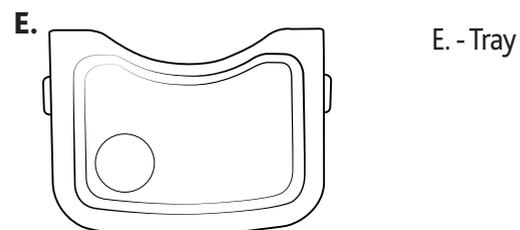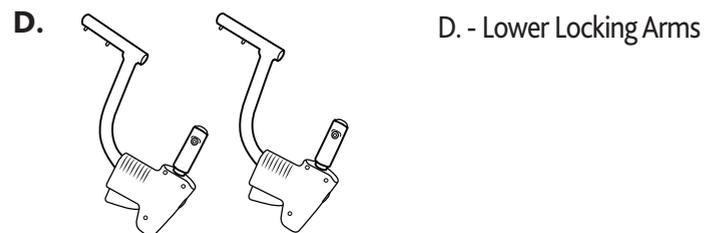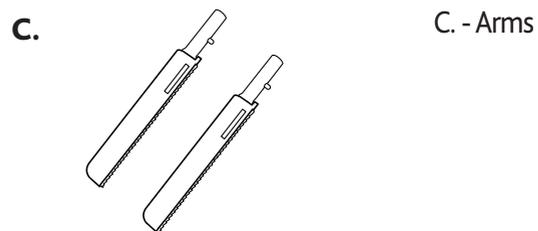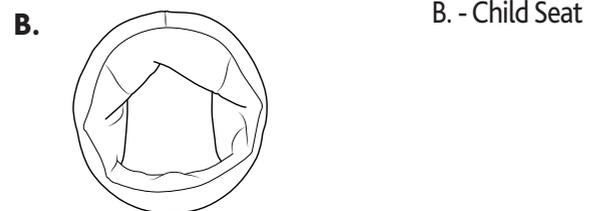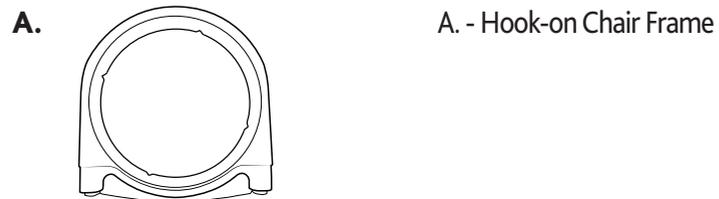


How to Assemble the Hook-on Chair

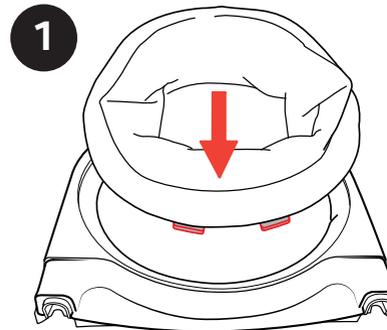


1. Place the Hook-on Chair Frame on a flat surface. Locate two mounting tabs on the Child Seat. Slide the front edge of the Child Seat into the Hook-on Chair Frame at an angle. Make sure the mounting tabs are below the Hook-on Chair Frame. Press down on the back of the Child Seat frame to lock it into place.

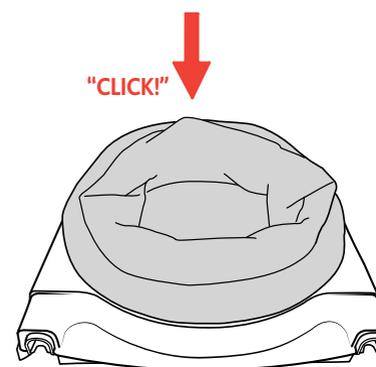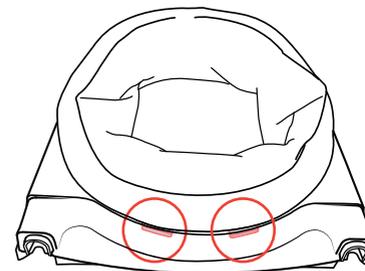

How to Assemble the Hook-on Chair

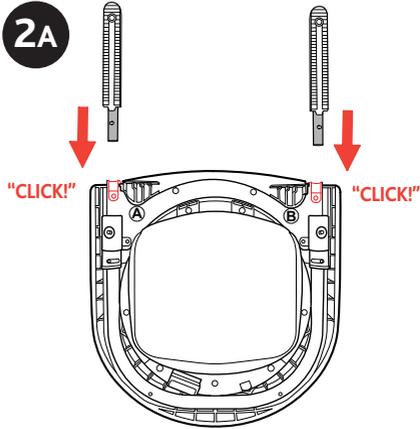


2a. Flip the Hook-on Chair over and insert one Arm into the Hook-on Chair, as shown. Repeat for the other side.


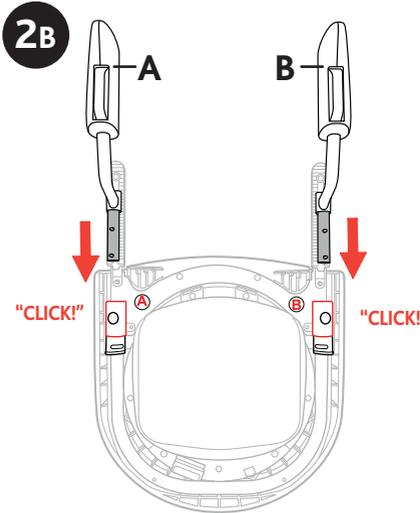


2b. Match up the Lower Locking Arms "A" and "B" with the letters on the bottom of the Chair Frame. Insert Lower Locking Arms into the Hook-on Chair seat, as shown.

How to Attach the Hook-on Chair

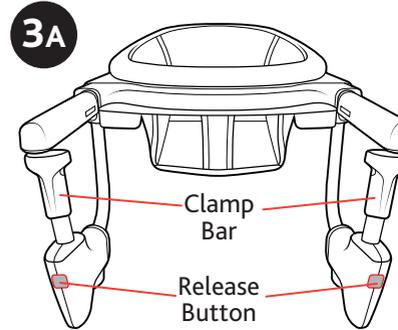


3A. If the Clamp Bar is up, it must be lowered all the way before you attach hook-on chair to the table. To lower the Clamp Bar, push in on the release button on the front of the Lower Locking Arm. The Clamp Bar may need to be pushed down while pressing the release button.

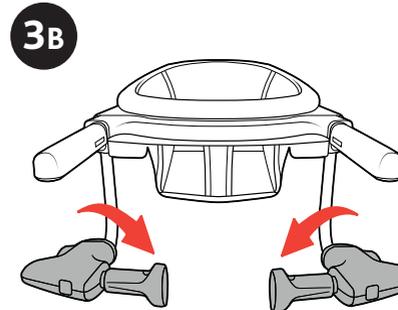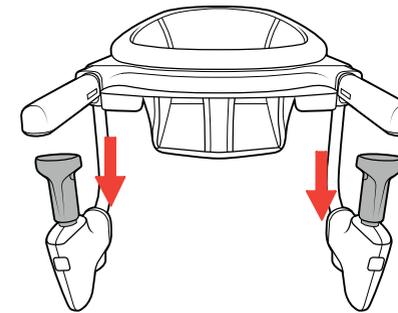

3B. The Locking Clamps must be rotated inward before you attach hook-on chair to the table. Twist the Locking Clamps in as shown.


How to Attach the Hook-on Chair

4A

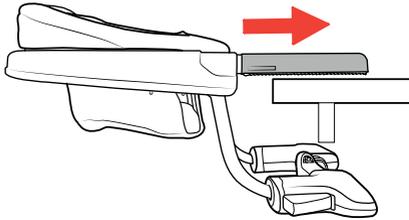

4A. Slide the Hook-On Chair onto the table top. Make sure the Upper Arms are on top of the table and the Lower Locking Arms are folded downwards and below the table top.


4B

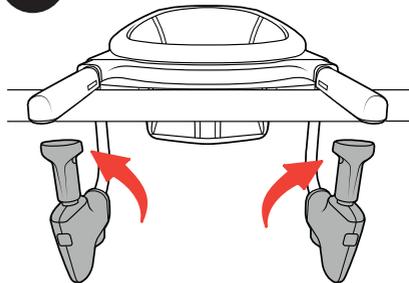

4B. Rotate both Locking Clamps up, as shown, until they click into an upright position. Check to make sure both Locking Clamps are fully rotated up.


If the underside of your table has an apron, make sure the Lower Locking Arms are completely over it before securing.

Apron

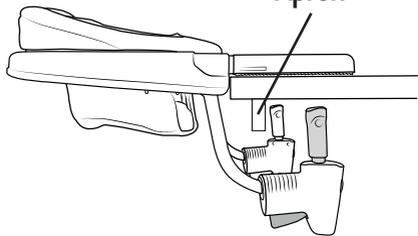


How to Attach the Hook-on Chair

5

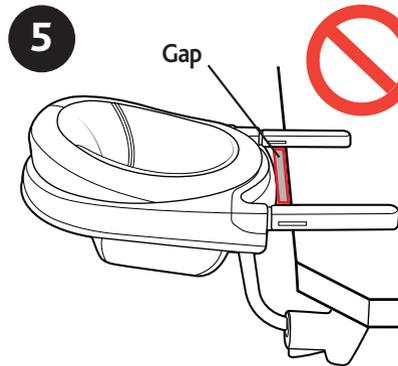

5. Check to make sure there is not a gap between the front of the Hook-On Chair and the edge of the table top.

To secure the Hook-On Chair to the table, squeeze the ratchet button until the clamp bar meets the underside of the table. Repeat for the other side. Check to make sure that the arms on the table top are flat and that the Hook-On Chair is secure.

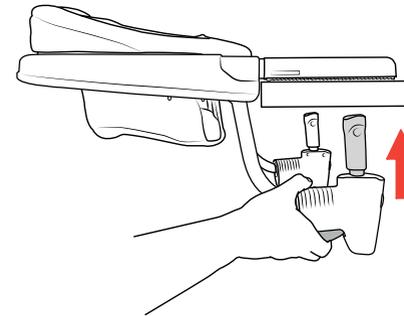


⚠ WARNING

Pull/Push on hook-on chair to make sure it is firmly attached to table.


How to Attach and Remove the Tray

6A

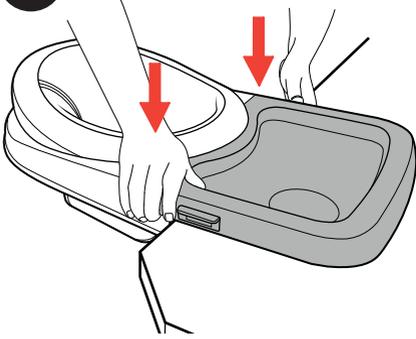

6A. Attach the Tray to the Arms on the Hook-On Chair by lining up the Tray with the Arms on the table. Push down firmly on both side tabs to snap the Tray into place.

6B

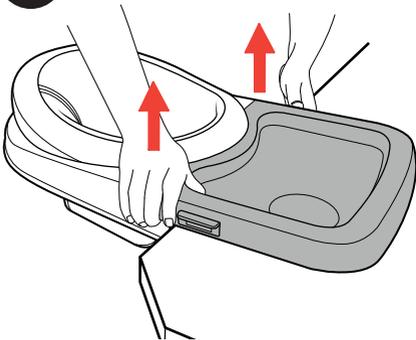


6B. Remove the Tray from the Arms, grasp the Tray on both side tabs and pull up.

How to Use the Safety Belt

!WARNING


Always secure child in the restraint. Never leave child unattended in hook-on chair. Always keep child in view.

7A

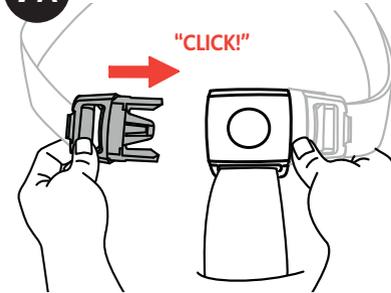


7A. Slide both Waist Clips into the Crotch Strap Buckle as shown. Pull on both sides to make sure the Clips are secured to the Buckle.

7B

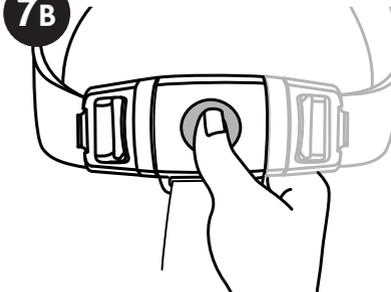

7B. The safety harness can be released by pressing the button on the center of the Crotch Strap Buckle and pulling both Waist Clips out.

8

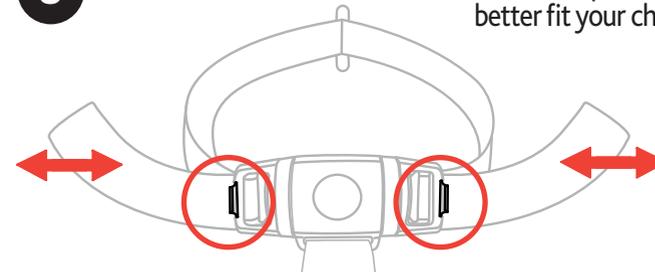

8. The length of the Waist Straps can be adjusted by pressing the tab at the end of the Waist Strap Clip and pulling on the strap to tighten or loosen to better fit your child.

How to Use the Hook-on Chair



⚠️ WARNING

Do not adjust the hook-on chair to a position not shown in this owner's manual.

9


The Hook-On Chair can be adjusted to 4 different positions.

9. To adjust the seat position, hold onto both sides of the Seat and rotate the Seat in the desired direction. The Seat can be rotated 360° and clicks into 4 positions.

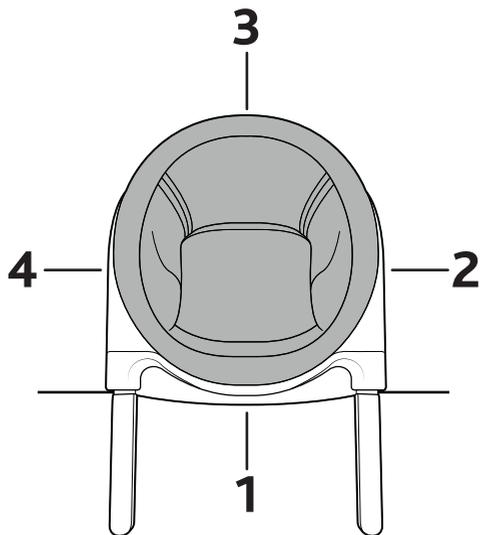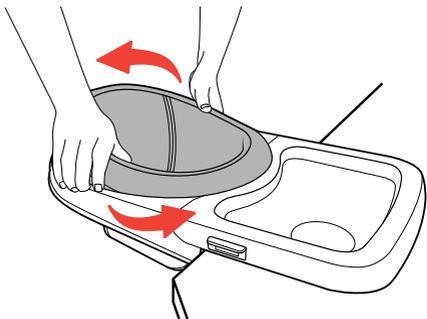

How to Remove the Hook-on Chair

10A

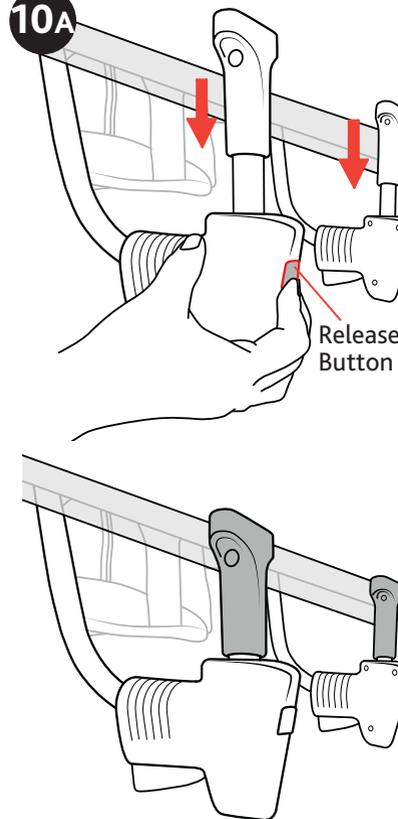


10A. Push in on the release buttons on the front of the Lower Locking Arms to unlock the Clamp Bars, as shown.

Tip: If the release button is hard to push, lightly squeeze the ratchet button and press the release button at the same time.

How to Remove the Hook-on Chair

10B


10B. Rotate the Locking Clamps down and slide the Hook-On Chair off of the table top.

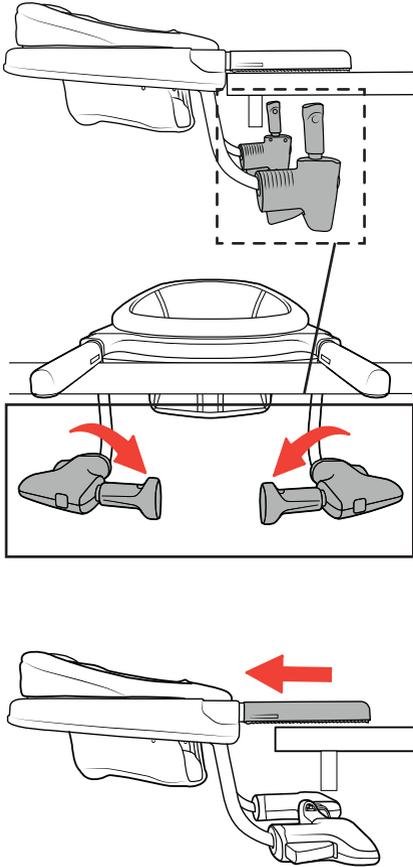

Folding for Storage



11A

11A. Rotate the Locking Clamps to the upright position.

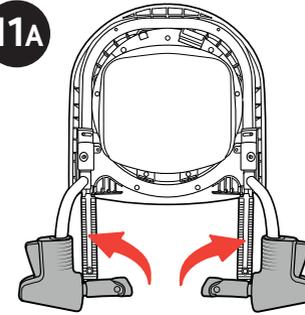



11B. Place the Hook-on Chair upside down on a flat surface. Locate and press in on the snap lock button, as shown.

11B

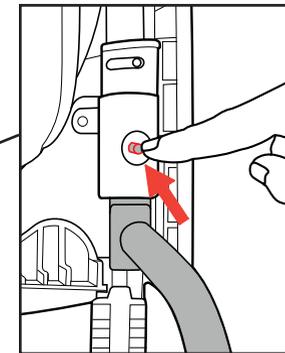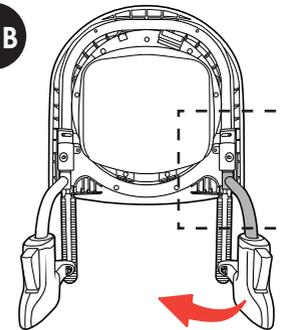


11C. Rotate the Locking Arm down. Repeat for the other side.

11c

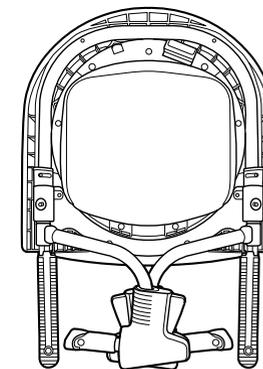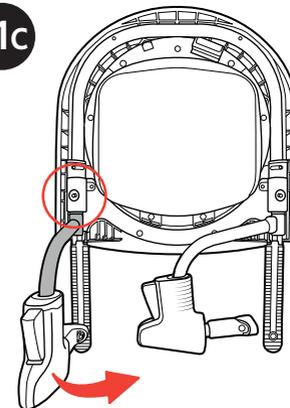


How to Remove the Child Seat

12

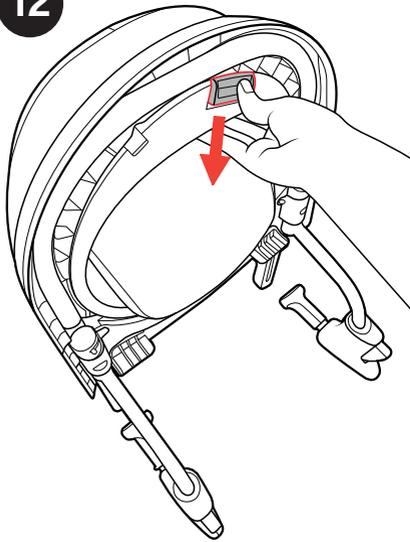


The fabric seat cover on the Hook-On Chair can be removed for cleaning.

12. Slide the release button on the underside of the frame with your thumb and push up on the Child Seat. Remove the Child Seat from the Hook-on Chair Frame.

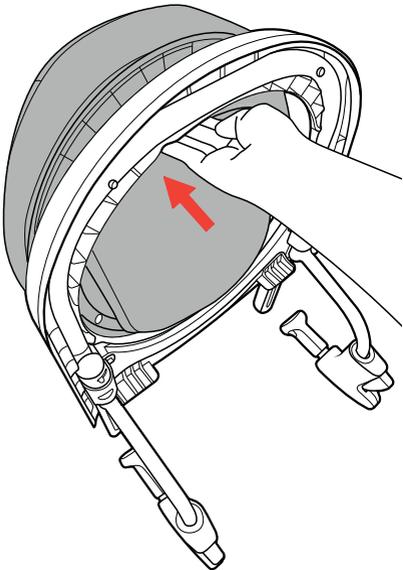


How to Remove the Fabric Seat

13A

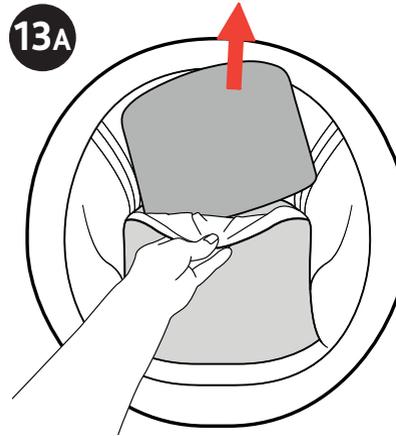

13A. Locate the seat board inside the seat bottom pocket. Lift up on the back edge of the seat fabric and pull out the seat board.


13B

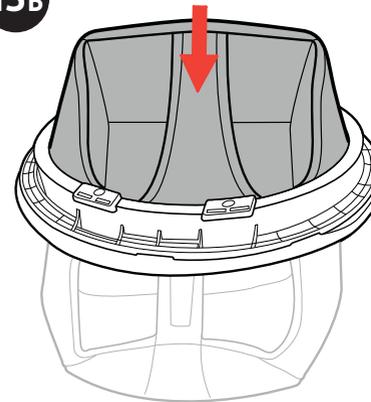

13B. Hold the Child Seat upside down and push the seat fabric down through the Seat Frame. Start with the back edge of the seat, and carefully guide the leg opening wire through the frame. Do not force or bend the leg opening wire while inverting the fabric.


How to Remove the Fabric Seat

14A

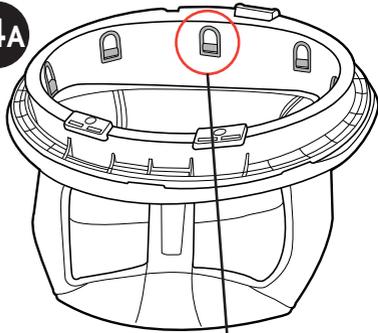

14A. Locate 8 plastic rings on the inside of the Seat Frame.


14B

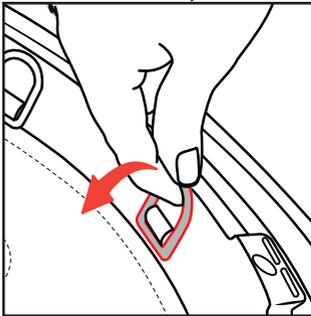

14B. Pull/flip out one of the rings to release the strap.


How to Remove the Fabric Seat

14c

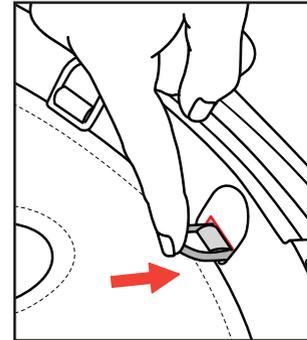

14C. While pushing the ring through the opening on the Seat Frame, at the same time, pull the strap from the opposite side of the opening. Next, remove both rings on either side of the first ring. Alternate removing a ring from each side until you have removed all of the rings.


14D

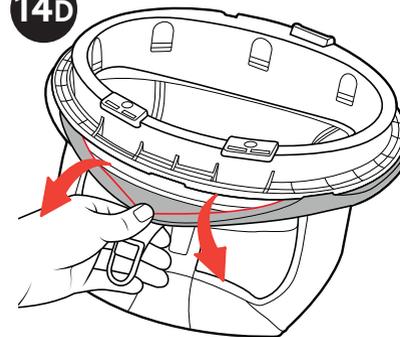

14D. Remove the edge of the Seat Fabric from the Seat Frame.


How to Remove the Fabric Seat

15

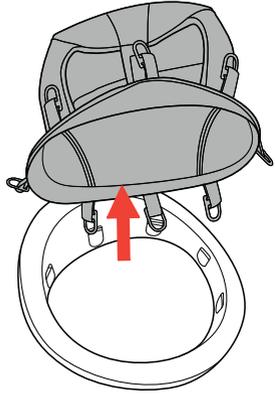


15. Remove the fabric seat covering from the Seat Frame, as shown.

16

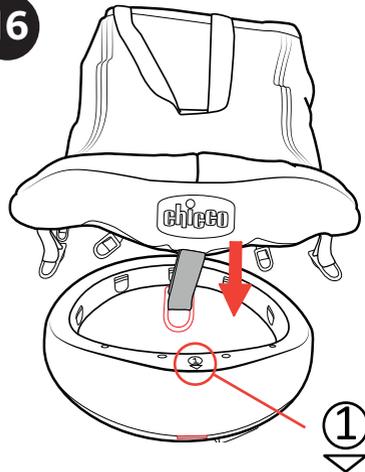

16. To replace the fabric seat cover, follow steps 14 thru 15 in reverse.

Hint: Make sure to line up the fabric seat cover to the Seat Frame correctly. Line up the Chicco logo with the number 1 symbol, as shown. Thread the back plastic ring into the correct opening, and work your way around the frame alternating side rings.

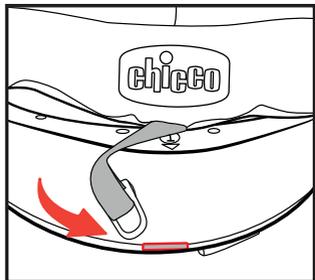

Cleaning and Maintenance

The cleaning and maintenance of the Hook-on Chair must only be carried out by an adult.

CLEANING

The fabric seat can be removed (please refer to the section "How to Remove the Fabric Seat"). Please refer to the care label on the fabric seat for instructions on how to clean.

It is recommended to periodically clean between the movable and fixed plastic parts of the seat with a toothbrush to remove any possible food residues. Always dry the metal parts to prevent the formation of rust.

Plastic can be cleaned with mild detergent and warm water, no bleach or harsh cleaners/abrasives.

MAINTENANCE

This product requires regular maintenance. Periodically check the Hook-on Chair for wear, damage, or missing components. Should any parts be missing or damaged, the Hook-on Chair must not, under any circumstances, be used.

For More Information

If you have any questions or comments about this product, or are missing any of the parts, please contact us in one of the following ways:



(877)-424-4226



info.usa@artsana.com



www.chiccousa.com



1826 William Penn Way
Lancaster, PA 17601



www.chiccousa.com

Watch how to
attach and remove
the FastLock 360°

