





HARMONIA

Adjustable Folding High Chair

Owner's Manual

Read all instructions BEFORE
assembly and USE of product.







KEEP INSTRUCTIONS FOR
FUTURE USE.

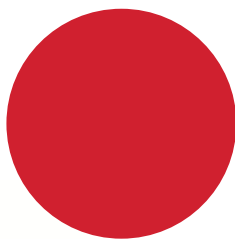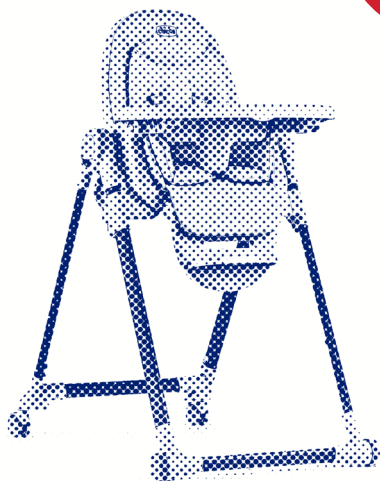

⚠ WARNING
DEATH or SERIOUS INJURY CAN OCCUR

FAILURE TO FOLLOW THESE INSTRUCTIONS AND THE PRODUCT LABELS CAN RESULT IN SERIOUS INJURY OR DEATH TO YOUR CHILD.


- PLEASE SAVE OWNER'S MANUAL FOR FUTURE USE.
- ADULT ASSEMBLY REQUIRED.
- NEVER LEAVE CHILD UNATTENDED. Always keep child in view while in the high chair.
- AVOID SERIOUS INJURY from falling or sliding out. Always use safety harness. After fastening buckles, adjust belts to ensure a snug fit around your child.
- FALL HAZARD: Children have suffered severe head injuries including skull fractures when falling from high chairs. Falls can happen suddenly if child is not restrained properly.
- Secure your child at all times with the restraint system provided, both in the reclined and upright positions.
- The tray is not designed to hold your child in the chair.
- In high chair mode, it is recommended that the high chair be used only by children capable of sitting upright unassisted.
- Always lock the wheels when the child is sitting in the high chair, or when the high chair is open but not in use. Always place the high chair on a horizontal, stable surface. NEVER place the high chair near stairs or steps. DO NOT move chair with child in it.
- DO NOT use this high chair for more than one child at a time and do not leave other children playing unattended near the high chair.
- DO NOT use the high chair if any part is broken, torn, or missing.
- Ensure that all components are correctly fitted and adjusted before use.
- DO NOT place any heavy bags, packages, or other items on the high chair tray. They may cause the chair to tip over.
- To avoid the danger of suffocation, remove all plastic covers before using the high chair. Immediately destroy the plastic cover to keep it away from babies and children.
- DO NOT leave the high chair near walls, curtains, or windows, where the child can become tangled, or where a child may be able to use its feet to push against the high chair.
- To avoid the risk of fire, NEVER leave the high chair near sources of strong heat such as open fires, electric heaters, and gas stoves. If the chair is exposed to direct sunlight, wait for it to cool down before placing your child in it.
- This high chair is recommended for children from birth to 6 months in NEWBORN MODE; from 6 to 36 months in HIGH CHAIR MODE; and for children over 36 months in but do not weigh more than 40 lbs in TODDLER MODE.
- DO NOT use accessories, spare parts, and components other than those supplied by Chicco.

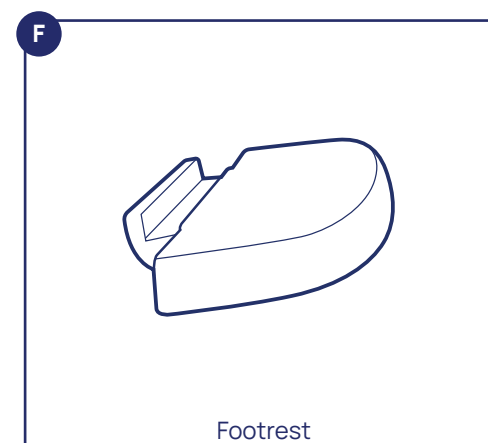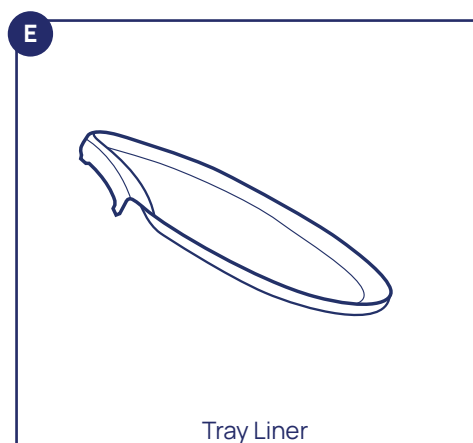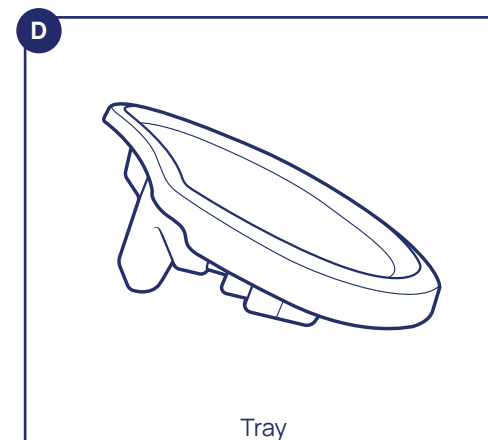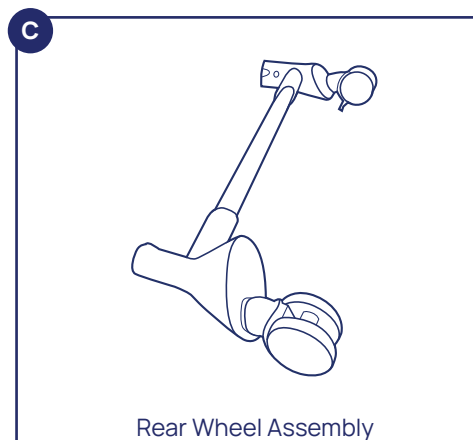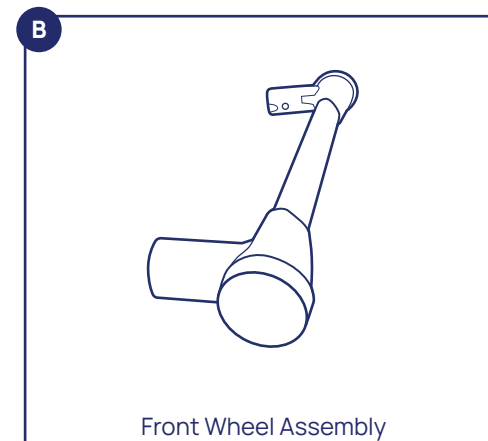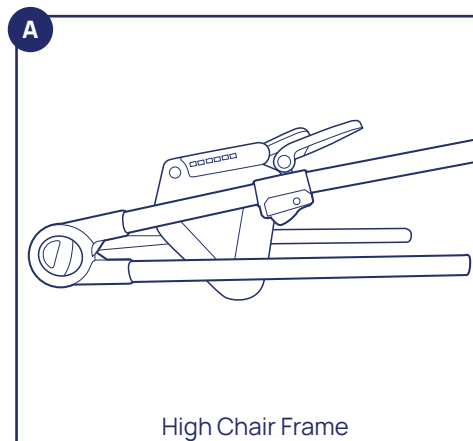

NEWBORN MODE

For infants from birth to 6 months.


- Backrest fully reclined
- Seat at the desired height
- Infant insert attached
- Armrests down
- Tray stored on rear legs
- Legrest in the highest position
- Footrest attached
- Harness straps attached

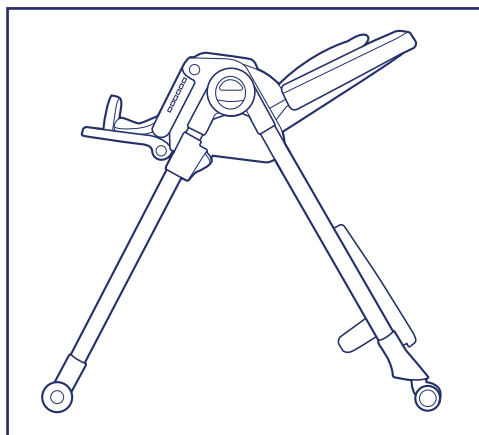

HIGH CHAIR MODE

For children from 6 to 36 months.


- Backrest at the desired position
- Seat at desired height
- Infant insert (if needed)
- Armrests up in the locked position
- Tray in use
- Legrest lowered
- Footrest attached
- Harness straps attached

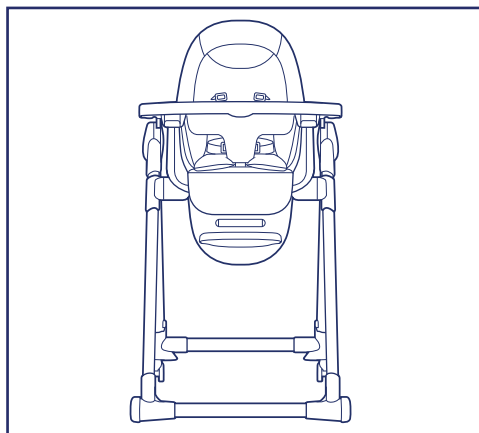

TODDLER MODE


For children over 36 months and who weigh less than 40 lbs.

- Backrest in the most upright position
- Seat at the lowest height
- Infant insert removed
- Armrests down
- Tray removed
- Legrest lowered
- Footrest removed
- Harness straps removed

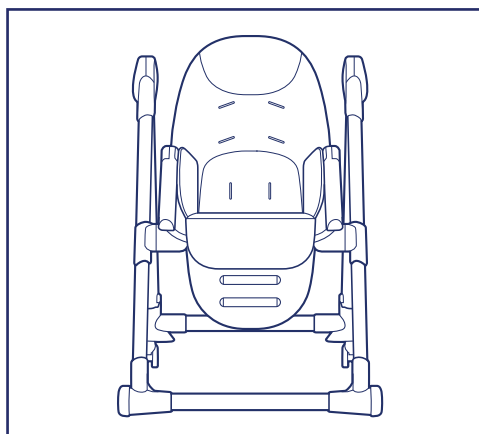


⚠ WARNING: When opening the high chair, ensure that all children are at a safe distance. Make sure the movable parts of the high chair do not come into contact with your child.

- 1 Lay the high chair frame (A) down with the seat facing up.

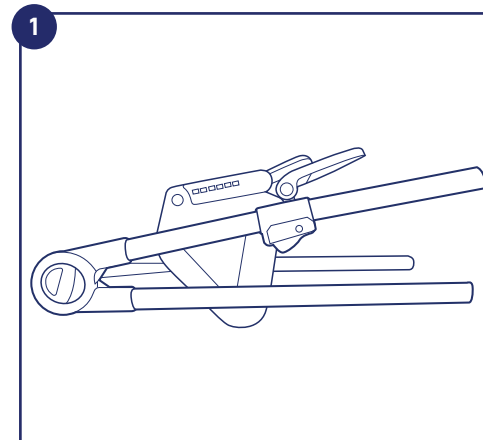


- 2 Slide the front wheel assembly (B) on to the front legs of the high chair frame.

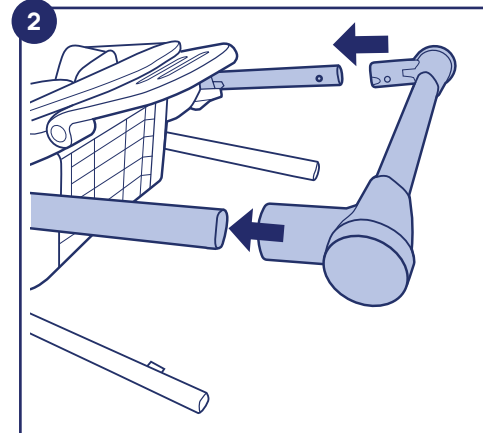


- 3 Ensure both snap buttons click into the holes on the front wheel assembly.

Ensure the front wheel assembly is securely attached to the high chair frame by pulling in the opposite direction of attachment.

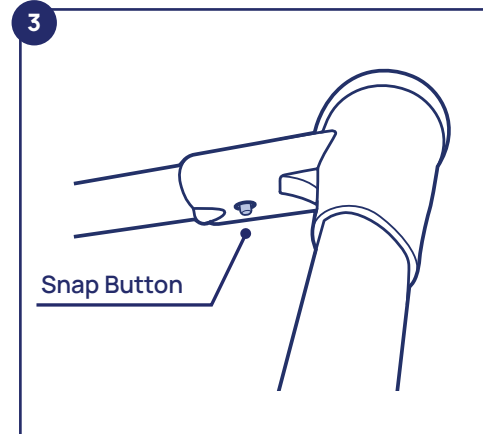


SETTING UP THE HIGH CHAIR

- 4 Slide the rear wheel assembly (C) on to the rear legs of the high chair frame.

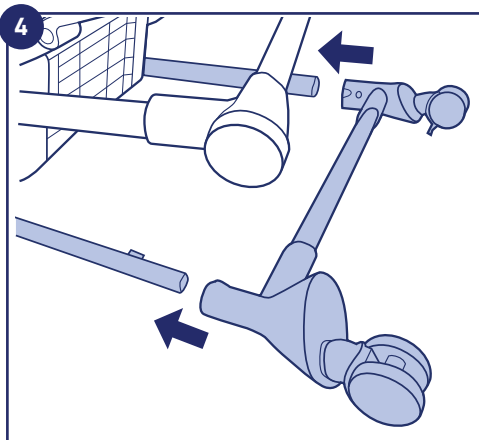

- 5 Ensure both snap buttons click into the holes on the rear wheel assembly.


Ensure the rear wheel assembly is securely attached to the high chair frame by pulling in the opposite direction of attachment.

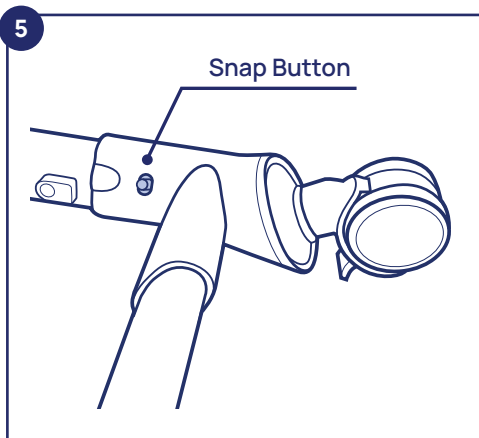

- 6 Stand the high chair upright.

From the front of the high chair, pull on both release levers on either side while pulling the front leg out with your foot.

The high chair will click when locked into the open position.

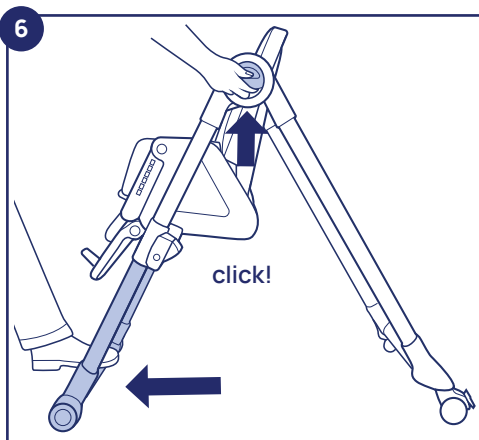


SETTING UP THE HIGH CHAIR


⚠ WARNING: DO NOT adjust the height with child in product.

- 7 Raise the seat by pulling up on the handle on the back of the high chair. The seat will click into place.

The seat has 7 adjustable height positions.

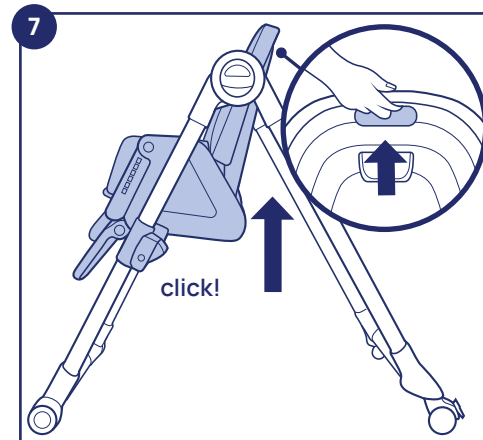


- 8 Lower the seat by squeezing both release levers on the front legs of the high chair.

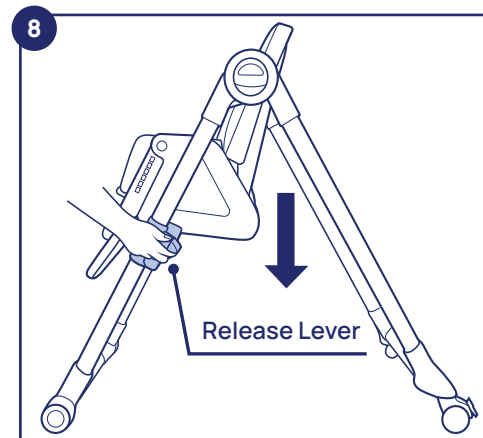


- 9 Slide the lip of the footrest (F) into one of the slots on the legrest and pull down to snap it into place.


There are 2 footrest slot positions.

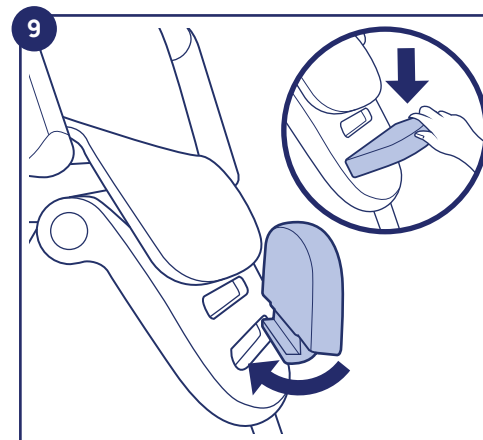


- 10** Remove the **footrest** by pushing it up towards the seat to unsnap it.

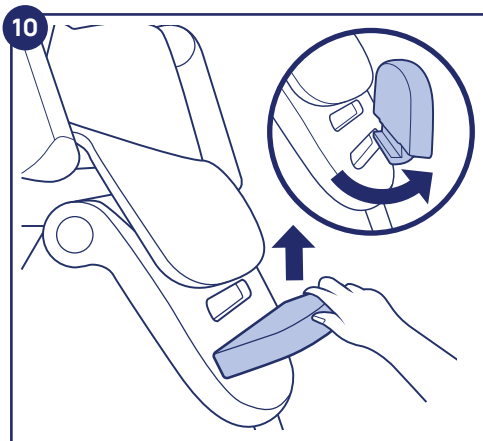

- 11** Raise the legrest by pulling it upward.
- The legrest has 5 adjustable positions.

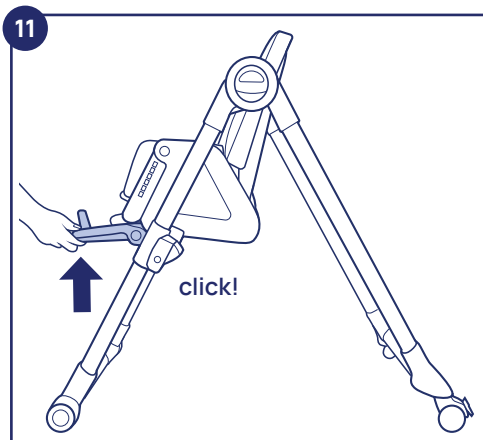


- 12** Lower the legrest by pressing both buttons on either side.

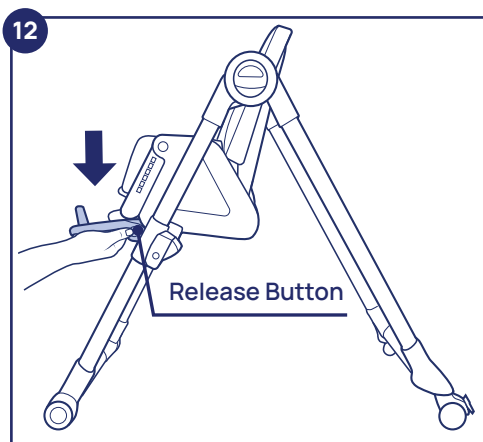

- 13** Press the button on the side of the armrest and pull it up into the locked position.


Repeat for the other armrest.

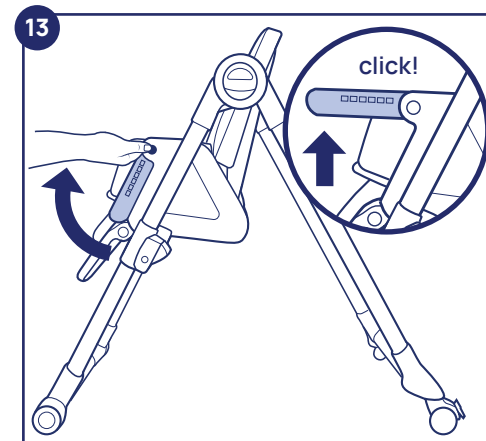

⚠ WARNING: Always ensure that the tray is locked correctly to the armrests before use.

- 14** Place the **tray (D)** on the armrests and push down to click it into place.


Wiggle the **tray** front to back to ensure it is securely engaged on the armrests.

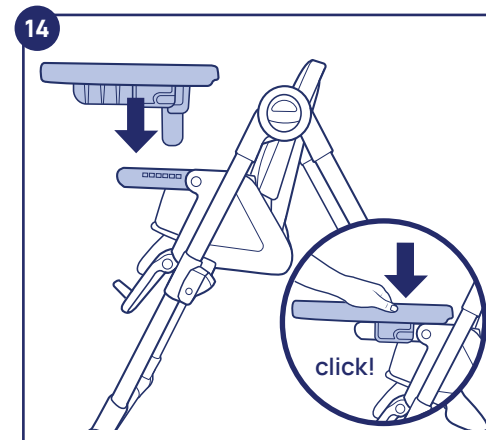

- 15** Squeeze the adjustment levers on either side of the **tray** and slide it into the desired position.


The **tray** can be adjusted to 3 different positions.

Always check that the tray is securely connected to the armrests after adjusting its position.

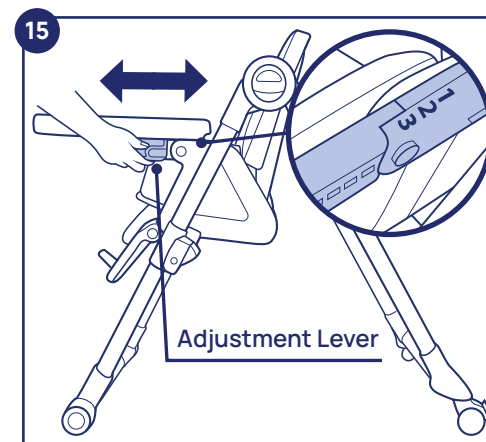


- 16** Attach the **tray liner (E)** by firmly pushing it down on to the tray until it clicks into place.

To remove the **tray liner** lift up on the side edge.

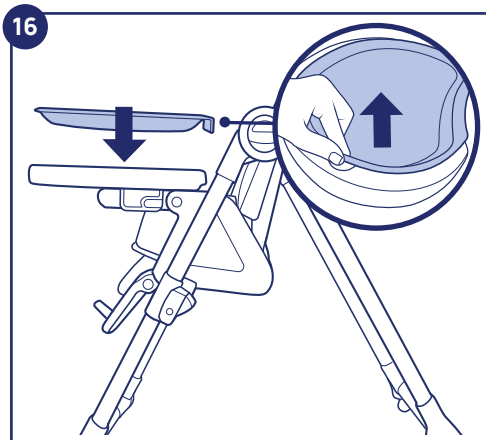


- 17** Remove the **tray** by squeezing the adjustment levers on either side and lifting the **tray** up.

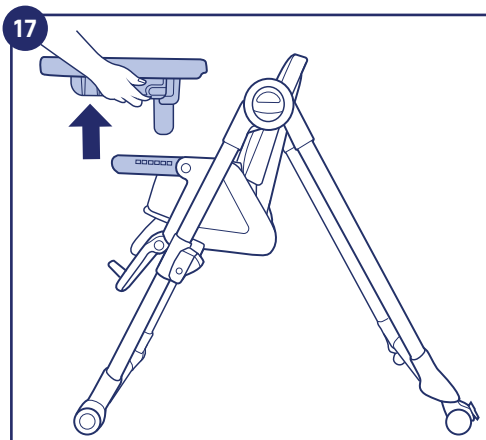

- 18** Recline the backrest by squeezing the recline handle on the back of the high chair and adjusting to the desired position.


The backrest can be adjusted to 4 different recline positions.

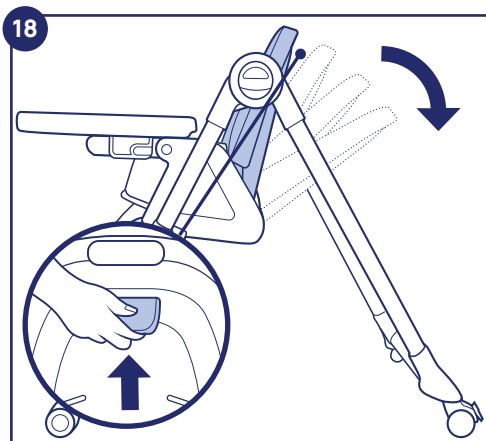


⚠ WARNING: Prevent serious injury or death from sliding out, falls, or tipping over. Always secure child in the restraint. Never leave child unattended. The tray is not designed to hold the child in the chair.

- 1** The shoulder straps can be adjusted to 2 height positions.

The infant insert can only be used with position 1.

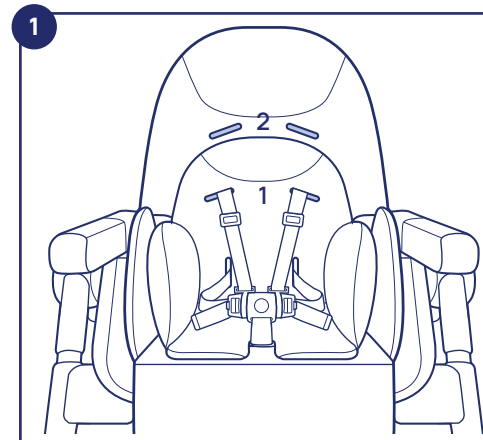


- 2** To adjust the shoulder straps, first release the safety harness. Press the button in the center of the crotch buckle and release both waist strap clips.

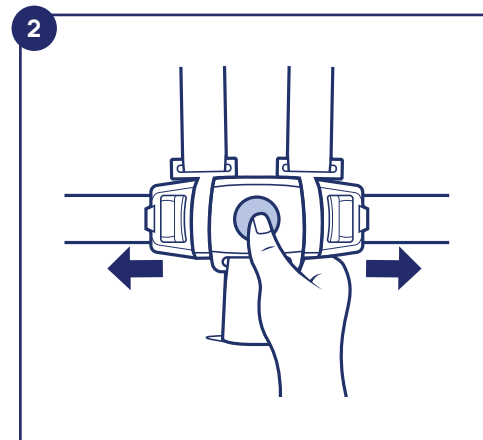


- 3** Pull up on the shoulder strap connector to unclip it from the waist strap clip.


The bottom of the shoulder strap connector is designed to break away from the waist strap clip when not secured in the crotch buckle.

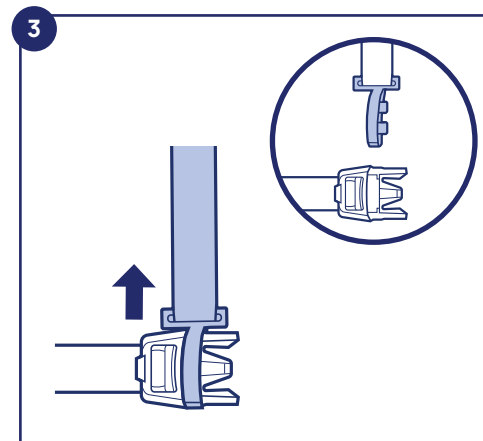

- 4 Remove the infant insert.

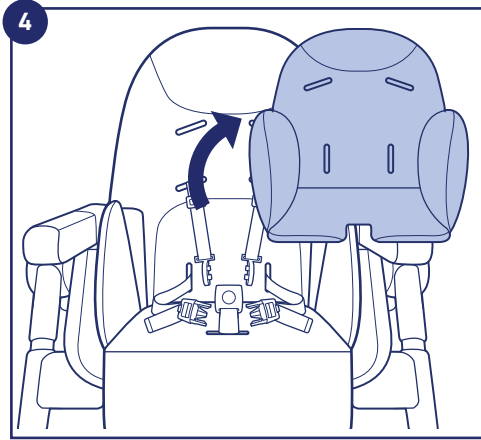


- 5 To adjust the shoulder straps, flatten the ribbon tab on the shoulder strap at the back of the high chair and push it through the slot.

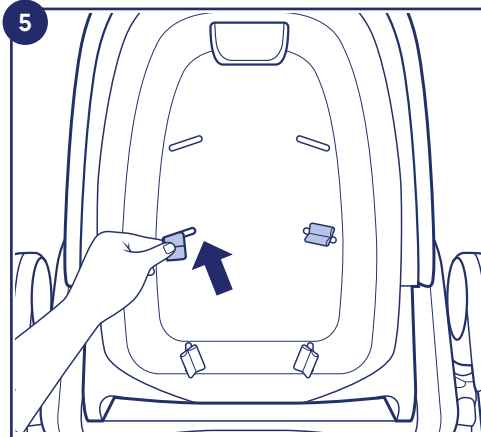


- 6 Thread the shoulder straps back through the desired button holes in the seat pad and through the slots on the back of the high chair.

Always use the same button hole height for both shoulder straps. Ensure the ribbon tab is laying flat against the back of the seat.

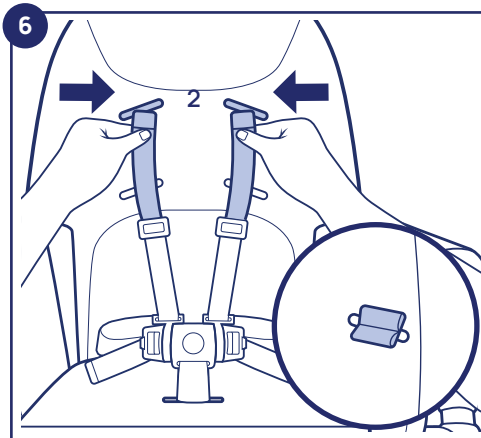


⚠ WARNING: Never leave child unattended. Avoid serious injury from falling or sliding out. Always use the safety harness.

- 1 Lay the shoulder strap connector in the correct position.

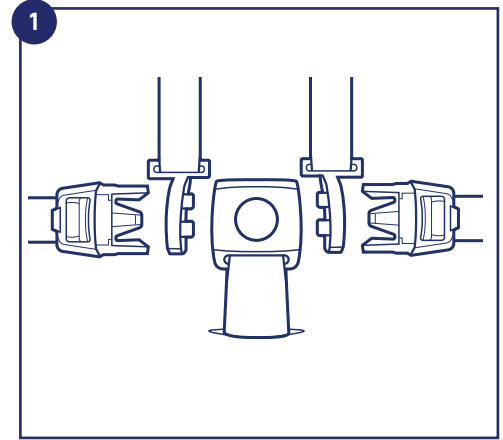


- 2 Slide the shoulder strap connector onto the waist clip.

Repeat for the other side.

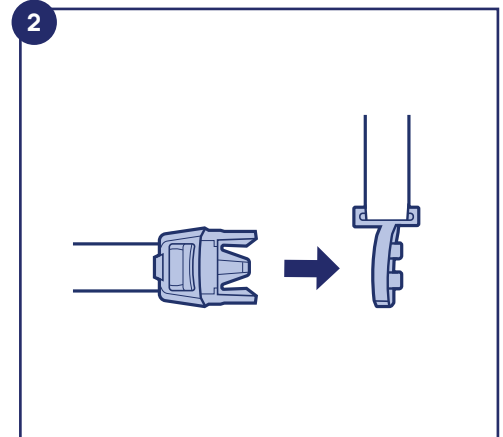


- 3 Slide the waist clip into the crotch strap buckle and listen for a click.


Repeat for the other side.

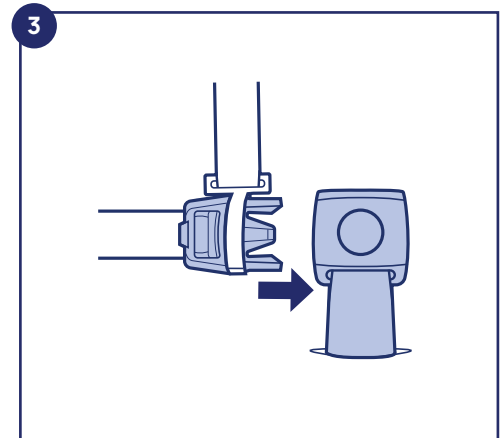


- 4 Pull both sides to make sure both clips are secured to the crotch buckle.

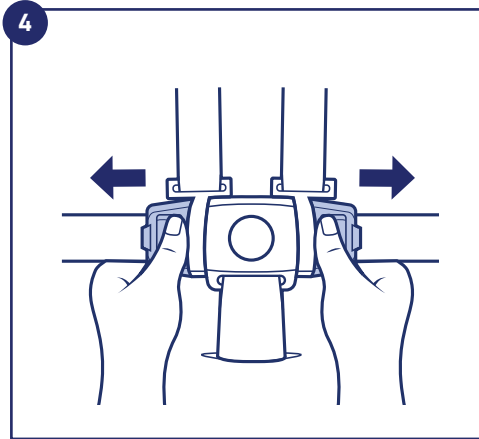

- 5 The length of the shoulder straps can be adjusted by pulling the adjustment buckles to tighten or loosen.

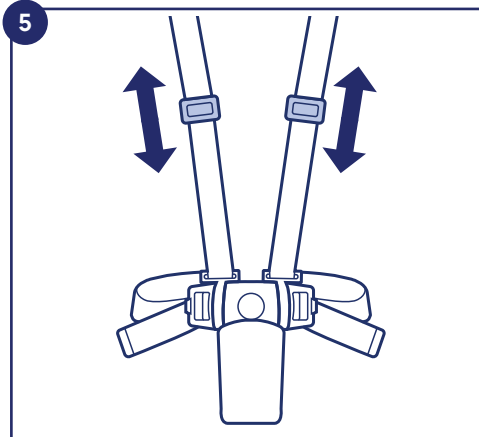


- 6 The length of the waist straps can be adjusted. Press the tab at the end of the waist clips and pull the strap to tighten or loosen to better fit your child.

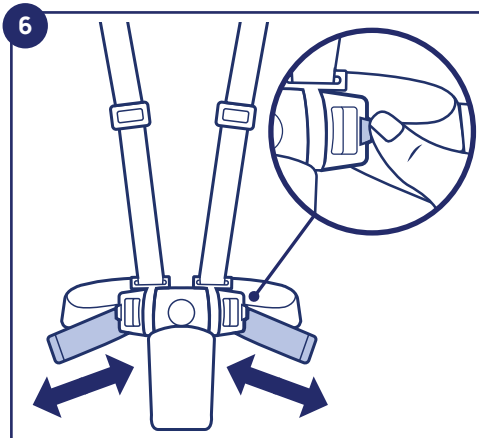


- 1 Remove the tray. When not in use, the tray can be stored on the rear legs of the frame by sliding the tray down onto the rear leg slots.

The tray will hook into the plastic tabs on the inside of the rear legs.

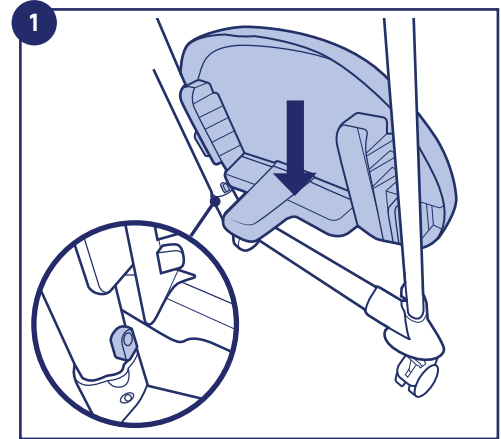


- 2 From the front of the high chair, pull on both release levers on either side while pushing the front leg in with your foot.

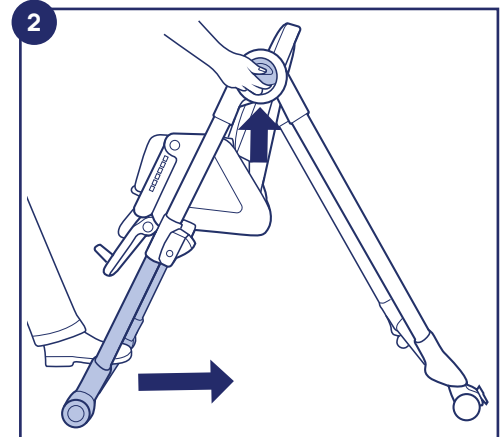


- 3 The high chair will click when locked into the closed position and will stand on its own.

For added stability, the rear wheels can be locked.

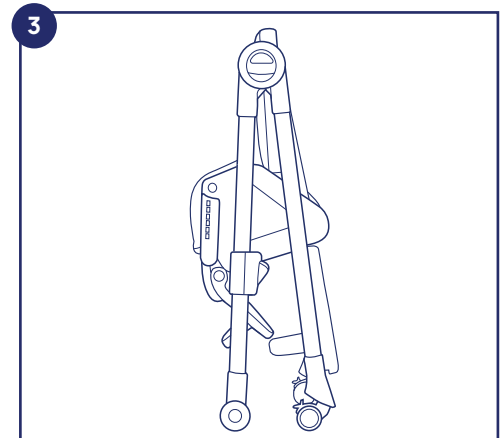

⚠ WARNING: Always place the high chair on a horizontal, stable surface. Never place the high chair near stairs or steps. Do not move the high chair with a child in it.


- 1 Move the high chair by using the swivel wheels.

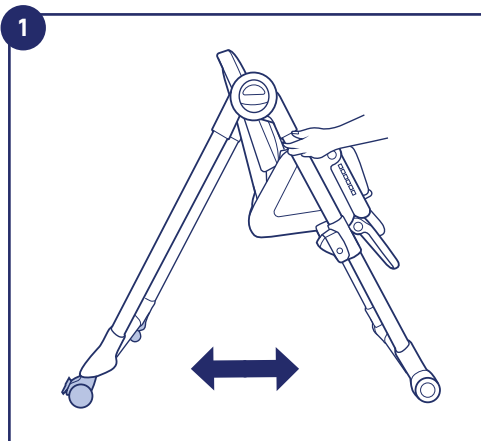


⚠ WARNING: Always lock the wheels when the child is sitting in the high chair or when the high chair is open but not in use.

- 2 Lock the rear swivel wheels by pushing down on the locking lever until it clicks into place.

Always lock both of the wheels.

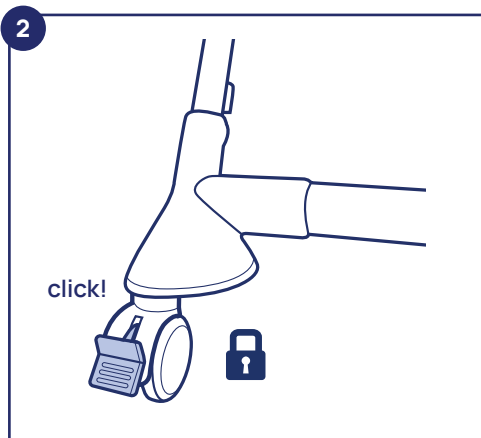

- 3 Unlock the rear swivel wheels by pushing up on the locking levers.

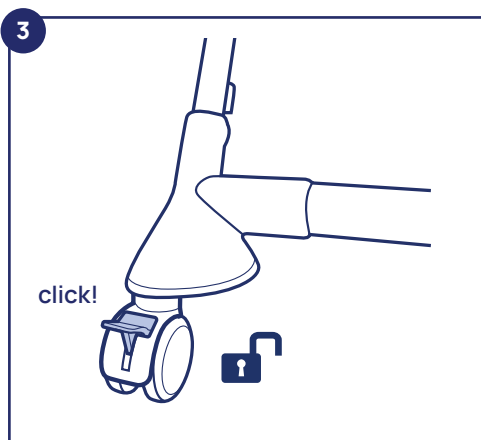

This product performs best with regular maintenance. The cleaning and maintenance of the high chair must only be carried out by an adult.

CLEANING

Spot clean fabrics using warm water and mild detergent; air dry. The infant insert may be machine washed separately in cold water on delicate cycle using mild detergent. Do not use bleach; hang dry. Do not machine wash seat cover.

Shoulder and waist straps may be machine washed separately in cold water on delicate cycle using mild detergent. Do not use bleach; hang dry. Do not machine wash the crotch strap.

Periodically wipe plastic parts clean with a soft damp cloth. The tray liner can be washed in the dishwasher, top rack only. The main tray part can be wiped clean using a soft damp cloth. Do not bleach, and do not submerge in water.

MAINTENANCE

Lubricate the moving parts only if necessary with a light application of a silicone-based lubricant.



Live it. *Love it.*

If you have any problems with your Chicco product,
or any questions regarding use, please do not return this
product to the store. Contact us in one of the following ways:

Call Chicco Customer Service:

1-877-424-4226

Visit our website:

ChiccoUSA.com

Email us:

info.usa@artsana.com

[**Kee-Ko**] If you say it right it makes you *smile*

