




# URBINO™

Compact Stroller

## *Owner's Manual*

Read all instructions BEFORE  
assembly and USE of product.






KEEP INSTRUCTIONS FOR  
FUTURE USE.

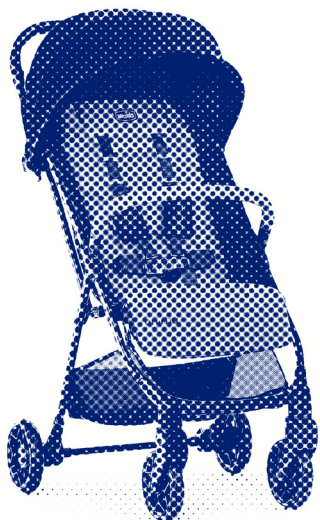

**⚠ WARNING**  
**DEATH or SERIOUS INJURY CAN OCCUR**

**FAILURE TO FOLLOW THESE INSTRUCTIONS AND THE PRODUCT LABELS CAN RESULT IN SERIOUS INJURY OR DEATH TO YOUR CHILD.**


- PLEASE SAVE OWNER'S MANUAL FOR FUTURE USE.
- ADULT ASSEMBLY REQUIRED.
- NEVER LEAVE CHILD UNATTENDED. Always keep child in view while in the stroller.
- AVOID SERIOUS INJURY from falling or sliding out. Always use safety harness. After fastening buckles, adjust belts to ensure a snug fit around your child.
- AVOID FINGER ENTRAPMENT: Use care when folding and unfolding the stroller. Be certain the stroller is fully opened and latched before allowing your child near the stroller.
- USE OF THE STROLLER with a child weighing more than 50 lbs (22.7 kg), will cause excessive wear and stress on the stroller. Use the stroller with only one child at a time.
- STROLLER TO BE USED only at walking speed. Product not intended for use while jogging, skating, etc.
- TO PREVENT A HAZARDOUS, UNSTABLE CONDITION, never place purses, shopping bags, parcels or accessory items on the canopy or handle. Do not place more than 10 lbs (4.5 kg) in the storage basket.
- DO NOT use storage basket as a child carrier.
- AVOID BURNS. Never put hot liquids in cup holder. Do not place more than 1 lb (0.5 kg) in cup holder.
- NEVER ALLOW YOUR STROLLER to be used as a toy.
- DISCONTINUE USING YOUR STROLLER should it become damaged or broken.
- AVOID STRANGULATION. DO NOT place items with a string around your child's neck, suspend strings from this product, or attach strings to toys.
- NEVER USE STROLLER ON STAIRS or escalators. You may suddenly lose control of the product and your child may fall out. Also, use extra care when going up or down a step or curb.
- DO NOT attempt to attach any infant car seat to the stroller. Injury or death may result when attempting to use this stroller in conjunction with an infant car seat.
- Before use, remove and dispose of all plastic bags and packaging materials and keep them out of reach of children.
- Before assembly, check that the product and all of its components have not been damaged during transportation.
- Do not use accessories, spare parts, or any component not supplied or approved by Chicco as they may make the stroller unsafe.

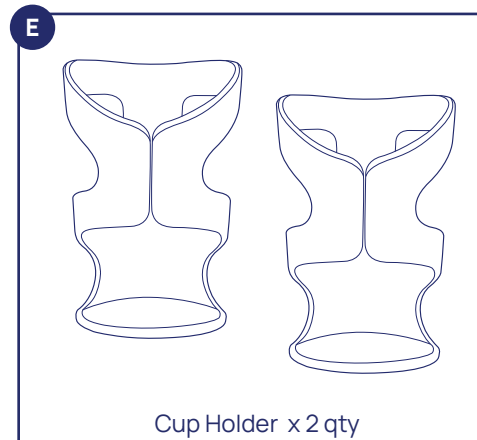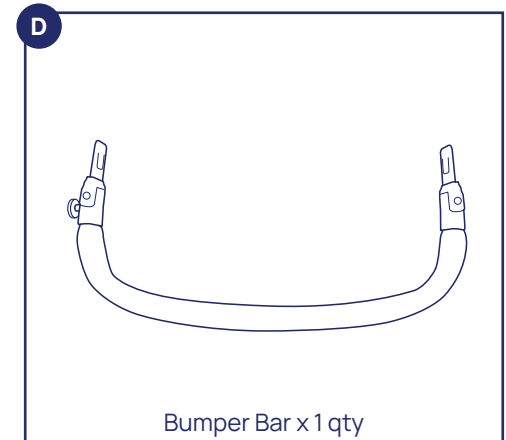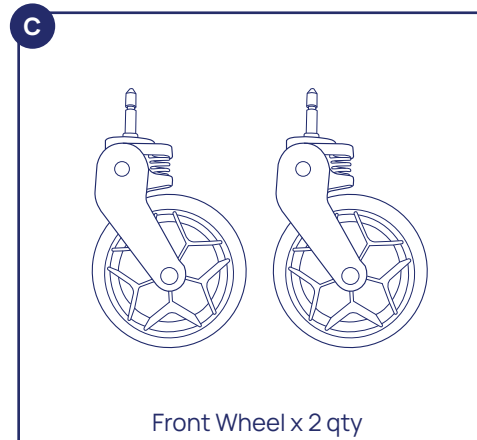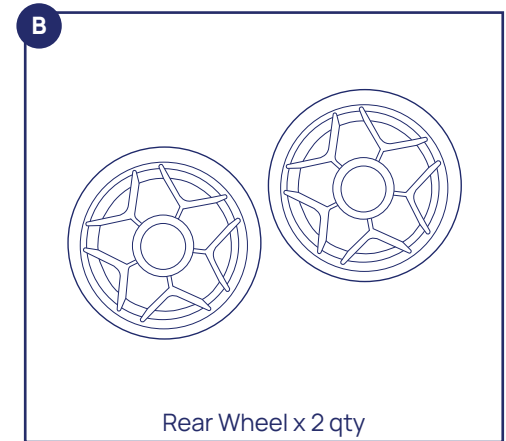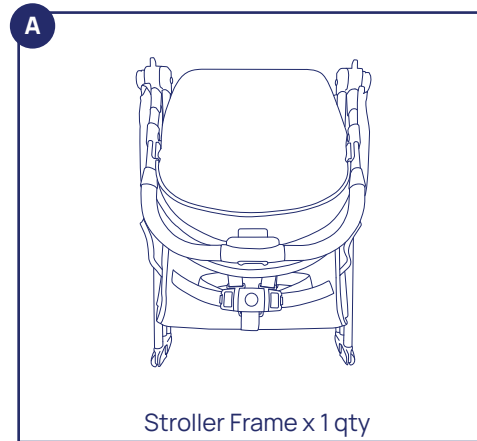

**⚠ WARNING:** When opening the stroller, ensure that the child, or other children, are at a safe distance. Ensure that during these operations, the movable parts of the stroller do not come into contact with the child.


To protect your floor during setup, we recommend working on a protected or carpeted area.

- 1** To assemble the stroller, lay the **stroller frame (A)** on the floor with the parent handle facing up.

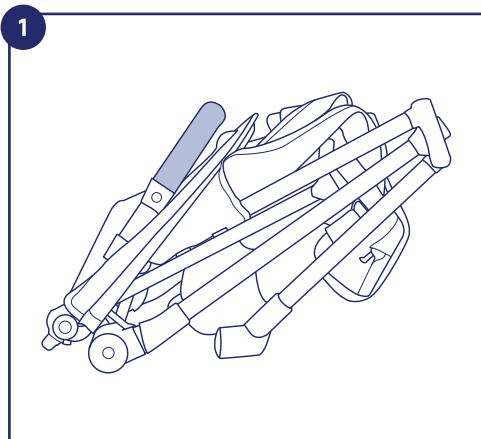


- 2A** Lift the parent handle and the **stroller frame** will unfold to the open position.


Continue to lift the stroller handle up until the frame latch clicks into the open position.

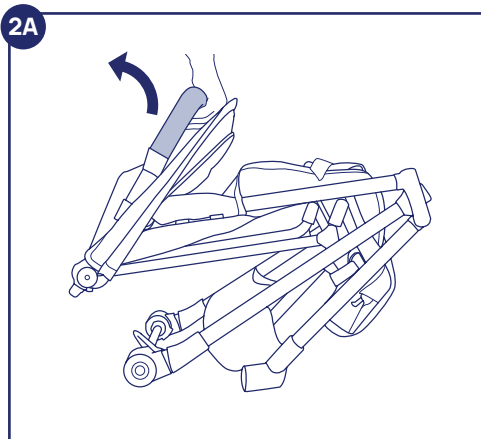


- 2B** Check to make sure that the **stroller frame** is locked into the open position by pushing down on the parent handle.

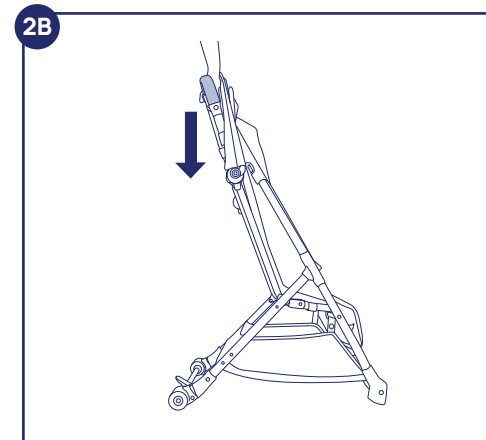

**IMPORTANT!** When installing the rear wheels, note the flat side of the wheel axles and matching flat side of the wheel hubs.

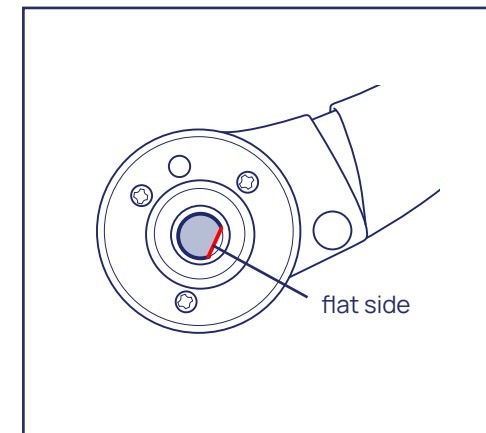


- 3A** To attach the **rear wheels (B)**, line up the flat side of the wheel axle to the flat side of the wheel hub and insert the **rear wheel** until it clicks.

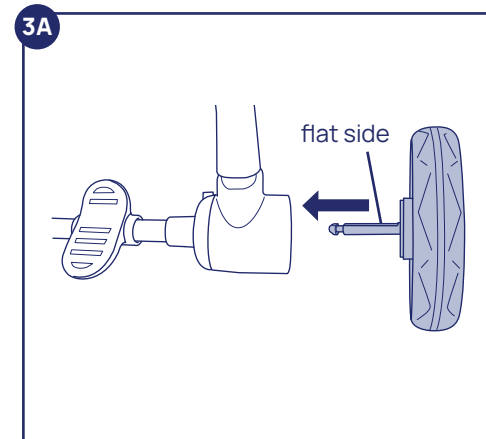


## SETTING UP THE STROLLER

- 3B** Make sure the wheel is securely attached by pulling the wheel in the opposite direction of attachment.

Repeat steps 3A and 3B for the other side.

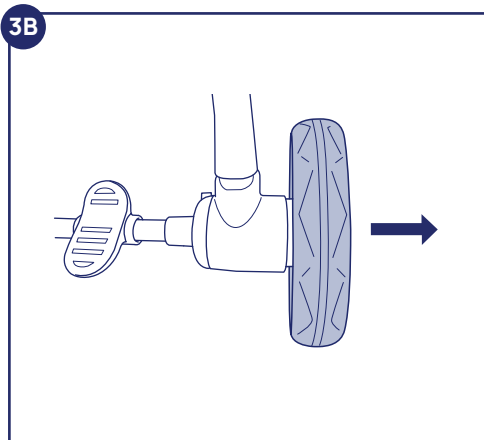


- 4A** To attach the **front wheels (C)**, line up the front wheel post to the socket and insert the **front wheel** until it clicks.

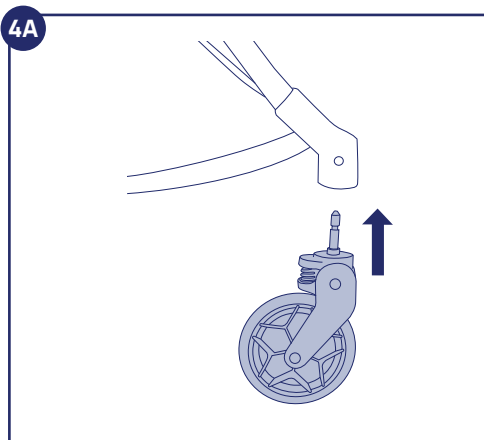


- 4B** Make sure the wheel is securely attached by pulling the wheel in the opposite direction of attachment.

Repeat steps 4A and 4B for the other side.

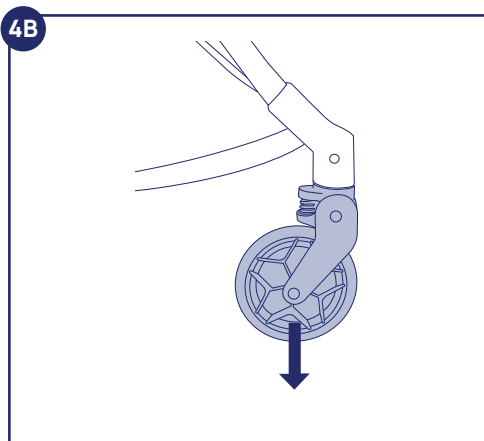


## SETTING UP THE STROLLER


- 5A** To attach the **bumper bar (D)**, line up the bumper bar clips to the sockets on the **stroller frame**. Insert the bumper bar clips into the sockets until they click.

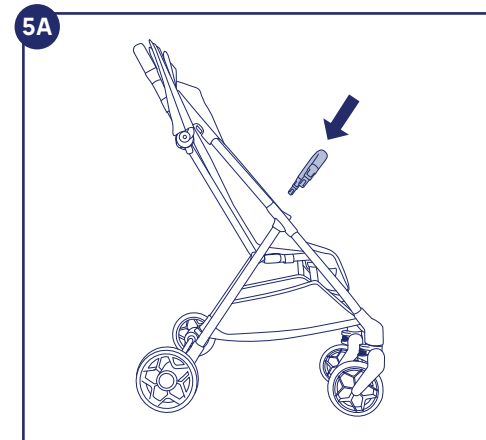

- 5B** Make sure the **bumper bar** is securely attached by pulling the **bumper bar** in the opposite direction of attachment.

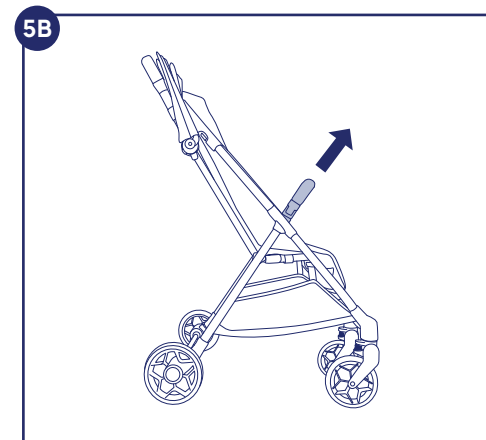


- 5C** To swing the **bumper bar** open, press one of the release buttons from the inside of the **stroller frame** and pull the clip out. Swing the **bumper bar** open.

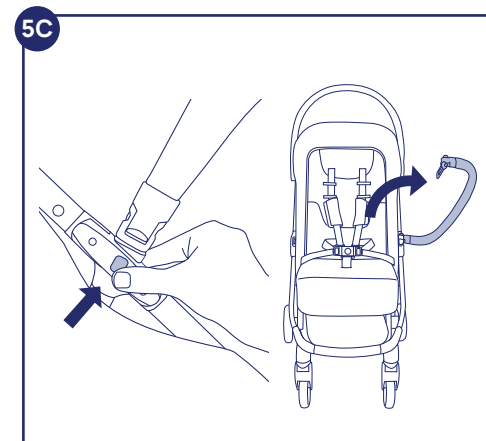

## SETTING UP THE STROLLER

**5D** To remove the **bumper bar**, press the other release button from the inside of the **stroller frame** and pull the clip out.

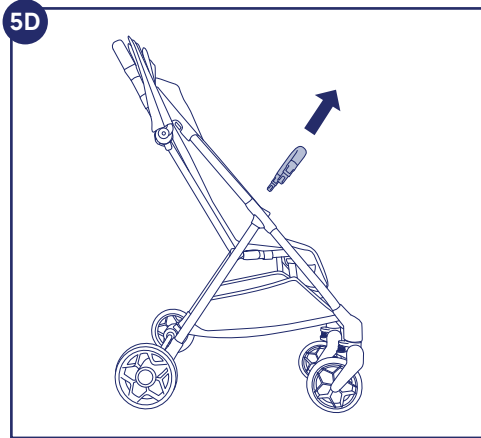


**6A** To attach a **cup holder (E)**, locate the cup holder attachment posts on the stroller.

The parent location is on the right side of the push handle.


The child location is on the outside of the **bumper bar**.

The cup holders are interchangeable between the parent and child locations.

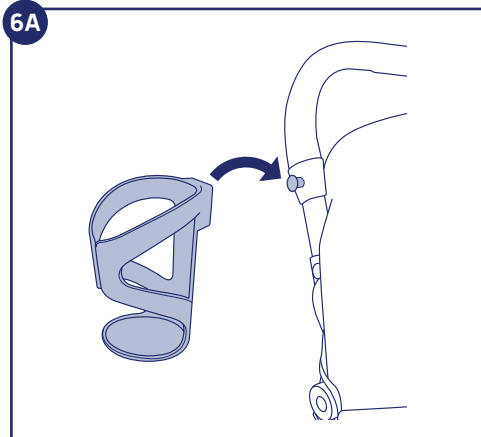


**6B** Slide the notched cutout on the **cup holder** onto the attachment post.

Press down on the top of the **cup holder** until it clicks.

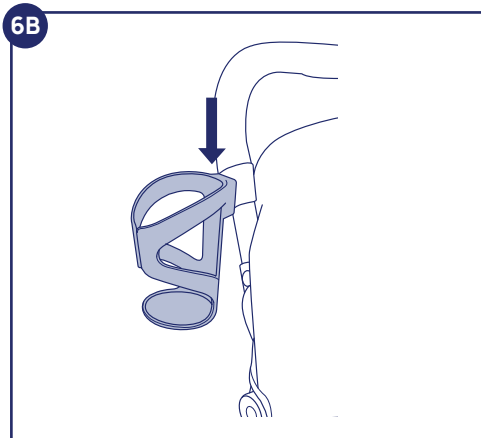


**6C** Make sure the **cup holder** is securely attached by lifting the **cup holder** in the opposite direction of attachment.

To remove the **cup holder**, press firmly from the bottom of the **cup holder** until it releases from the post.

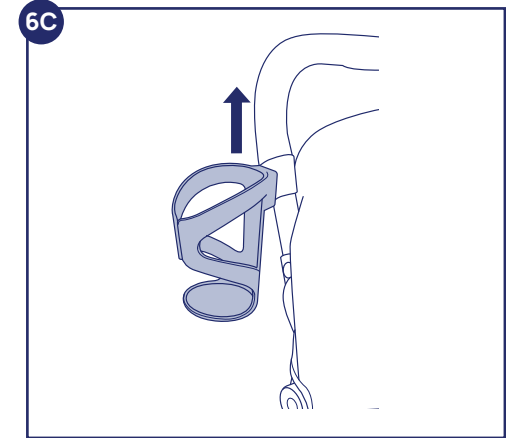


**1** To extend the canopy, pull the front edge of the canopy forward.

Close the canopy by pulling the front edge back.

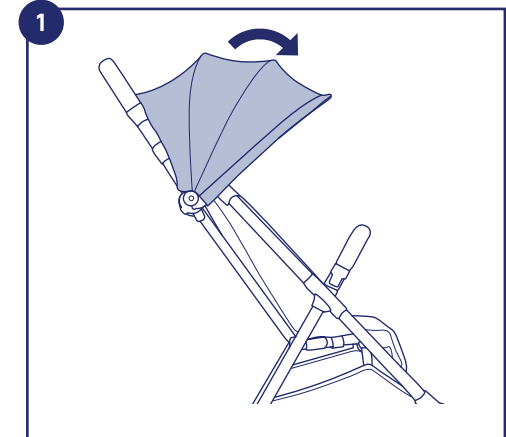


**2A** To adjust the backrest to an upright position, pull up on the recline strap on the back of the seat.

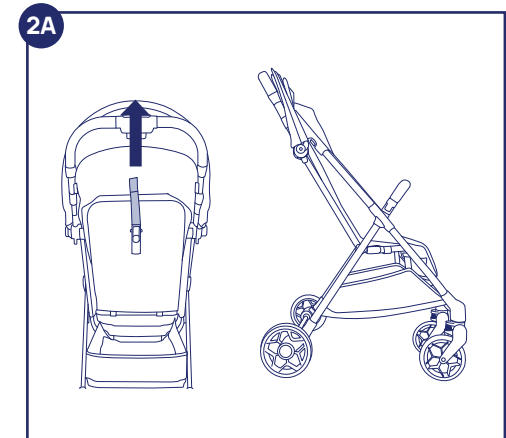


## SETTING UP THE STROLLER


- 2B** To adjust the backrest to a lower position, press the release button on the back of the seat and pull the backrest down.

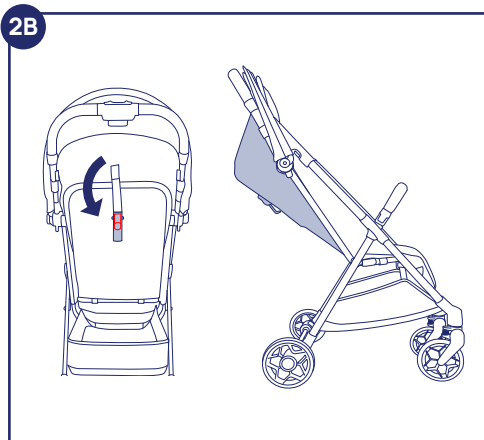

- 3A** To extend the leg rest, grasp both sides of the leg rest and rotate it above the height of the seat to engage the latches. Release the leg rest to latch it into the fully extended position.

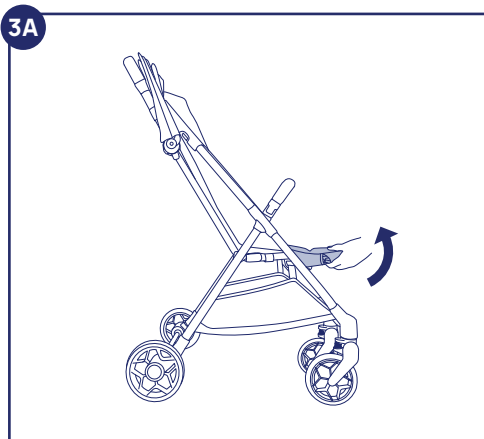


- 3B** To fold the leg rest down, grasp both sides of the leg rest and rotate it above the height of the seat while pressing both levers. The latches will release and the leg rest can be rotated to the lower position.

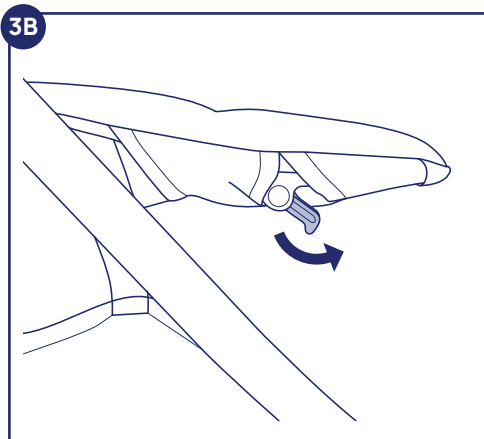


## USING THE BRAKES

**⚠ WARNING:** Always apply brakes whenever the stroller is stationary. Never leave the stroller on a sloped surface with a child on board, even with the brakes applied.


- 1** To LOCK the brakes, step on the bottom of the brake lever and rotate the lever back until it stops.

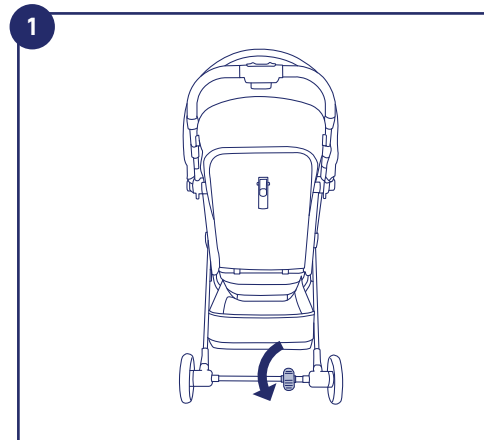

- 2** Check that the brake is engaged by trying to push the stroller. If the brakes are not locked, repeat step 1.

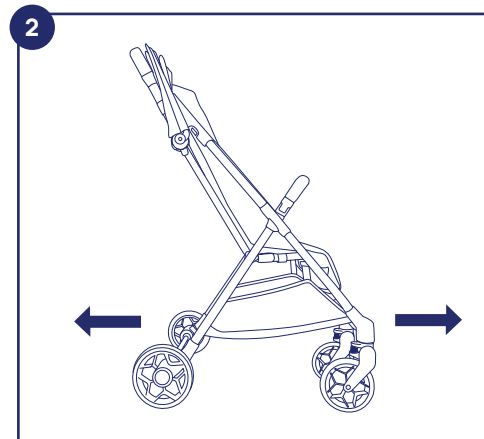


- 3** To UNLOCK the brakes, step on the top of the brake lever and rotate the lever forward until it stops.

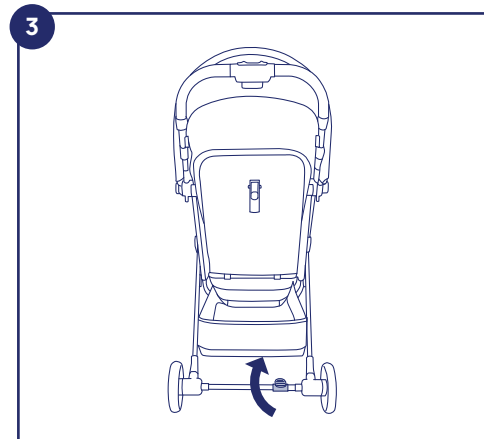


**⚠ WARNING:** This stroller features three harness positions. Always use a harness position located ABOVE the child's shoulder line. If multiple harness positions are above the child's shoulder line, use the one closest to it.


**1A** The shoulder straps can be adjusted to 3 height positions based on the size of your child.

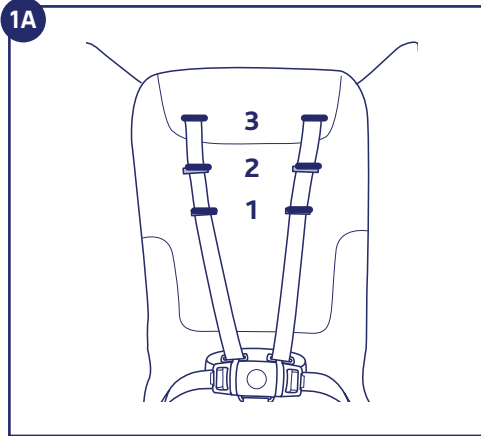

**1B** To determine the correct position, place your child in the seat with their back flat against the backrest. Note the closest harness strap position that is visible ABOVE their shoulders.

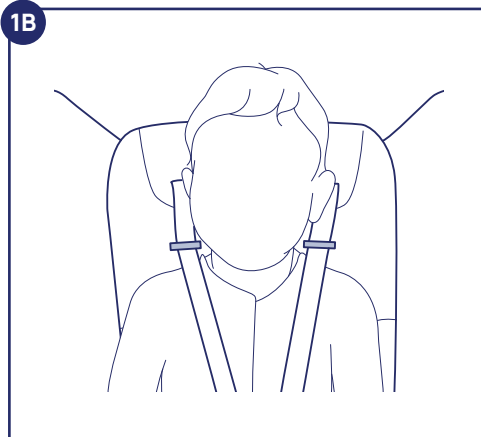


**2** To adjust the shoulder straps, first release the safety harness. Press the button in the center of the crotch buckle and release both waist strap clips.

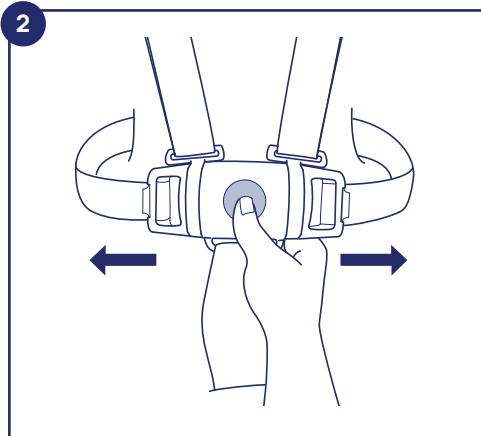


**3** Pull up on the shoulder strap connector to unclip it from the waist strap clip.

The bottom of the shoulder strap connector is designed to break away from the waist strap clip when not secured in the crotch buckle.

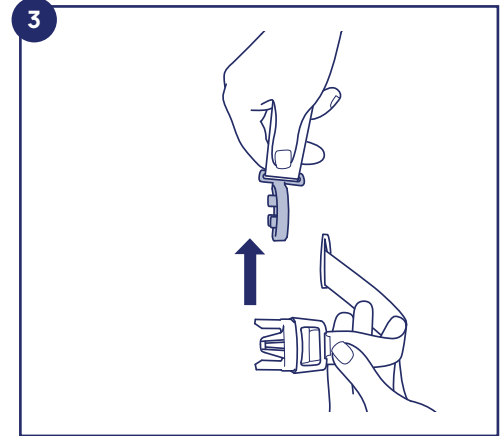


**4A** Adjust the height of the shoulder straps to be at or ABOVE the child's shoulders.

Both straps must be adjusted to the same height position.

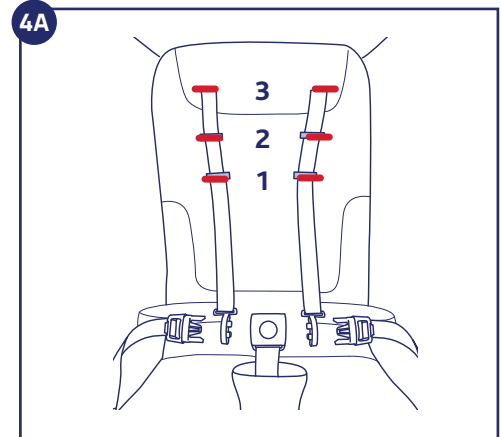

**4B** Remove the shoulder pad (1) and slide the shoulder strap under the loops (2) to the correct height for your child. Slide the shoulder pad back onto the strap.


Repeat this step for the other side.

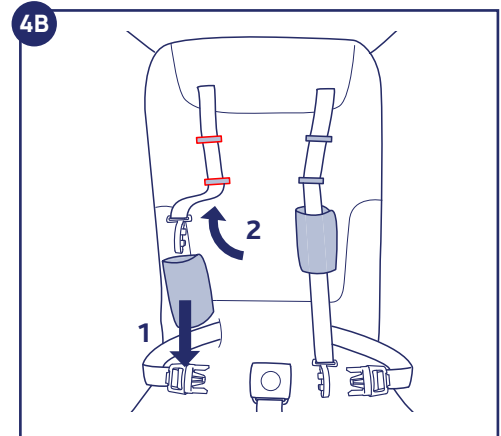


**⚠ WARNING:** Never leave child unattended. Avoid serious injury from falling or sliding out. Always use safety harness.

After fastening buckles, adjust belts to get a snug fit around your child.


5 Lay out the shoulder strap connector in the correct position.

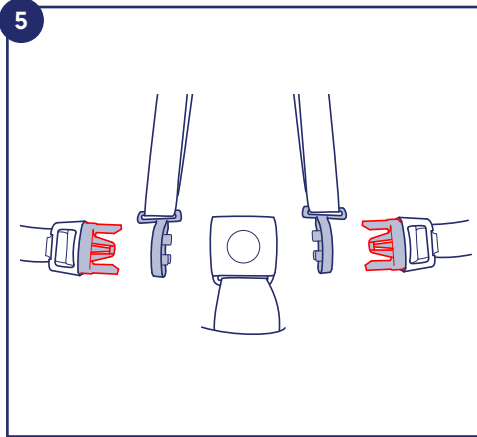


6 Slide the shoulder strap connector onto the waist strap clip.

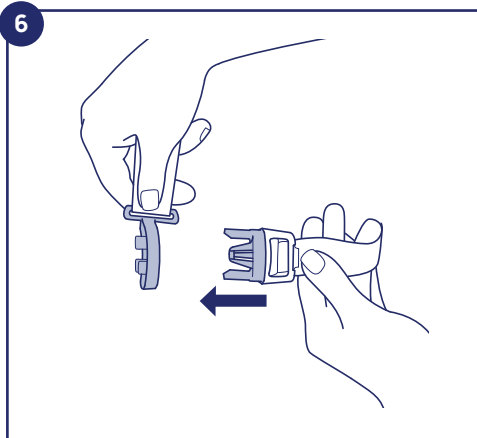


7A Connect the waist clip into the crotch strap buckle and repeat for the other side.

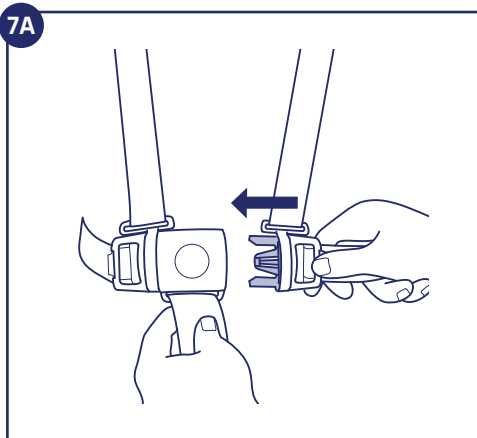


7B Pull on both sides to make sure both clips are secured to the crotch buckle.

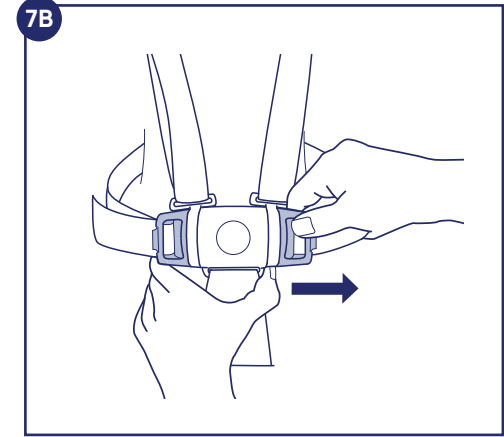

8 The length of the shoulder straps can be adjusted by sliding the adjustment buckles higher to tighten or lower to loosen.

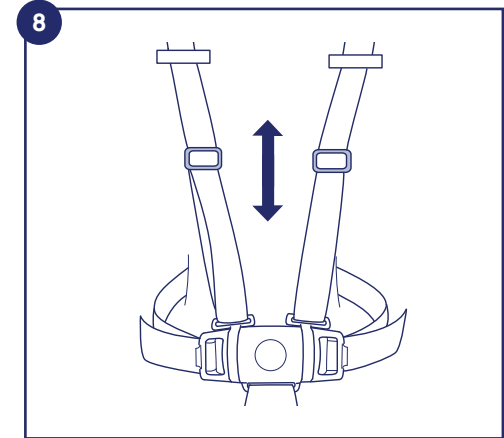

9 The length of the waist belt straps can be adjusted by pushing in on the button on the side of the waist belt clip and tightening or loosening the waist belt strap.

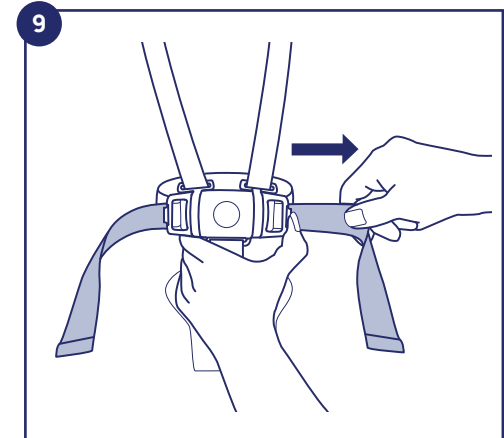


## FOLDING THE STROLLER

**⚠ WARNING:** When folding the stroller, make sure that your child and other children are at a safe distance. Ensure that during the operations, the movable parts of the stroller do not come in contact with your child. Always apply the brakes whenever the stroller is stationary.


- 1 To fold the stroller, apply the parking brake.

With one hand, use your thumb to slide and hold the fold release button while using your fingers to squeeze the stroller fold button into the handle.

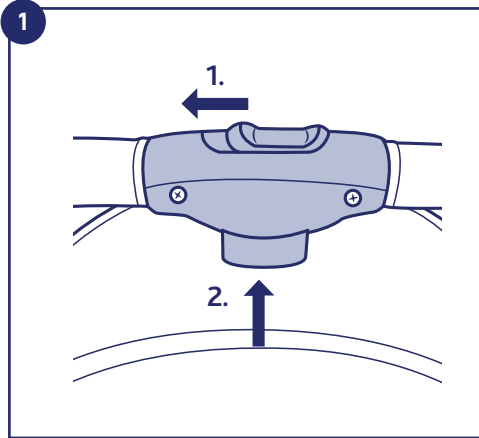


- 2 Push down on the parent handle to start folding the stroller.

The **stroller frame** will fold toward the rear wheels.

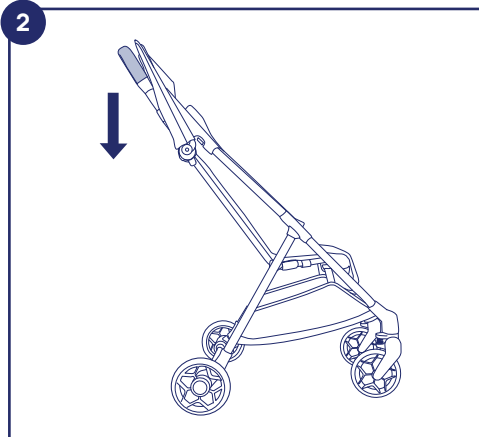


- 3 Following the fold direction of the stroller, push the handle forward into the **stroller frame**.

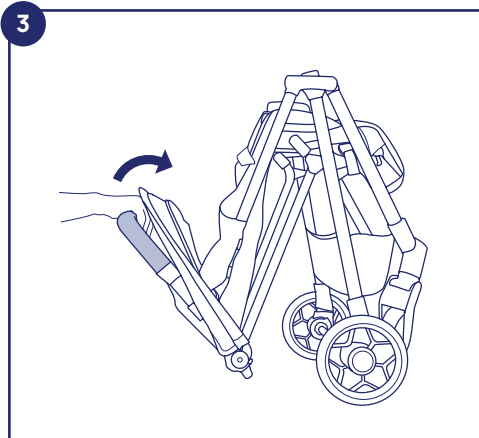

## OPENING THE STROLLER


- 4 The folded stroller will stand on the **rear wheels** and the plastic feet under the frame joint.

The folded stroller can be lifted and carried by the **bumper bar**.

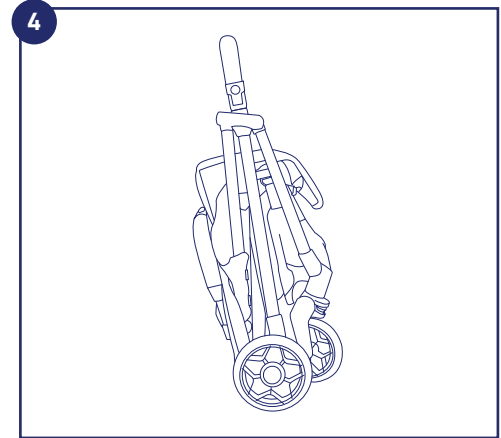


- 1 To open the stroller, start with the stroller in a standing position on the ground.

Pull back on the push handle to release the compact fold.

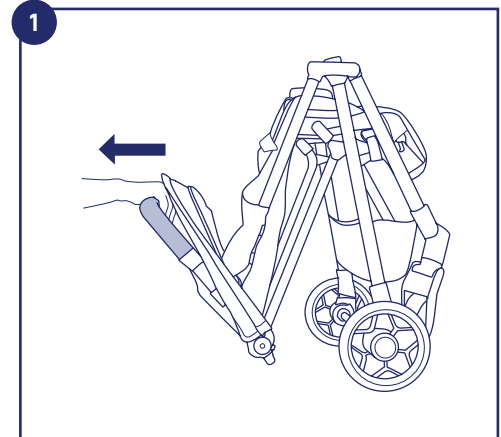


- 2 Continue to lift the stroller handle up until the rear wheels just lift off the ground and the frame latch clicks into the open position.

Check to make sure that the **stroller frame** is locked into the open position by pushing down on the parent handle. If the frame is not locked open, repeat step 2.

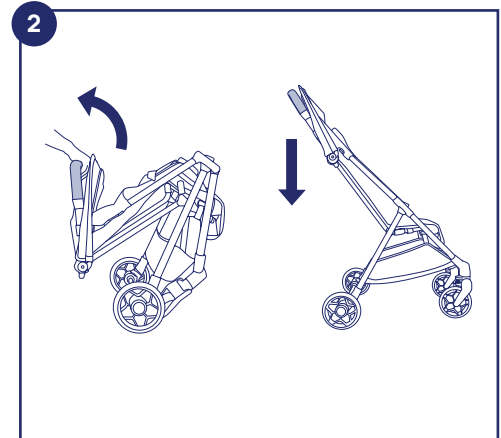


- 1 To remove the **rear wheels**, press the release button on the inside of the rear wheel housing and pull the wheel outward and away from the **stroller frame**.

Repeat for the other side.

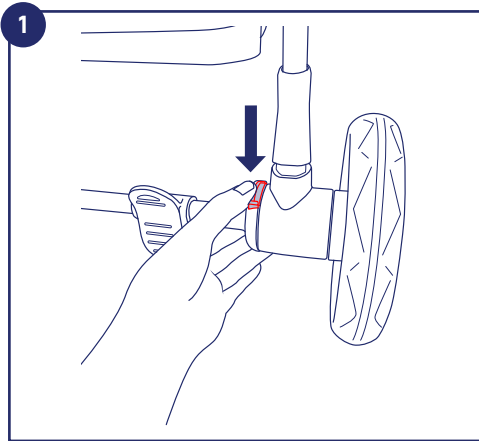

- 2 To remove the **front wheels**, press the release button on the outside of the front wheel housing and pull the wheel down and away from the **stroller frame**.

Repeat for the other side.

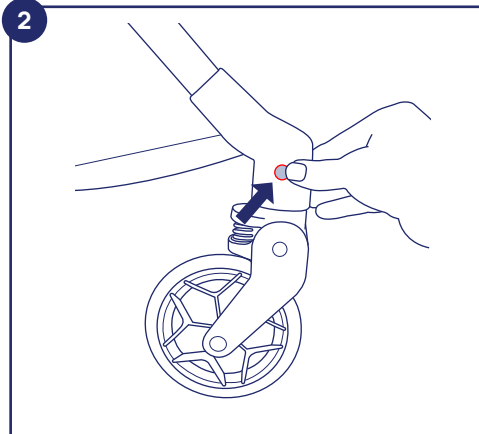

This product performs best with regular maintenance. The cleaning and maintenance of the stroller must only be carried out by an adult.

### CLEANING

Spot clean fabrics using warm water and mild detergent; air dry. The shoulder pads may be machine washed separately in cold water on delicate cycle using mild detergent. Do not machine wash harness.

Periodically wipe clean plastic parts with a soft damp cloth. Always dry the metal parts to prevent the formation of rust if the stroller has come into contact with water.

### MAINTENANCE

Lubricate the moving parts only if necessary, with a light application of a silicone based lubricant.

Periodically check the condition of the wheels, and keep them clean of dust and sand. To avoid friction that may prevent the correct operation of the stroller, ensure that all the movable plastic parts placed along the metal frame are clean of dust, dirt, or sand.

Keep the stroller in a dry place. Prolonged exposure to direct sunlight may cause the fabric to fade.



Live it. *Love it.*

If you have any problems with your Chicco stroller, or any questions regarding use, please do not return this product to the store. Contact us in one of the following ways:

Call Chicco Customer Service:

**1-877-424-4226**

Visit our website:

**ChiccoUSA.com**

Email us:

**info.usa@artsana.com**

[ **Kee-Ko** ] If you say it right it makes you *smile*

