

KidFit* Booster Car Seat

User Guide

For future use, STORE USER GUIDE in location on bottom of base.





If you have any problems with your Chicco Booster Seat, or any questions regarding installation or use, please call:

Chicco Customer Service 1-877-424-4226

Please have Model and Serial Number available when you call. These are located on a label on the bottom of the Booster Seat.

For future reference, fill in the information below. The information can be found on the label on the bottom of the Child Restraint.

1odel Number: _	
erial Number:	
lanufactured In:	

TABLE OF CONTENTS

Registration and Recall 2		HIGH-BACK BOOSTER MODE		
Child Guidelines Safe Use Checklist Important Warnings Best Practices Need Help?	4 6 8 12 13	Adjusting Backrest Height Install High-Back Booster Securing Child in Booster BACKLESS BOOSTER MODE	32 34 38	
BOOSTER SEAT OVERVIEW		Removing Backrest Using Shoulder Belt Clip	46 50	
Booster Seat Components Booster High-Back Booster Backless	14 16 18	Install Backless Booster Securing Child in Booster Adjusting Shoulder Belt Clip Height	52 56 60	
VEHICLE INFORMATION		SAFETY INFORMATION		
Vehicle Seating Positions Vehicle Seat Belts What is LATCH?	20 22 24	Secure Child Checklist Booster Seat Safe Use Checklist	62 64	
ASSEMBLY INFORMATION	24	ADDITIONAL INFORMATION Installation on an Aircraft	66	
Assembly	26	Cup Holder Removing Fabric Covers Cleaning and Maintenance	68 70 88	

REGISTRATION AND RECALL

Please complete the Registration Card that came with your Booster Seat and mail it promptly.

Child Restraints could be recalled for safety reasons. You must register this restraint to be reached in a recall. Send your name, address, e-mail address if available, and the restraint's model number and manufacturing date to:

Artsana USA, Inc. 1826 William Penn Way Lancaster, PA 17601

or call 1-877-424-4226

or register online at http://www.chiccousa.com/carseatregistration

For recall information, call the U.S. Government's Vehicle Safety Hotline at 1-888-327-4236 (TTY: 1-800-424-9153), or go to http://www.NHTSA.gov.

REGISTRATION AND RECALL

PAGE INTENTIONALLY LEFT BLANK

CHILD GUIDELINES

This Booster Seat is designed for children, and who demonstrate an ability to sit in a seat belt.

- Child can sit relatively still, in the same seated position throughout the car ride.
- Child can leave the shoulder and lap belt properly positioned on their body, and can do this every time in the car.

ONLY use this Booster Seat if the child meets the following Weight and Height requirements:


- Weight is between 30 and 110 pounds (14 and 50 kg).
- Height is between 38-57 inches (97-145 cm).

A YOUR CHILD'S SAFETY DEPENDS ON YOU! You MUST follow the detailed instructions in this User Guide to ensure the steps in this User Guide are performed correctly!

CHILD GUIDELINES



High-Back Booster Mode on page 16.

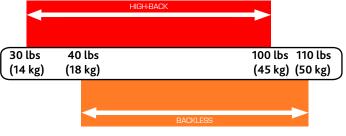

Backless Booster Mode on page 18.



SAFE USE CHECKLIST

Make sure your child can sit in the seat properly and meets the requirements listed in the "Child Guidelines" section on page
Choose the appropriate Booster Seat configuration:
HIGH-BACK BOOSTER MODE requirements on page 16 BACKLESS BOOSTER MODE requirements on page 18
Select a safe seating location in your car: Refer to the "Vehicle Seating Positions" section on page 20 and 21.
Secure your child: Refer to the "Safety Information" section on page 62.

SAFE USE CHECKLIST





AWARNING DEATH or SERIOUS INJURY CAN OCCUR

FAILURE TO FOLLOW THESE INSTRUCTIONS AND THE PRODUCT LABELS CAN RESULT IN SERIOUS INJURY OR DEATH TO YOUR CHILD.

Take Time to Read This User Guide

- Carefully read and understand all instructions and warnings in this User Guide. Your child's safety depends
 on you knowing how to setup, install and use this Booster Seat properly.
- Before installing this Booster Seat in a vehicle, be sure to also check the vehicle owner's manual for information on proper installation.
- NEVER allow others to use this Booster Seat until they have read and understood all instructions in this
 User Guide.
- This Booster Seat is not intended for use outside of the vehicle.

Make Sure Child Fits This Booster Seat

 Use ONLY with children who weigh between 30 lbs (14 kg) and 110 lbs (50 kg) and whose height is 38-57 inches (97-145 cm). Determine the right installation setup for your child's age, weight and height, and ability to sit properly at all times.

AWARNING DEATH OF SERIOUS INJURY CAN OCCUR

Install Child Restraint Correctly

- DO NOT PLACE THIS BOOSTER SEAT IN A VEHICLE SEATING LOCATION WITH A FRONTAL AIR
 BAG, UNLESS THE AIR BAG CAN BE TURNED OFF. If the airbag inflates, it can cause serious injury or
 death to your child. For vehicles with side air bags, refer to you vehicle owners manual for information on
 your booster seat installation.
- ALWAYS install this Booster Seat in a back seat if possible.

According to accident statistics, children are safer when properly restrained in a rear seating position rather than in the front seat.

- NEVER install in rear facing, side facing or on the back of a folded down vehicle seat.
- **NEVER** use this Booster Seat with only a Vehicle Lap Belt.
- Use ONLY the vehicle's Lap-Shoulder Belt system when restraining a child in this Booster Seat.
- To avoid injury to others, ALWAYS secure this Child Restraint with the vehicle's Lap-Shoulder Belt when unoccupied.
- DO NOT use this Booster Seat beyond the "Do Not Use After" date. Check manufacturer's label on underside of Booster Seat.

AWARNING DEATH or SERIOUS INJURY CAN OCCUR

Secure Child Properly

- Position Lap-Shoulder Belt on your child. A loose or improperly positioned Lap-Shoulder Belt could cause the child to be ejected in a sudden stop or crash, resulting in serious injury or death.
- Make sure vehicle Lap-Shoulder Belt is not loose. The belt must be kept snug across child's thighs and
 resting on the shoulder and across the center of the chest.
- **NEVER** use clothing or blankets that interfere with fastening or tightening the Lap-Shoulder Belt. An unsecured child could be ejected in a sudden stop or crash!
- ALWAYS check to make sure the vehicle seat buckle is securely latched.
- NEVER leave your child unattended in the vehicle.
- Do not allow children to play in or around the Booster Seat.

AWARNING DEATH or SERIOUS INJURY CAN OCCUR

Check Condition of Restraint

- DO NOT use if the vehicle belts are cut, frayed or damaged.
- DO NOT use any accessories, pads or products not included with this Booster Seat, unless approved by Chicco USA. Doing so will void the warranty of this Booster Seat.
- You MUST replace this Booster Seat if it has been involved in a crash, even if you cannot see visible damage.
 A damaged Booster Seat may not protect your child in a future crash.
- Do not modify your Booster Seat.
- Do not use Booster Seat if any component is damaged, broken, or missing. Call 1-877-424-4226 to find out if the damaged part or parts can be replaced.

BEST PRACTICES

- Ensure all vehicle occupants are properly restrained before traveling. Unrestrained occupants can be thrown around and may be seriously injured or seriously injure other occupants in a sharp turn, sudden stop or crash.
- Do not leave loose objects, such as books, bags, etc., in the back of the vehicle.
 In the event of a sharp turn, sudden stop, or crash, loose objects can be thrown around and possibly cause serious injury to vehicle occupants.
- Cover the Booster Seat when the vehicle is parked in sunlight. Parts of a Booster Seat can become very hot if left in the sun. Contact with these parts can burn a child's skin. Always check the surface of any metal or plastic parts before putting your child in the Booster Seat.
- To avoid strangulation, Do not allow children to play with vehicle seat belts. If possible, move unused belts out of reach.
- Do not use anything to raise the Booster Seat off the vehicle seat. In a sharp turn, sudden stop, or crash, the Booster Seat could slide and potentially cause serious injury.
- Never use a second-hand Booster Seat with an unknown history.


NEED HELP?

Need Help Securing Your Booster Seat?


The following sources are available to help ensure your Booster Seat is properly installed:

- Contact Chicco, USA by visiting our website at www.chiccousa.com or calling our Customer Service 1-877-424-4226. Please have Model and Serial Number available when you call. These are located on a label on the bottom of the Booster Seat.
- Refer to your vehicle manual for Booster Seat installation tips.
- Contact a certified Child Passenger Safety Technician in your area by visiting safercar.gov and select "Find Local Child Seat Help" or call 1-866-SEAT CHECK (1-866-732-8243).

BOOSTER SEAT COMPONENTS

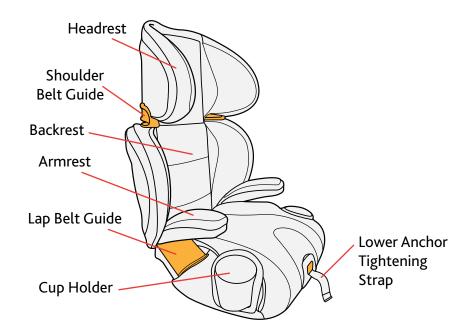

BOOSTER SEAT COMPONENTS

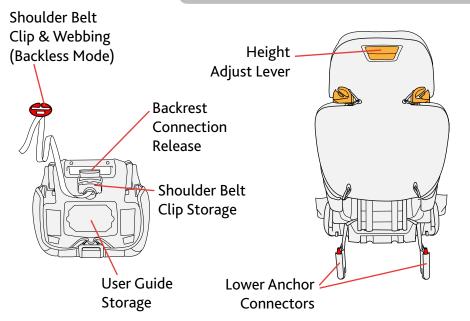

HIGH-BACK BOOSTER MODE

▲ WARNING! High-Back Mode use of this Booster Seat is ONLY for children who meet ALL of the requirements shown here. If the child is not within these requirements because they are too small, select a different child seat (such as a forward facing harness seat or convertible seat).

To ensure a correct installation of the Booster Seat, you must follow the step by step instructions in this user guide.

Chicco and the American Academy of Pediatrics recommend that children ride in a car seat with a 5-point harness for as long as possible. For the best protection, keep the child in a car seat with a 5-point harness up to the highest weight or height allowed by the manufacturer.

HIGH-BACK BOOSTER MODE

 
High-Back Booster Mode:

30 - 100 lbs (14 - 45 kg)

Use High-Back Mode with children:

- Who are at least four years old.
- Who weigh between 30 and 100 lbs (14 45 kg).
- •Who are 38"to 57" (97 -145 cm) tall
- Who demonstrate an ability to sit relatively still and properly in a seat belt at all times.

See Adjusting Shoulder Belt Guide Height on page 38.





BACKLESS BOOSTER MODE

▲ WARNING! Backless Mode use of this Booster Seat is ONLY for children who meet ALL of the requirements shown here. If the child is not within these requirements because the child is too small, review the HIGH-BACK BOOSTER MODE guidelines on page 16 or select a different child seat.

To ensure a correct installation of the Booster Seat, you must follow the step by step instructions in this user guide.

Chicco and the American Academy of Pediatrics recommend that children ride in a car seat with a 5-point harness for as long as possible. For the best protection, keep the child in a car seat with a 5-point harness up to the highest weight or height allowed by the manufacturer.

BACKLESS BOOSTER MODE

Backless Booster Mode:

40 - 110 lbs (18 - 50 kg)

Use Backless Mode with children:

- Who are at least four years old.
- Who weigh between 40 and 110 lbs (18 50 kg).
- Who are 38" 57" (97 -145 cm) tall, child's ears are below vehicle seat.
- Who demonstrate an ability to sit relatively still and properly in a seat belt at all times.

See Adjusting Shoulder Belt Clip Height on page 60.





VEHICLE SEATING POSITIONS



▲ WARNING! WHEN USING THIS CHILD RESTRAINT, DO NOT PLACE THIS BOOSTER SEAT IN A VEHICLE SEATING LOCATION WITH A FRONTAL AIR BAG, UNLESS THE AIR BAG CAN BE TURNED OFF.

The back seat is the safest place for children 12 and under. See your vehicle owner's manual for Booster Seat installation and instructions.

VEHICLE SEATING POSITIONS

Some vehicles have no seating positions which are compatible with this Booster Seat. Only forward-facing vehicle seats can be used with this Booster Seat. Never use side or rear facing seats. If in doubt, contact the vehicle manufacturer for assistance.



This Booster Seat must be installed in a vehicle seat with a 3-point seat belt (shoulder belt and lap belt). **NEVER** use lap belt only.



VEHICLE SEAT BELTS

Vehicle seat belts differ from vehicle to vehicle. Refer to your vehicle owner's manual for specific information about seat belts and their use with booster seats.

Shoulder belt with switchable retractor:

Refer to your vehicle owners manual for information regarding switchable retractors and booster seat use.


Inflatable seat belts:

Follow the vehicle manufacturer's instructions for use with this Booster Seat.

VEHICLE SEAT BELTS

The following types of vehicle belts MUST NOT be used to install this Booster Seat.

If any of the belt types listed below are in the chosen seating position, you must choose another vehicle seating position.

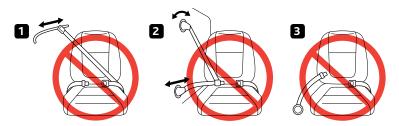

- 1. Never use a Lap belt with motorized Shoulder belt.
 - **3. Never** use a Lap-only belt.
- 2. Never use vehicle belts that are attached to the door or that move along a track.

WHAT IS LATCH?


▲ WARNING: This Booster Seat is designed to be used with lower LATCH anchors at the standard spacing (11 inches) ONLY! Refer to vehicle owner's manual for information about LATCH and Booster Seat installation positions.

 
LATCH = **L**ower **A**nchors and **T**ethers for **CH**ildren

On this Booster, Lower Anchors are only used to restrain the Booster Seat, not to restrain your child. To secure your child, a vehicle Lap-Shoulder Belt MUST be used.

Please refer to the vehicle owner's manual for designated Lower Anchor locations in vehicles. Some vehicles owner's manual use the term "ISOFIX". ISOFIX lower anchors may also be used to secure the Booster Seat.


If the vehicle is equipped with **LATCH**, the vehicle lower anchor points may be visible at the seat crease. If not visible, the seating position may be marked with a symbol as shown or a colored dot. The top tether anchor is not used with this Booster Seat.

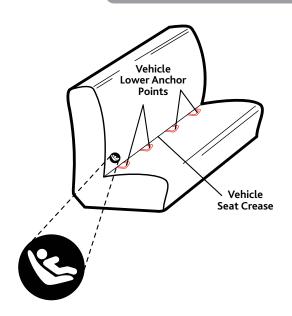



Match up the letter (L or R) on the bottom of the Cup Holder with the matching letter on the Booster Seat and insert the Cup Holder into the correct side.


Make sure the Cup Holder lip fits behind the groove on the Booster Seat bottom, as shown.

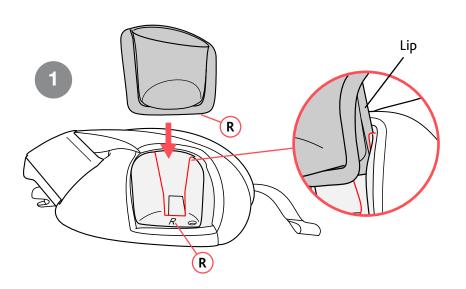


Assemble the Armrests


Attach both Armrests to the Booster Seat Bottom, as shown. Press firmly on Armrests until they click into place. Pull up on both Armrests to make sure they are securely attached.

▲ Never use Booster Seat without Armrests attached.

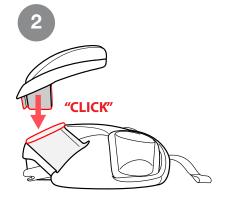

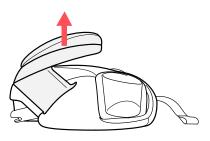

- Assemble the Backrest
- 3 Attach the Backrest to the Booster Seat Bottom, by hooking the Backrest over the seat bar hinge on the seat bottom, as shown.
- Slide the edge of the Fabric Panel between the Fabric Cover and the Seat Back Frame. Be sure Fabric Panel is laying flat against the Seat Back frame to provide padding for your child.
- 4b Rotate the Backrest up until it clicks into an upright position.

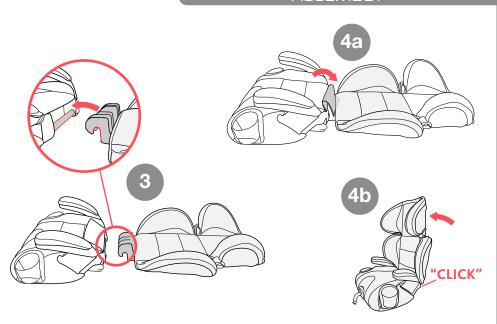


ADJUSTING BACKREST HEIGHT

- 1 While holding the Booster firmly with one hand on the seat, use the other hand to squeeze the Height Adjuster Lever located at the back of the Headrest.
- 2 Raise/Lower the Backrest to correctly fit the Booster to your child.

When correct position is reached, release the Height Adjust Lever and slightly raise or lower the Backrest until you hear a click, indicating that the Backrest is locked into position.

The Booster Backrest has 10 height positions to allow the Booster to grow with your child. Ensure that the child's head is positioned correctly within the Headrest and that the Shoulder Belt is placed correctly over the child's shoulder.

ADJUSTING BACKREST HEIGHT

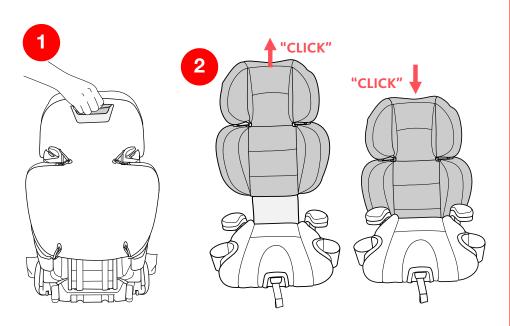


INSTALL HIGH-BACK BOOSTER

- 1 Place the Booster on the vehicle seat, push the Booster Backrest against the back of the vehicle seat.
- Check that the head restraint of the vehicle seat does not interfere with the Headrest of the Booster. If the vehicle head restraint pushes the Booster Headrest forward, raise or remove the vehicle head restraint, if possible. If it is not possible to move the vehicle head restraint out of the way, use the booster in the Backless mode. Ensure the child is the proper size to use the Backless Booster. Refer to page 46.

Always replace the vehicle head restraint when the Booster is removed.

INSTALL HIGH-BACK BOOSTER

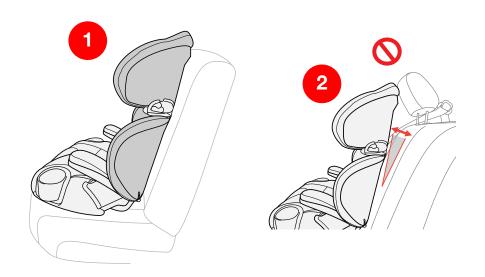


INSTALL HIGH-BACK BOOSTER

Use of Lower Anchors with this Booster Seat is optional. If the Lower Anchors are not used, pull the Lower Anchor Tightening Strap snug so that the Lower Anchor Connectors do not interfere with the seat belt.

- If using the Lower Anchors, release the Lower Anchor Tightening Strap, press in the button located on the front of the seat bottom and pull out both Lower Anchor Connectors.
- 4 Locate the LATCH lower anchor bars in your vehicle. Attach both Lower Anchor Connectors to the vehicle lower anchor bars.
- Pull on the Lower Anchor Tightening Strap and push back on the seat bottom to snug up the Booster to the vehicle seat back.


INSTALL HIGH-BACK BOOSTER

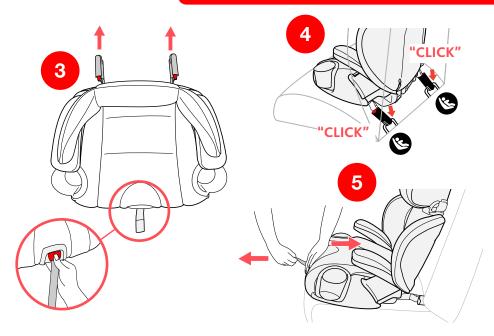


- Place the child into the Booster, making sure the child is sitting with his/her back against the Booster Backrest.
- The Shoulder Belt Guide must be positioned at or just slightly above the child's shoulders. Adjust the seat back to the proper height. Make sure the shoulder belt lays across the shoulder and over the center of the child's chest. The lap belt should lay over the child's thighs.

If Shoulder Belt Guide is NOT positioned at or just slightly above the child's shoulders see page 32 for Adjusting Backrest Height.

Child's ears must be below Backrest when sitting on Booster Seat. If the child's ears are above the Backrest, use the Backless Booster Mode refer to page 46.

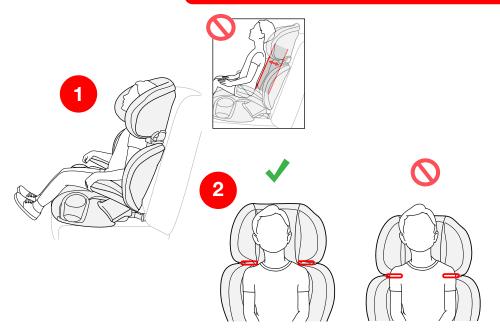

- Route the lap belt **UNDER** the 1st Armrest, across the child's thighs, Then route the shoulder belt and the lap belt **UNDER** the 2nd Armrest closest to the vehicle buckle as shown. Lap-Shoulder belts MUST be under the **ARMRESTS**.
- Buckle the seat belt.

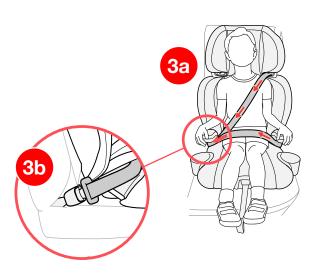


HIGH-BACK BOOSTER MODE

4) Slide the shoulder belt through the orange Shoulder Belt Guide (A). Make sure belt is below belt guide clip (B).

The lap belt should lay flat and snug across the child's thighs. And, when the shoulder belt is pulled up, it will lay flat and snug across the child's chest.

The seat belt can remain in the Shoulder Belt Clip until the seat is removed from the Vehicle.

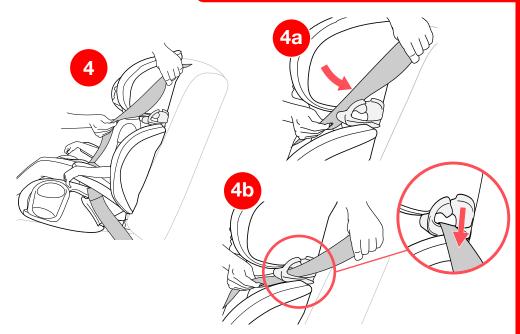

5 Ensure the child is secured correctly as shown.









REMOVING BACKREST

- To remove the Backrest, turn the seat over and press down on the Backrest Connection Release at the base of the seat back under the seat bar.
- At the same time rotate the seat back (A) and remove Backrest from the Booster seat bottom (B), as shown.

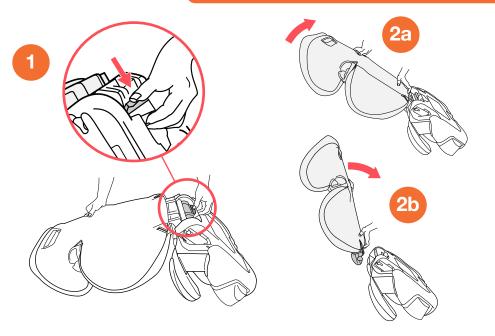

REMOVING BACKREST


Tuck the Fabric Panel between the fabric cover and the seat surface, as shown.

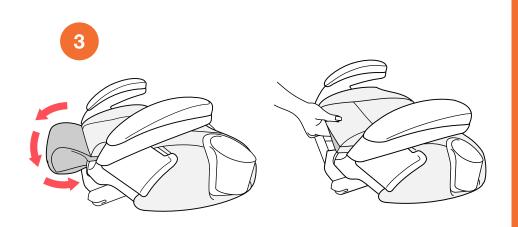


USING SHOULDER BELT CLIP

- The Shoulder Belt Clip is stored under the Booster seat bottom. Remove the Shoulder Belt Clip and Strap stored underneath seat.
- Place the Booster Seat onto the vehicle seat.

USING SHOULDER BELT CLIP

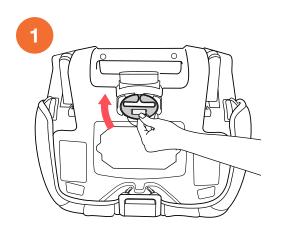

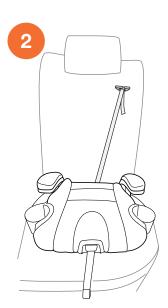


INSTALLING BACKLESS BOOSTER

If using Lower Anchor Connectors, release Lower Anchor Tightening Strap, press in the button located on the front of the seat bottom (A) and pull out on both Lower Anchor Connectors (B).

Use of Lower Anchors with this Booster Seat is optional. If the Lower Anchors are not used, pull the Lower Anchor Tightening Strap snug so that the Lower Anchor Connectors do not interfere with the seat belt. Skip to "Securing Child in Booster" section page 56.

INSTALLING BACKLESS BOOSTER

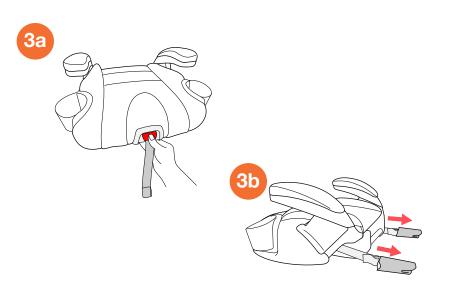


INSTALLING BACKLESS BOOSTER

- 4 Locate the LATCH lower anchor bars in your vehicle. Attach both Lower Anchor Connectors to the vehicle lower anchor bars.
- Pull on the Lower Anchor Tightening Strap and push back on the seat bottom to snug up the Booster to the vehicle seat back.

BACKLESS BOOSTER MODE

INSTALLING BACKLESS BOOSTER

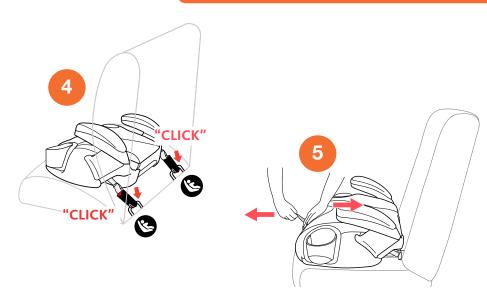

Place the child into the Booster, making sure the child is sitting with his/her back against the vehicle seat back.


Child's ears must be below vehicle seat back or vehicle head restraint when sitting on Booster Seat. If the child's ears are above the vehicle seat back or vehicle head restraint when it is fully extended, use the High-Back Booster Mode. Refer to page 32.


- Route the lap belt **UNDER** the 1st Armrest, across the child's thighs, Then route the shoulder belt and the lap belt **UNDER** the 2nd Armrest closest to the vehicle buckle as shown. Lap-Shoulder belts **MUST** be under **ARMRESTS**.
- 2b Buckle the seat belt.



- To adjust the Shoulder Belt Clip. Pull the clip up or down to adjust the Shoulder Belt Clip to be at or slightly above the child's shoulders.
- Slide the vehicle shoulder belt through the Shoulder Belt Clip (as shown). Shoulder Belt Clip must be at or slightly above child's shoulders height. If necessary, readjust the location of the Clip to ensure that the seat belt lays flat and snug across the child's chest and the lap belt lays flat and snug across the child's thighs. The shoulder strap should be centered and slightly above the child's shoulder so it does not rub their neck.


BACKLESS BOOSTER MODE

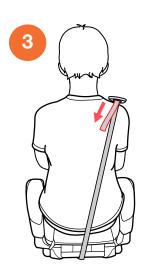

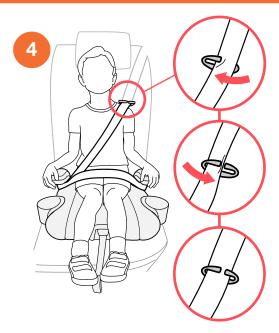

Child is now secured correctly, as shown.

When using this as a Backless Booster, you must use the Shoulder Belt Clip until the seat belt naturally lays flat across the center of the child's shoulder.

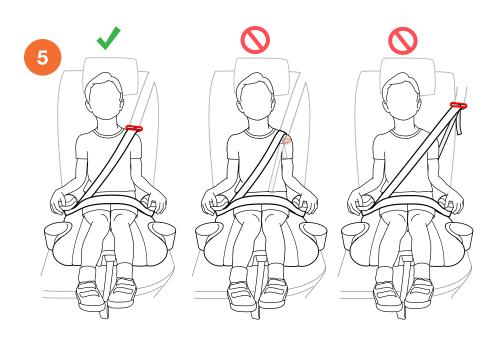


SECURING CHILD CHECKLIST

▲ ALWAYS check to make sure vehicle seat belt is securely buckled. If buckle separates, child could be killed or seriously injured.

✓ Check that the seat belt is not twisted.

Check that the shoulder belt is snug on the child's shoulder and that it does not rub on the neck. It should lie flat across the child's chest and middle of shoulder. The Shoulder Belt Guide should be at or just above the child's shoulder. If necessary, raise or lower the Booster Seat Headrest.

 ♠ DO NOT use anything (pillows, blankets, etc.) between the Booster and the vehicle seat or between the child and the Booster. Avoid bulky clothing that interferes with proper seat belt placement. In the event of an accident, the Booster may not operate correctly.



SECURING CHILD CHECKLIST

Do not let your child slide forward or downward while in the Booster.





Never use the vehicle belt in any position other than those indicated in this User Guide!











BOOSTER SEAT SAFE USE CHECKLIST

▲ To avoid injury to others, ALWAYS secure this Booster Seat when unoccupied. An unsecured Booster Seat could injure other occupants in a sudden stop or crash.

Secure the unoccupied Booster with the vehicle belt by following the "Secure Child in Booster" instructions. The LATCH system is adequate to secure the Backless Booster but the Lap-Shoulder belt should be used to secure the High-Back Booster.

- 1 High-Back, follow step 1-5 to use Lap-Shoulder belt page 38.
- 2 Backless, follow steps 1-4 to use Lap-Shoulder belt page 56.

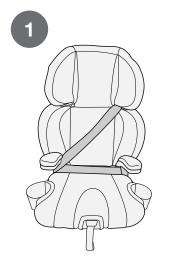


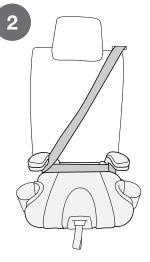

INSTALLATION ON AN AIRCRAFT

• This Booster Seat is NOT certified for use on aircraft. Aircraft do not have lap-shoulder belts to secure your child.



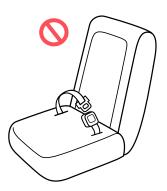


CUP HOLDER

▲ WARNING! DO NOT place hot liquids in cup holder. If spilled, hot liquids could burn child. PLASTIC CONTAINERS ONLY - No glass or metal containers. Only use cups with less than 12 oz. capacity. Never place sharp or pointed objects in Cup Holder. In a crash these objects could hit you or your child and cause serious injuries.

- To remove the Cup Holders press in on the release button on the bottom of the Booster Seat.
- The Cup Holders can also be folded in to allow others to sit next to the Booster Seat.

CUP HOLDER

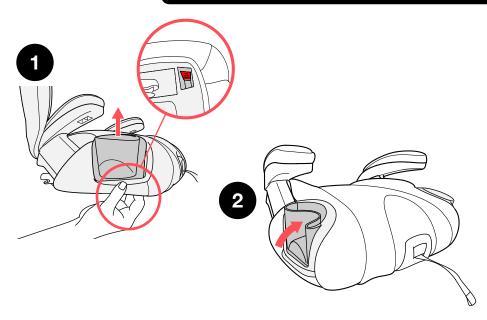


REMOVING FABRIC COVERS

Booster Seat bottom


Remove both Cup Holders and flip the Booster Seat bottom over and unhook 6 elastic loops, as shown.


If Backrest is attached to the seat bottom, see page 46 for removing Backrest.

Both Cup Holders need to be removed before you can remove the fabric, refer to page 68.

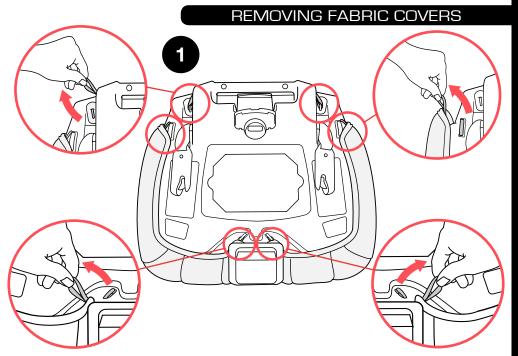

Flip the fabric over and remove the Foam Pad before you wash the fabric. Make sure to insert the Foam Pad into the fabric seat bottom before you re-install onto the seat bottom frame.

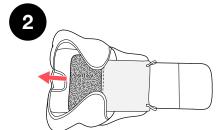


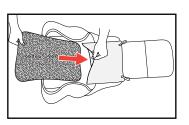





Backrest fabric cover

 On the Booster Backrest, unhook 6 elastic loops as shown. Four behind the Headrest and two at the bottom of the seat back.

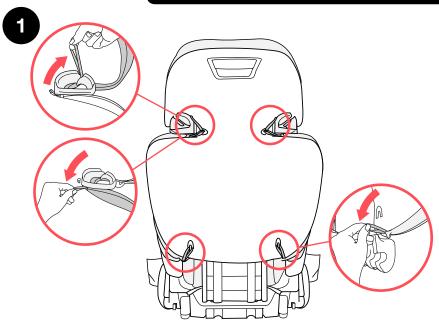




Lift up on the plastic tabs at the top of the Headrest and below the Shoulder Belt Guides, as shown. Pull the Seat fabric cover forward to remove.

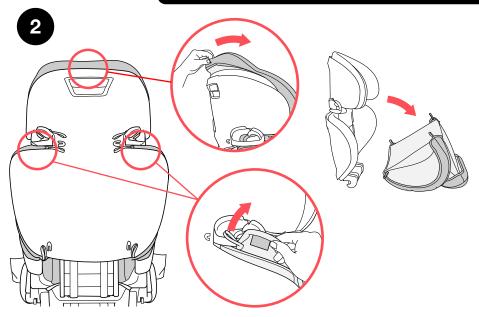


Repeat **Removing Fabric** steps <u>in the reverse order</u>, ensuring that the fabric cover fits onto and around the frame correctly, in particular around the orange belt guides.

- 1 Position the fabric cover on the Booster Backrest and reattach all elastic loops.
- **2** Tuck in the fabric along the Backrest edges.

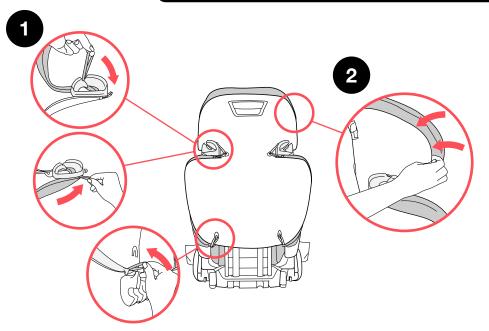


- Insert the plastic tab on the top of the Headrest into the long groove right above the top edge of the Backrest.
- Insert the plastic tab below the Shoulder Belt Guide, slide between the Backrest and foam. Repeat for the other side.

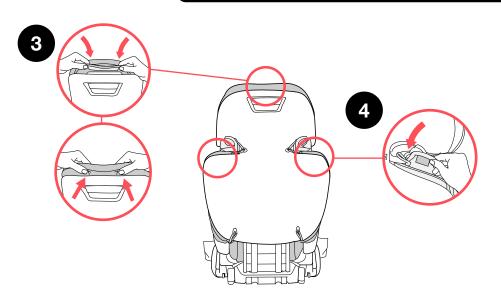

The foam pad MUST be inserted into the seat bottom fabric, see page 72.


Position the fabric cover on the Booster Seat bottom and tuck in the fabric along the belt guide edges. Flip the seat bottom over. Then tighten the fabric over the Booster Seat bottom further by reattaching the elastic loops, as shown.

▲ Be sure to fit fabric cover carefully around all orange belt guides. The Booster Seat must NEVER be used without the fabric cover. It may not perform as intended in the event of a crash.

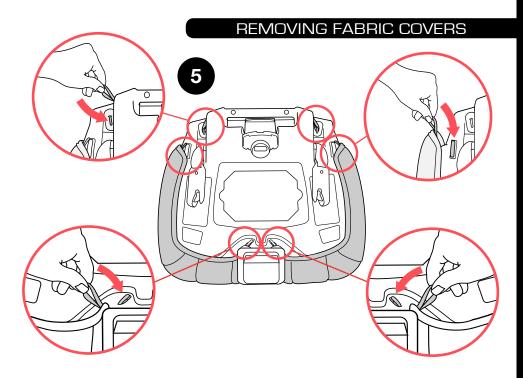


REMOVING ARMREST COVERS



 

ADDITIONAL INFORMATION

REMOVING ARMREST COVERS

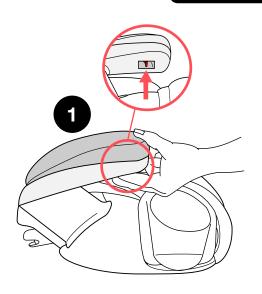




REMOVING ARMREST COVERS

- 2 Pull back on the edges of the Armrest fabric covers and slide the fabric off the Armrest base.
- To reattach the Armrest, insert the Back Tab into the Armrest base and push down on the front edge until it clicks into the base.

NEVER use seat without Armrest fabric covers.

REMOVING ARMREST COVERS

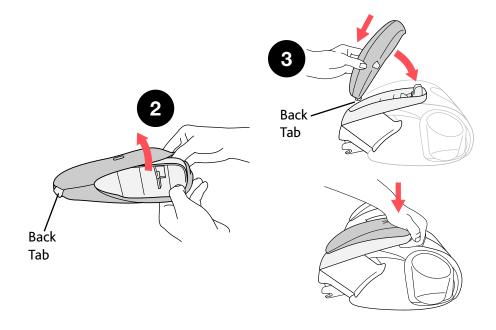

CLEANING AND MAINTENANCE

▲ DO NOT USE BLEACH, solvents or household cleaners as they may weaken plastics and straps.

▲ DO NOT USE SOAPS OR LUBRICANTS on Lower Anchor Connector hardware. It may cause them to malfunction.

• Fabrics may be spot-cleaned:

Hand wash using mild soap and water, or machine washed in cold water on delicate cycle using mild detergent. Hang to dry. See page 70 for removal instructions.

Foam Insert: Hand rinse and air dry.

· Cleaning Plastics:

Sponge clean using warm water and mild soap. Towel dry.

CLEANING AND MAINTENANCE

Cleaning Lower Anchor Connectors Hardware and Straps:
 Lower Anchor Connectors hardware and straps cannot be replaced.

 Sponge clean using warm water and mild soap. Air dry.

Storing the Booster:

When it is not installed in the car, it is recommended to store the Booster in a dry place, away from sources of heat, dust, humidity and direct sunlight.

