

Read all instructions **BEFORE** assembly and **USE** of product.

KEEP INSTRUCTIONS FOR FUTURE USE.

BRAVO[™] PRIMO Stroller

IS0242E_02 02/25 ©2025 Artsana USA, Inc. ChiccoUSA.com







Failure to follow all warnings and instructions may result in serious injury or death. For your child's safety, read the labels and owner's manual before using the product.

- PLEASE SAVE OWNER'S MANUAL FOR FUTURE USE.
- ADULT ASSEMBLY REQUIRED.
- NEVER LEAVE CHILD UNATTENDED. Always keep child in view while in the stroller.
- AVOID SERIOUS INJURY from falling or sliding out. Always use the Safety Harness. After fastening buckles, adjust belts to get a snug fit around your child.
- AVOID FINGER ENTRAPMENT: Use care when folding and unfolding the stroller. Be certain the stroller is fully opened and latched before allowing your child near the stroller.
- USE OF THE STROLLER with a child weighing more than 50 lbs (22.7 kg), will cause excessive wear and stress on the stroller. Use the stroller with only one child at a time.
- STROLLER TO BE USED only at walking speed. Product not intended for use while jogging, skating, etc.
- TO PREVENT A HAZARDOUS, UNSTABLE CONDITION, never place purses, shopping bags, parcels or accessory items on the canopy or handle. Do not place more than 10 lbs (4.5 kg) in the storage basket.

- DO NOT use storage basket as a child carrier.
- Avoid burns. Never put hot liquids in cup holder. Do not place more than 3 lbs (1.4 kg) on the parent tray/cup holder.
- NEVER ALLOW YOUR STROLLER to be used as a toy.
- DISCONTINUE USING YOUR STROLLER should it become damaged or broken.
- AVOID STRANGULATION. DO NOT place items with a string around your child's neck, suspend strings from this product, or attach strings to toys.
- NEVER USE STROLLER ON STAIRS or escalators. You may suddenly lose control of the product and your child may fall out. Also, use extra care when going up or down a step or curb.
- Do not attempt to attach any infant car seat to the stroller other than a Chicco infant car seat. Injury or death may result when attempting to use this stroller in conjunction with infant car seats from other manufacturers.
- Before use, remove and dispose of all plastic bags and packaging materials and keep them out of reach of children.

Failure to follow all warnings and instructions may result in serious injury or death. For your child's safety, read the labels and owner's manual before using the product.

- Before assembly, check that the product and all of its components have not been damaged during transportation.
- Do not use accessories, spare parts, or any component not supplied or approved by Chicco as they may make the stroller unsafe.

Using Chicco Infant Car Seat with Stroller:

- Child Tray must be properly attached to use a Chicco infant car seat.
- ONLY USE a Chicco infant car seat with this stroller.
- Only use this product to transport infants that are within the size and weight limitations of the infant car seat.
- FALL HAZARD: Always check that infant car seat is securely attached to stroller frame by pulling up on the infant car seat.
- ALWAYS SECURE your child with the car seat harness. Always make sure child is properly harnessed in the car seat.
- Refer to your Chicco infant car seat owner's manual for additional warnings and use instructions before using this product.

Components



Components



How to Assemble the Stroller

When opening the Stroller, ensure that your child, or other children, are at a safe distance. Ensure that during these operations, the movable parts of the Stroller do not come into contact with your child.



If you have hardwood floors or linoleum you may want to perform this step on carpeting or lay down some protection for your floors.

1A. Stand the Stroller Frame Assembly (A) on end and unfold the frame as shown.







How to Assemble the Stroller





How to Assemble the Stroller



4A. On one side of the Rear Axle, slide a Rear Wheel (C), and turn the Wheel until the brake tab fits into one of the grooves on the Wheel.

The Rear Wheel is on the axle when the brake lug is in contact with the Rear Axle mount.



4B. On the same side, slide a Washer (F) onto the Rear Axle.



4C. Secure the Wheel to the Rear Axle using a Pin (G). Push the straight side of the Pin through the hole in the Rear Axle. The curve on the Pin must curve around the outside of the Rear Axle, as shown. Make sure Washer is between the Pin and Wheel.

Repeat Steps 4A-4C for other side.

How to Assemble the Stroller



Check that the wheels are assembled correctly.

4D. Line up the tabs on the Hubcaps (H) with the holes on the Wheel. Snap the Hubcap onto the Wheel to cover the Washer and Pin.

Repeat for other side.

Note: Pull on each Wheel to ensure the Wheel Assemblies are securely attached to the axle.





5. Attach a Front Wheel (B) to the Stroller Frame by lining up and inserting a Front Wheel Pin into the corresponding opening on the Stroller Front Leg, as shown. Repeat for the other side.

Note: Make sure both Front Wheels are secure by pulling down on the Wheel Assemblies.



6A. To attach the basket at the back of the Stroller, lift the basket fabric up over the basket frame. Fold the top of the basket fabric over and snap all 8 of the buttons around the frame.

How to Assemble the Stroller

Note: Make sure to feed webbing from the basket fob through button hole in basket. This allows the fob to be accessed and stashed from the inside of the basket.



How to Adjust the Handle



7. Rotate the Parent Handle up from the closed position until it locks into the 1st position. The Parent Handle height can be adjusted to 3 positions, as shown.

Push in on both side buttons to release the Parent Handle. Then rotate the Parent Handle up or down to the desired position.

How to Recline the Seat



8. To recline the backrest, squeeze both levers together and pull down on the Backrest. To adjust the Backrest into an upright position, push up on the Backrest until it locks into the desired position.

How to Use the Recline Panel



How to Use the Canopy



10A. Pull the front edge of the Canopy forward to open the Canopy. Canopy is fully opened when 4 panels are visible. The 3rd panel of the Canopy is a covered mesh peek-a-boo panel.

Reverse this step to close the Canopy.



10B. The Canopy also has an additional extension panel tucked under the front panel. Locate and pull out the additional visor panel, as shown.

How to Use the Canopy



How to Use the Brakes

How to Use the Safety Harness

Always apply the brakes whenever the Stroller is stationary. Never leave the Stroller on a sloped surface, with a child onboard, even with the brakes applied.



11A. Push down on the Brake Lock Levers located on each side of the Rear Wheel Assembly to lock the Rear Wheels.



11B. Pull up on the Brake Lock Levers to unlock the Rear Wheels.

This Stroller features 3 harness positions. Always use a harness position located ABOVE the child's shoulders. If multiple harness positions are above the child's shoulder line, use the one closest to it.



It is recommended that a child under 6 months old ride in the Chicco infant car seat as part of the travel system.

12A. The Shoulder Straps can be adjusted to 3 height positions as shown. To adjust the Shoulder Harness, pull the strap through the correct buttonhole. Always use the same buttonhole height for both straps (12B).







How to Use the Safety Harness



13. This Stroller has a 5-point safety harness. The Shoulder Strap Connector is designed to break away from the Waist Clip when not secured in the Crotch Strap Buckle.

Ensure the Shoulder Strap Connector is in the correct position, as shown. Slide the Shoulder Strap Connector onto the Waist Strap Clip and repeat for the other side. Then slide both Waist Clips into the Crotch Strap Buckle, as shown. Pull on both sides to make sure the Clips are secured to the Buckle.



How to Use the Safety Harness

Never leave child unattended. Avoid serious injury from falling or sliding out. Always use the Safety Harness.





14. The Safety Harness can be released by pressing the button on the center of the Buckle and pulling both Waist Clips out.

Pull up on the Shoulder Strap Connector to remove it from the Waist Strap Clip.

How to Use the Safety Harness

Never leave child unattended. Avoid serious injury from falling or sliding out. Always use the Safety Harness.



15. The length of the Shoulder Straps can be adjusted by pulling on the adjustment buckles to tighten or loosen.

The length of the Waist Straps can be adjusted. Press the tab at the end of the Waist Strap Clip and pull on the strap to tighten or loosen to better fit your child.

16a

16A. Place the Toddler Seat Insert (J) into the Stroller seat. Lift up the bottom of the Toddler Seat Insert and thread the Crotch Strap through the corresponding opening, as shown.

Then lift up on fabric pocket on the underside of the Toddler Seat Insert and wrap it around the front of the seat pad.

How to Use the Toddler Seat Insert

How to Use the Toddler Seat Insert



16B. Thread the Shoulder Straps and Waist Straps through the corresponding openings on the Seat Insert, as shown.

The Toddler Seat Insert has 3 height positions for the shoulder harness straps. When inserting the shoulder harness straps through the insert, use the height that corresponds to the same harness height on the seat.

How to Use the Child Tray/Infant Car Seat Adapter



How to Use the Basket



The basket can be used normally or opened up to stash and conceal your items inside the basket.

18A. Unzip the zippers on the back of the basket and lift up on the fabric to access the Zip & Stash Basket.









18C. To access the Basket from the front of the Stroller, locate and lift the leg rest, as shown.

How to Use the Accessory Pocket



How to Remove the Accessory Pocket



How to Remove the Accessory Pocket



21A. Pull the Accessory Pocket out of the opening on the Parent Tray.

21B. Locate 3 webbing tabs on the bottom of the Parent Tray. Thread the webbing tabs through the corresponding openings in the

21C. Pull up on the Accessory Pocket to remove it from the Parent Tray.

Using with a Chicco Infant Car Seat

AWARNING

ONLY USE a Chicco infant car seat with this product. Make sure to properly install the Child Tray/Infant Car Seat Adapter prior to using a Chicco infant car seat. Always make sure child is properly harnessed in the car seat. Only use this product to transport infants that are within the size and weight limitations of the infant car seat. Refer to your Chicco infant car seat Owner's Manual for additional warnings and use instructions before using this product.



To connect a Chicco infant car seat:

22A. With the Child Tray attached and the Stroller Backrest FULLY **RECLINED**, place the Chicco infant car seat into the Stroller Frame. The car seat will only fit into the frame **REAR FACING ONLY**. The baby will be facing you when pushing the Stroller. Ensure the infant car seat clicks into the Stroller Frame on both sides.

Note: Pull up on the infant car seat to ensure it is secured to Stroller Frame (22B).

If using the Stroller Canopy with the infant car seat, rotate the infant car seat handle down to allow the Canopy to fully extend open.

Using with a Chicco Infant Car Seat



To remove a Chicco infant car seat:

23. Squeeze the Release Handle on the back of the infant car seat with one hand and then lift up on the carry handle with the other.

Remove the infant car seat from the Stroller.

How to Remove the Front Wheels



24. Remove the Front Wheels by pushing in on the Release Button above the wheel, as shown. When the Release Button is fully pressed, pull the Front Wheel off of the Stroller Frame.

Repeat for the other side.

How to Close the Stroller

When folding the Stroller, make sure that your child and other children are at a safe distance. Ensure that during operation, the movable parts of the Stroller do not come in contact with your child.



25. If attached, remove the infant car seat. Stroller can be folded with the Child Tray attached.

Lift the seat fabric up and locate the Fold Handle, as shown. Slide the Handle Release button towards the middle of the handle and lift up on the Fold Handle. Rotate the Fold Handle to the vertical position to release latch. Stroller will start to fold as latch is released.

How to Close the Stroller

26

26. As you pull up on the Fold Handle the Stroller Legs and Seat back will fold down and the front wheels will automatically swivel. The closed Stroller will now stand on its wheels.

Note: The Fold Handle also acts as a carry handle for the closed Stroller.

How to Use the Travel Lock



27A. To keep the Stroller from opening while traveling unzip the Zip & Stash Basket and unclip the key fob from the Basket. Leave the Zip & Stash Basket unzipped.

27B. Attach the bottom of the key fob to the handle using the snap. Then fold the Stroller.

Clip the key fob on the handle to the clip on the basket, as shown.

How to Remove the Canopy



28. Unzip the canopy from the Stroller, as shown. Then, pull out on the Canopy Clips to remove the Canopy from both sides of the Stroller Frame.

Note: It is not required for the Canopy to be removed to use the Stroller in Car Seat Carrier Mode.

How to Remove the Seat



29B. The fabric will still be attached to the Parent Tray, as shown. Lift up and remove the Flexible Tab from the groove on the Parent Tray.

How to Remove the Seat





How to Remove the Seat



30. Lift up the foot rest on the front of the Stroller to locate two sets of straps. Both Straps have a Buckle under the Seat Pan. Reach under the Seat Pan and undo both Buckles.





How to Remove the Seat



How to Use Car Seat Carrier Mode



32. To use the Stroller as a Car Seat Carrier without the Stroller Seat attached, follow Steps 22 - 23 to attach the Chicco infant car seat to the Stroller Frame.

Note: The Stroller Canopy can be used in this mode for additional coverage.







How to Attach the Seat



33A. Fold leg rest up to expose the seat bracket. Align seat bracket tabs with the corresponding openings on the stroller frame.

33B. Slide the tabs into the openings, to reattach the Stroller Seat.

How to Attach the Seat



33C. Press down on the back edge of the seat bracket until it clicks into place, making sure both sides lock into the stroller frame.

Then repeat steps 29-30 in reverse to reconnect the buckles under the seat and the fabric clips on the frame.

Cleaning and Maintenance

This product requires regular maintenance. The cleaning and maintenance of the stroller must only be carried out by an adult.

CLEANING

Please refer to the care label for instructions on cleaning the fabric parts of the stroller.

Periodically wipe clean plastic parts with a soft damp cloth. Always dry the metal parts to prevent the formation of rust if the stroller has come into contact with water.

MAINTENANCE

Lubricate the moving parts only if necessary, with a light application of a silicone based lubricant. Periodically check the condition of the wheels, and keep them clean of dust and sand. To avoid friction that may prevent the correct operation of the stroller, ensure that all the movable plastic parts placed along the metal frame are clean of dust, dirt or sand. Keep the stroller in a dry place. Prolonged exposure to direct sunlight may cause the fabric to fade.

For More Information

If you have any questions or comments about this product, or are missing any of the parts please do not return this product to the store. Contact us in one of the following ways:





info.usa@artsana.com



www.chiccousa.com

1826 William Penn Way Lancaster, PA 17601

[Kee-Ko] If you say it right it makes you *smile*

