

**How To Use:** When using the Step Stool, place it where the child can stand securely with both feet and reach the sink or counter without losing balance. The Step Stool can be used to help the child reach the adult toilet when using the Chicco Toilet Topper.

**Cleaning:** Wash with a neutral detergent after use. Don't use abrasive products or particularly aggressive detergents. Keep away from direct sources of heat. If product is broken or damaged stop use and contact Chicco Customer Service at 1-877-424-4226.

## **WARNING**

**Failure to follow these warnings and instructions could result in injury or death to your child.**

- Maximum weight for step stool is 150 lb (68 kg).
- **NEVER** leave child unattended.
- **THIS IS NOT A TOY. DO NOT** use step stool for anything other than the intended use.
- **ALWAYS** use step stool on a dry, flat and level surface.
- **ALWAYS** store step stool out of reach of children when not in use.