



Read all instructions **BEFORE** assembly and **USE** of product.


KEEP INSTRUCTIONS FOR FUTURE USE.

ZEST™


4-in-1 Multi-Use High Chair

⚠ WARNING Failure to follow the warnings and the instructions throughout this booklet could result in serious injury or death. Each mode has specific warnings, make sure to read and understand the warnings in each mode.


This product can be used in the following modes:

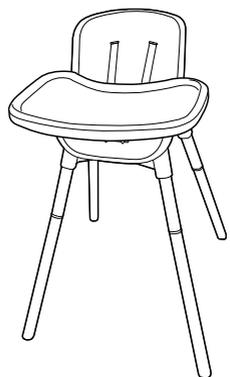


HIGH CHAIR

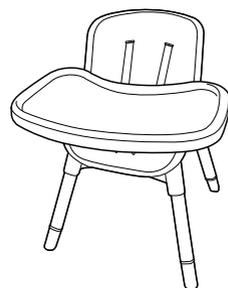

FEEDING CHAIR

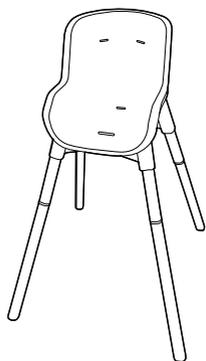


YOUTH STOOL

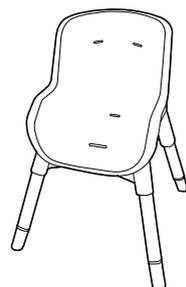


TODDLER CHAIR


Components

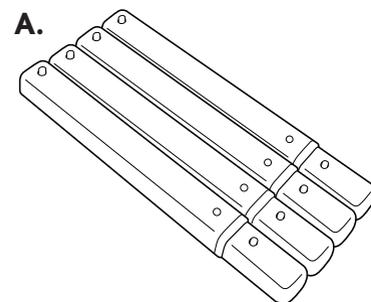

A. Top Legs x4

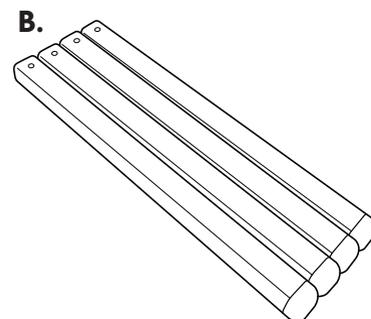


B. Bottom Legs x4

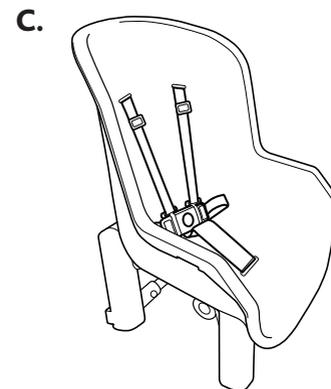

C. Seat


Components

D.

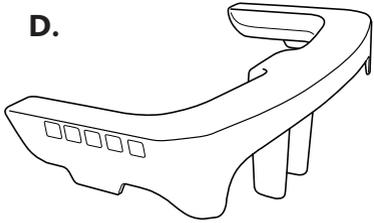

D. T-Bar

E.

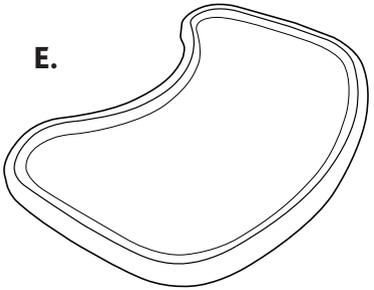


E. Tray

WARNING



HIGH CHAIR USE

- **FALL HAZARD:** Children have suffered severe head injuries including skull fractures when falling from high chairs. Falls can happen suddenly if child is not restrained properly.
- Always use restraints, and adjust to fit snugly.
- Tray is not designed to hold child in chair.
- Stay near and watch child during use.
- Never leave child unattended.
- The child should be secured in the high chair at all times by the restraint system.
- It is recommended that the high chair be used only by children capable of sitting upright unassisted.
- Always place the high chair on a horizontal, stable surface. Do not move chair with child in it.
- In High Chair mode, the high chair is recommended for children who can sit upright unassisted OR weigh over 20 lbs (9 kg) and are not more than 36 months old or 40 lbs (18 kg).

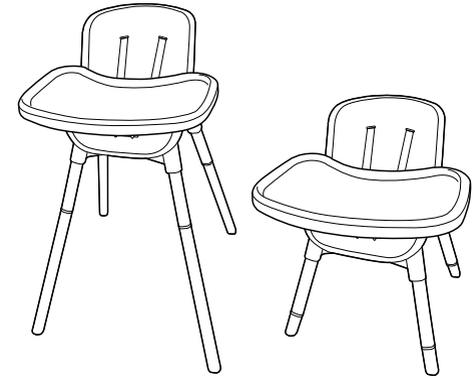



- When using the high chair, do not place your child near objects that he or she can push against to overturn the high chair.
- Do not use the product if any part is broken, torn, or missing.
- Ensure that all components are correctly fitted and adjusted before use.
- To avoid the danger of suffocation, remove all plastic covers before using the product.
- Do not leave the product near walls, curtains, or windows, where the child can become entangled.
- Do not attach any parts to the product that are not supplied or expressly approved by Chicco.

HIGH CHAIR Mode

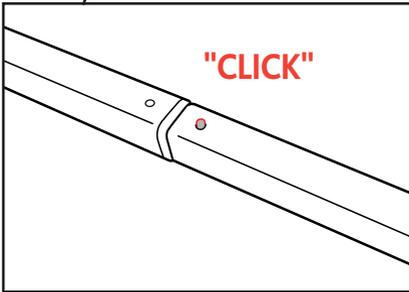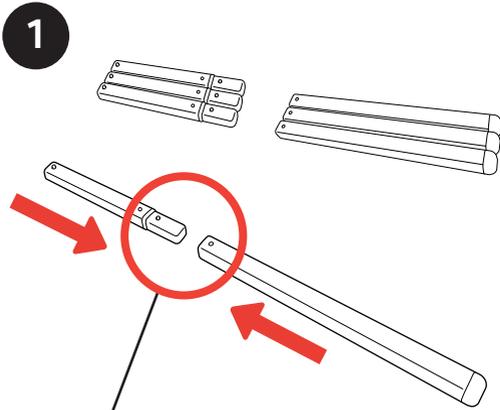

1. Attach the 4 Top Leg (A) sections to the 4 Bottom Leg (B) sections. The Leg sections are securely attached when the pins on the Legs are engaged (as shown).

Assembly

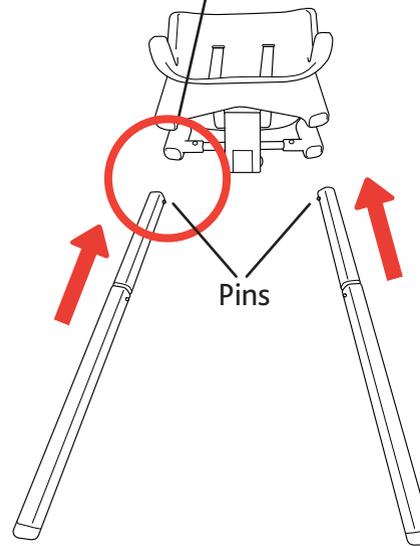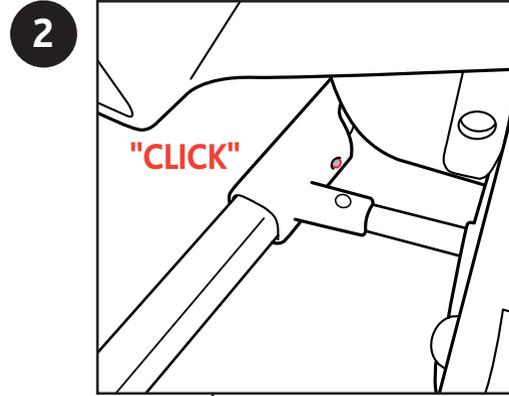

Front View


2. Attach 2 Legs to the rear attachment openings on the High Chair Seat (C). Push in on the Pins and slide the Legs into the High Chair Seat, as shown. The Leg sections are securely attached when the pins on the Legs are engaged.

Assembly

3





3. Attach 2 Legs to the Front attachment openings on the High Chair Seat (C). Push in on the Pins and slide the Legs into the High Chair Seat, as shown. The Leg sections are securely attached when the pins on the Legs are engaged.

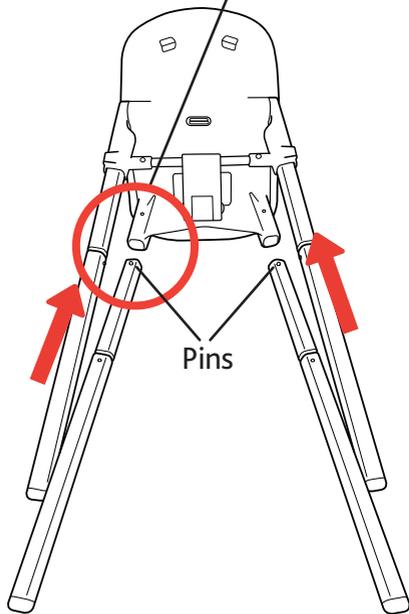


Rear View

Assembly

4

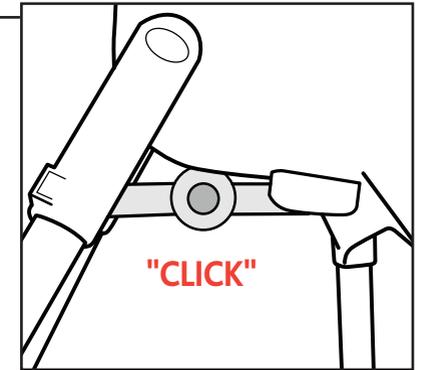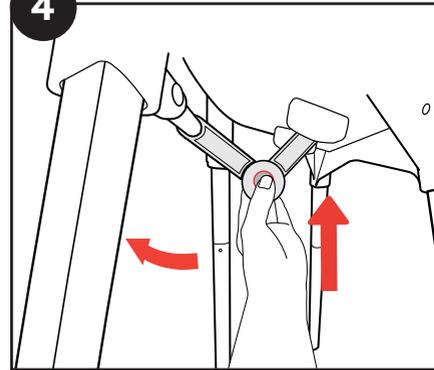


4. To Extend the Rear Legs, locate the extender hub on the bottom of the High Chair Seat. Press in both buttons and rotate the rear legs out. The extender hub will CLICK when locked. Make sure the Rear Legs are locked by pulling down on the extender hub. Stand the High Chair up on all 4 legs.

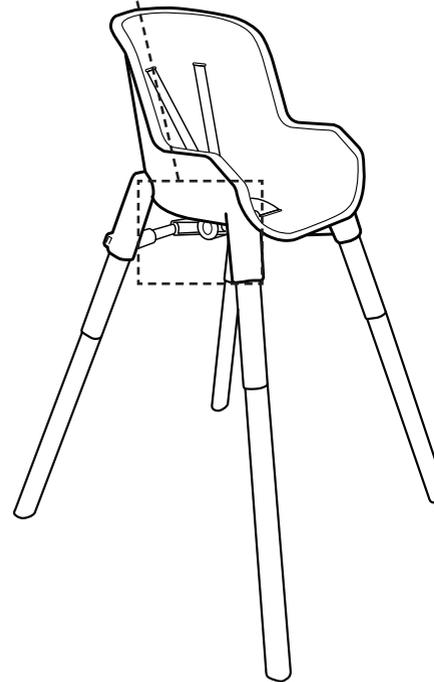


Assembly

5

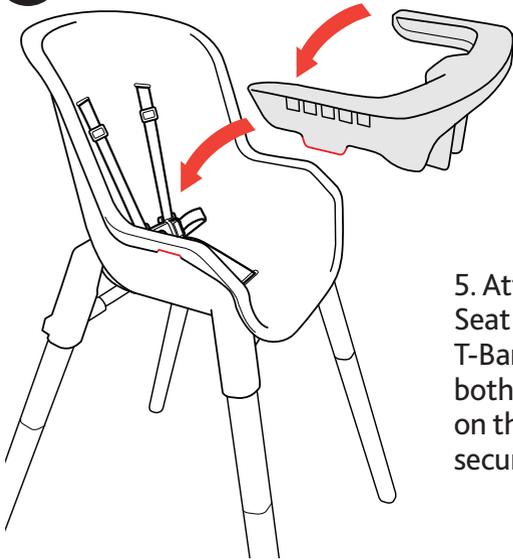

5. Attach the T-Bar (D) to the Seat Frame, as shown. The T-Bar will click into place on both sides of the Seat. Pull up on the T-Bar to make sure it is securely attached.

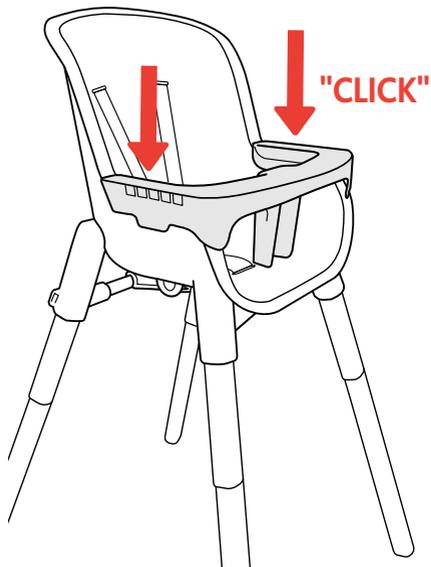


Adjusting Safety Harness

⚠ WARNING


Prevent serious injury or death from sliding out, falls, or tipping over. Always secure child in the restraint. Never leave child unattended. The tray is not designed to hold the child in the chair.

6

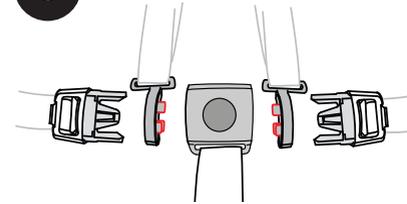


6. The High Chair has a 5-point safety harness. The Shoulder Strap Connector is designed to break away from the Waist Clip when not secured in the Crotch Strap Buckle.

Make sure the Shoulder Strap Connector is in the correct position, as shown. Slide the Shoulder Strap Connector onto the Waist Strap Clip and repeat for the other side.

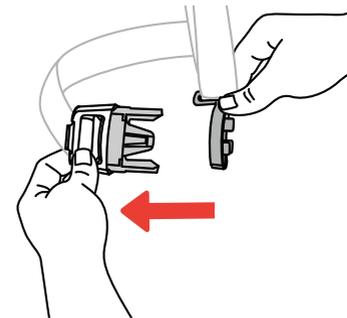


Then slide both Waist Clips into the Crotch Strap Buckle as shown. Pull on both sides to make sure the Clips are secured to the Buckle.

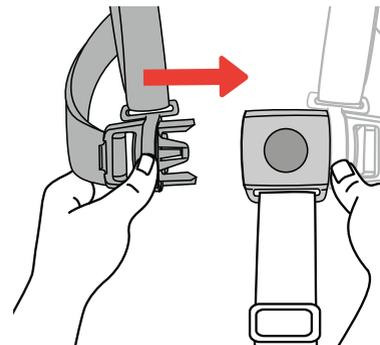


Adjusting Safety Harness

7

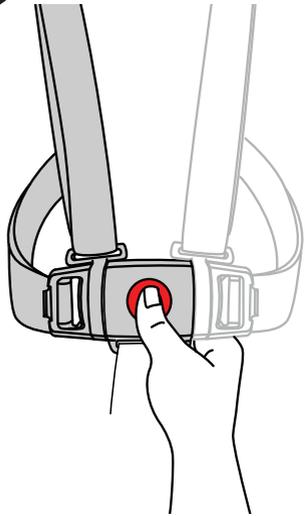


7. The safety harness can be released by pressing the button on the center of the Crotch Strap Buckle and pulling both Waist Clips out.

Pull on the Shoulder Strap Connector to remove it from the Waist Strap Clip.

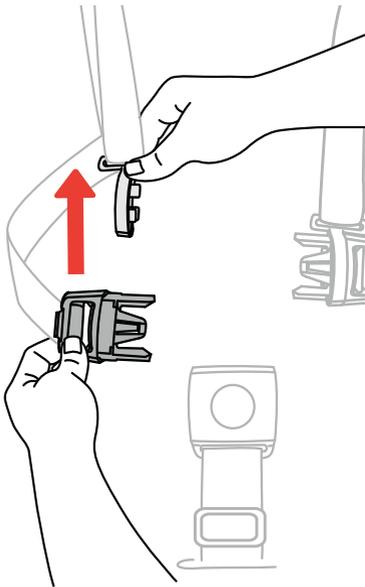

Adjusting Safety Harness

8


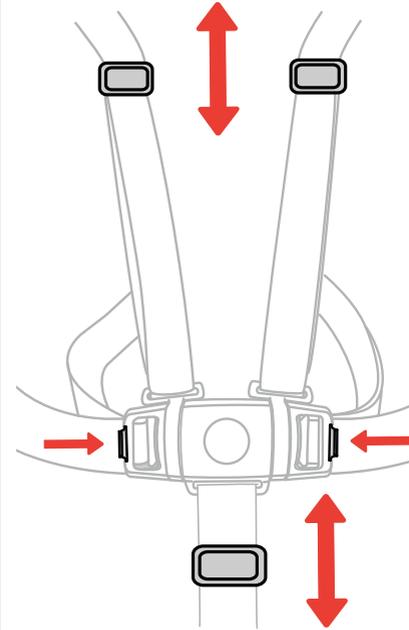


8. The length of the Shoulder Straps and Crotch Strap can be adjusted by pulling on the adjustment buckles to tighten or loosen.

The length of the Waist Straps can be adjusted by pressing the tab at the end of the Waist Strap Clip and pulling on the strap to tighten or loosen to better fit your child.

Assembly

9

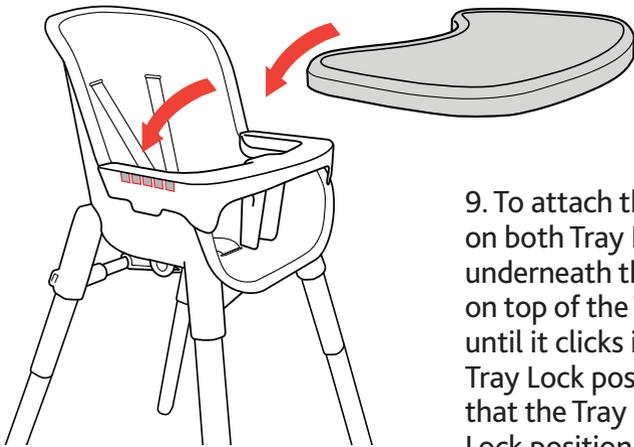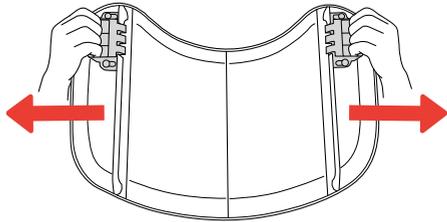


9. To attach the Tray (E) pull out on both Tray Locks underneath the Tray. Place it on top of the T-Bar. Press down until it clicks into one of the 3 Tray Lock positions. Make sure that the Tray is in the same Tray Lock position on both sides.

Always check that the Tray is securely attached by pulling up on it.

Tray Use

10

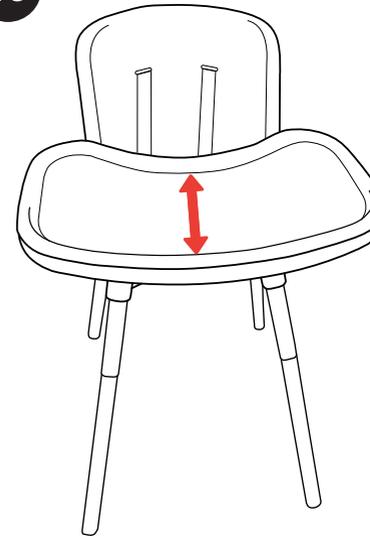


10. The Tray can be adjusted to 3 different positions.

To adjust the Tray squeeze both Tray Locks on each side of the Tray and slide it forward or backwards.

The Tray can be removed by squeezing both Tray Locks on each side of the Tray and lifting up.


Tray Use

11

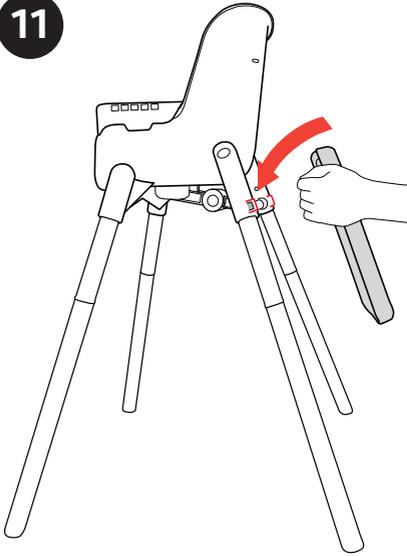



11. Pull out on both Tray Locks underneath the Tray. Line up the Tray Lock with the storage lock on the back of the seat where the rear legs attach, as shown. Release the Tray Locks and make sure the Locks click into place on both sides.

Note: Tray cannot be stored on the rear when in Feeding Chair mode.

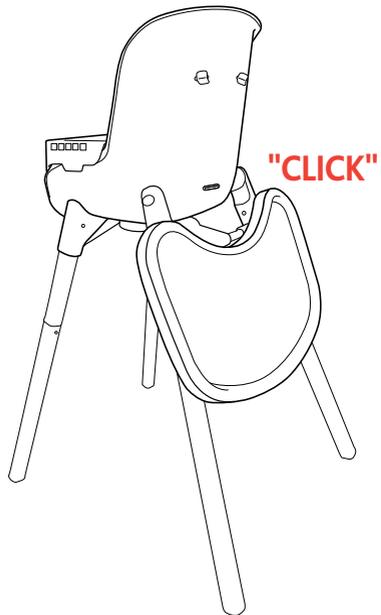


Folding High Chair


12

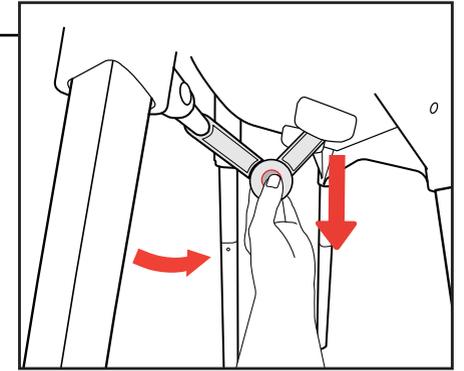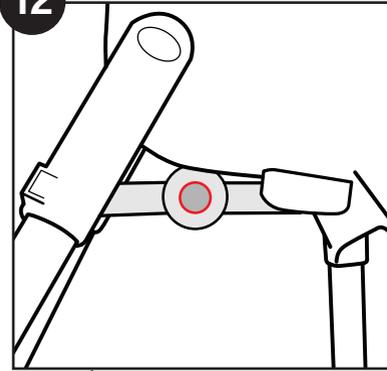

12. To Fold the Rear Legs, locate the extender hub on the bottom of the High Chair Seat. Press in both buttons and pull the rear legs in until the extender hub locks with a CLICK.

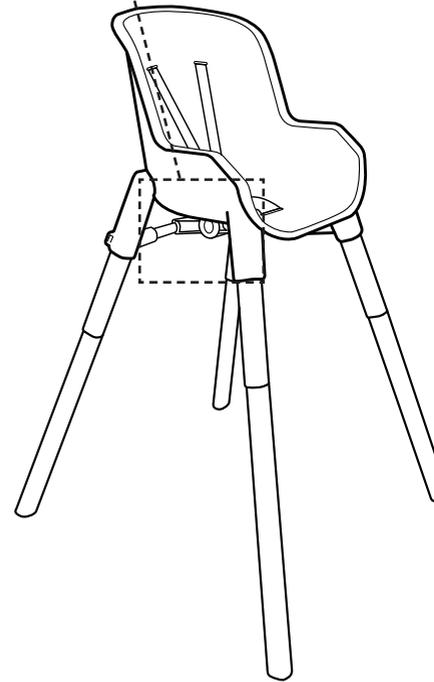


"CLICK"

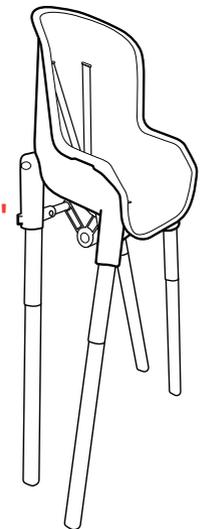

FEEDING CHAIR Mode


13

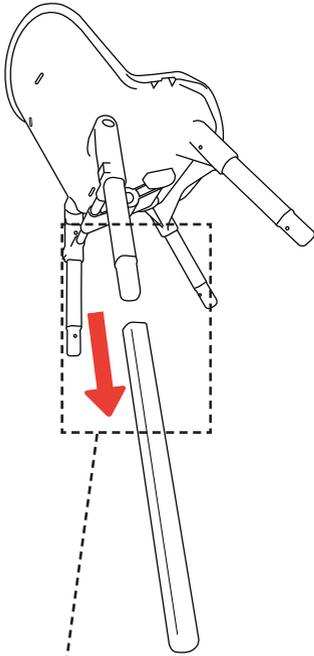

13. Remove the Bottom Legs by pushing in on the pin and sliding the Legs apart.


Store the Bottom Legs for later use.

See steps 6-8 on securing your child with the Safety Harness.

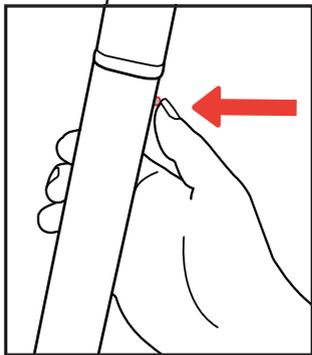


Assembly

14

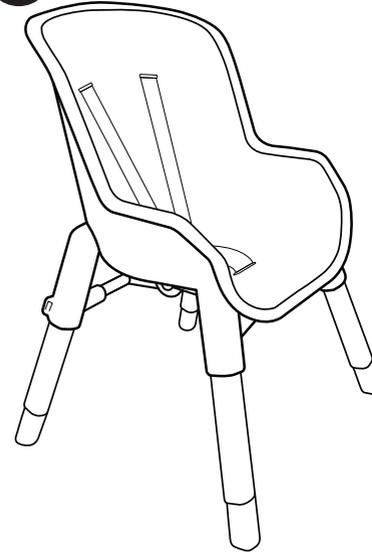

14. Attach the T-Bar and Tray. Refer to step 5 attaching T-Bar and step 9 attaching Tray.

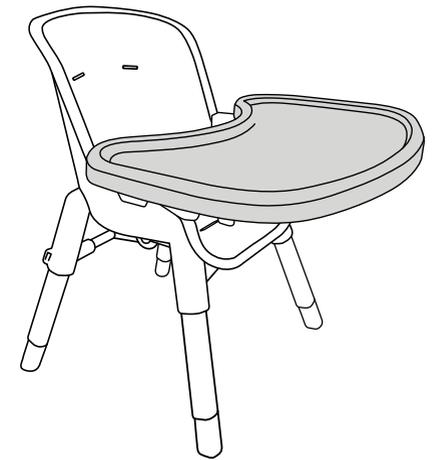


! WARNING


Failure to follow these warnings and the instructions could result in serious injury or death

YOUTH STOOL & TODDLER CHAIR USE


- Never leave child unattended.
- Always place the product on a horizontal, stable surface.
- Do not use Youth Stool for children under 3 years old or for children who weigh more than 60 lbs (27.3 kg).
- Do not use the product if any part is broken or missing.
- Ensure that all components are correctly fitted and adjusted before use.
- To avoid the danger of suffocation, remove all plastic covers before using the product.
- Do not leave the product near walls, curtains, or windows, where the child can become entangled.
- Do not attach any parts to the product that are not supplied or expressly approved by Chicco.

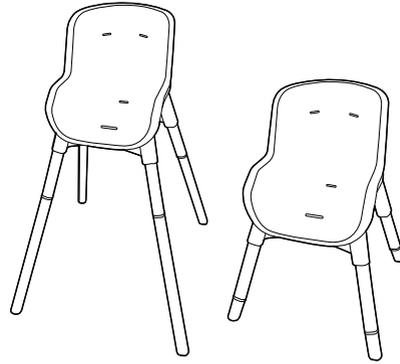

YOUTH STOOL Mode


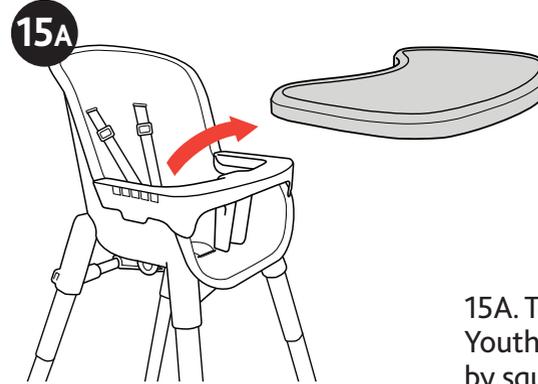


15A. To convert High Chair to Youth Stool Mode, remove Tray by squeezing both Tray Locks on each side of the Tray and lifting up.

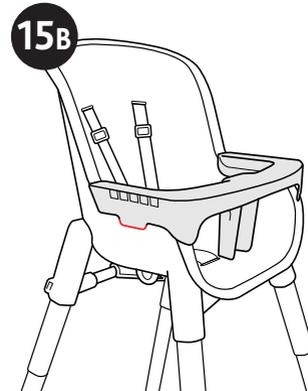



15B. The T-Bar can be removed by pulling out on both side tabs and lifting up.

To remove Harness Straps see step 16.

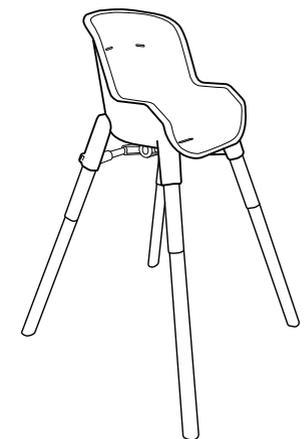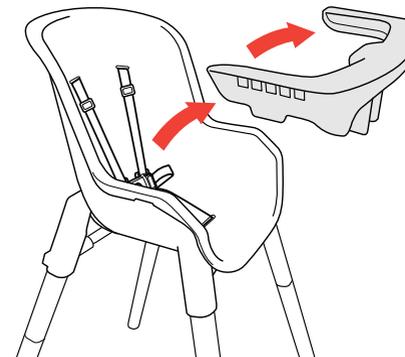

Assembly



16

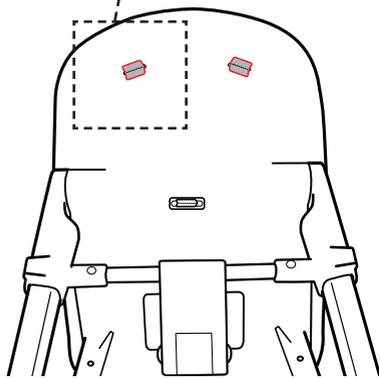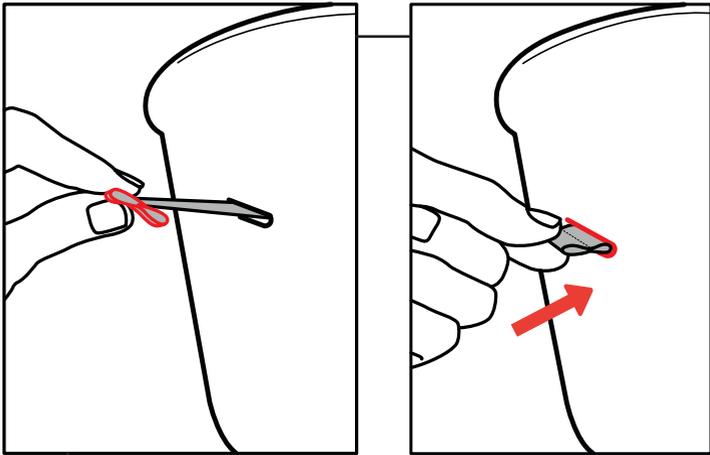

16. To remove Harness Straps from the Seat, flatten Harness Tab then push it through the slot. Repeat for other Harness Strap.

Assembly


17A

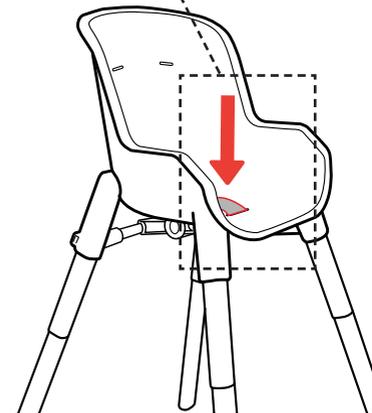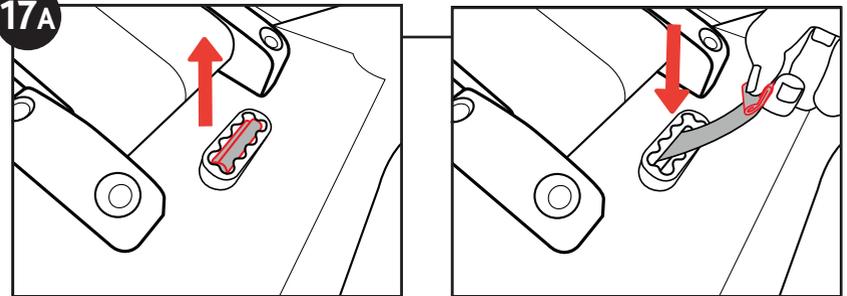

17A. Loosen the Crotch Strap Tab, then push the Crotch Strap Tab down into the opening in the Seat bottom, as shown. Pull out the folded Crotch Strap Tab. Flatten the Crotch Strap Tab and feed it back up through the opening in the Seat bottom.


17B. Repeat these instructions for the Waist Belt Straps.

17B


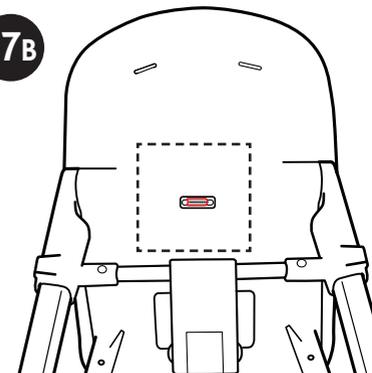


TODDLER CHAIR Mode

18

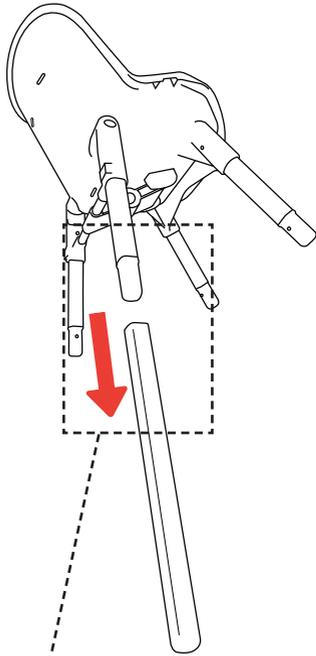

18. To convert Youth Stool to Toddler Chair Mode remove the Bottom Legs by pushing in on the pins and sliding all 4 Legs apart.

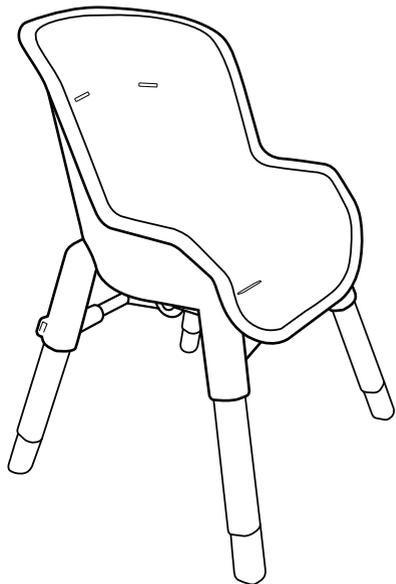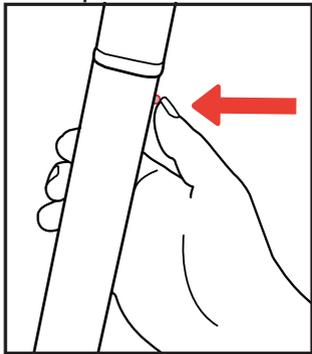

Cleaning and Maintenance

This product requires regular maintenance. The cleaning and maintenance of the product must only be carried out by an adult.

CLEANING

Periodically wipe clean plastic parts with a soft damp cloth. Always dry the metal parts to prevent the formation of rust if the product has come into contact with water. Do not use bleach, spray, or wipes on the product. Do NOT fully submerge Tray in water. Tray is NOT dishwasher safe.

MAINTENANCE

Periodically check the product for loose screws, or worn parts. Replace or repair the parts as needed. Use only Chicco replacement parts. To avoid friction that may prevent the correct operation of the product, ensure that all the movable plastic parts placed along the metal frame are clean of dust and dirt. Keep product in a dry place. Prolonged exposure to direct sunlight may cause the plastic parts to warp.

For More Information

For USA customers :

If you have any questions or comments about this product, or are missing any of the parts, please do not return this product to the store.

Contact us in one of the following ways:



(877)-424-4226



info.usa@artsana.com




www.chiccousa.com



1826 William Penn Way
Lancaster, PA 17601

[**Kee-Ko**] If you say it right it makes you *smile*

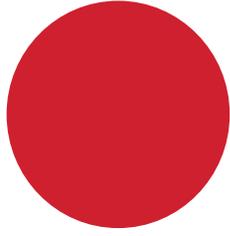

KEE-KO