



WONDER

4-in-1 Folding High Chair

Owner's Manual

Read all instructions BEFORE
assembly and USE of product.

KEEP INSTRUCTIONS FOR
FUTURE USE.



**WARNING**
DEATH or SERIOUS INJURY CAN OCCUR


FAILURE TO FOLLOW THE INSTRUCTIONS AND PRODUCT LABELS THROUGHOUT THIS BOOKLET COULD RESULT IN SERIOUS INJURY OR DEATH. EACH MODE HAS SPECIFIC WARNINGS. PRIOR TO FIRST USE, BE SURE TO READ AND UNDERSTAND THE WARNINGS IN EACH MODE.

- **PLEASE SAVE OWNER'S MANUAL FOR FUTURE USE.**
- **ADULT ASSEMBLY REQUIRED.**
- **NEVER LEAVE CHILD UNATTENDED.** Stay near and watch child during use.
- **AVOID SERIOUS INJURY** from falling or sliding out. Always use safety harness. After fastening buckles, adjust belts to ensure a snug fit around your child.
- **FALL HAZARD:** Children have suffered **severe** head injuries including skull fractures when falling from high chairs. Falls can happen suddenly if child is not restrained properly.
 - Always use harness, and adjust to fit snugly.
 - T-bar and tray are not designed to hold child in chair.
- Secure your child at all times with the restraint system provided, both in the reclined and upright positions.
- Always place the high chair on a horizontal, stable surface. **NEVER** place the high chair near stairs or steps.
- **DO NOT** move chair with child in it.
- **DO NOT** adjust the height with child in the product.
- **DO NOT** use this high chair for more than one child at a time and do not leave other children playing unattended near the high chair.
- In HIGH CHAIR MODE, it is recommended that the high chair be used only by children capable of sitting upright unassisted.
- **DO NOT** use TODDLER STOOL MODE for children under 3 years old.
- **DO NOT** use ADULT CHAIR MODE for adults weighing more than 240 lbs (109 kg.).
- This high chair is recommended for children from birth to 6 months in INFANT RECLINER MODE; from 6 to 36 months in HIGH CHAIR MODE; and for children over 36 months in TODDLER STOOL MODE.
- **DO NOT** use the high chair if any part is broken, torn, or missing.
- Ensure that all components are correctly fitted and adjusted before use.
- **DO NOT** place any heavy bags, packages, or other items on the high chair tray. They may cause the chair to tip over.


**WARNING**
DEATH or SERIOUS INJURY CAN OCCUR

- To avoid danger of suffocation, remove all plastic bags before using the highchair. Immediately destroy the plastic bags to keep them away from babies and children.
- **DO NOT** leave the high chair near walls, curtains, or windows, where the child can become tangled, or where a child may be able to use its feet to push against the high chair.
- To avoid the risk of fire, **NEVER** leave the high chair near sources of strong heat such as open fires, electric heaters, and gas stoves. If the chair is exposed to direct sunlight, wait for it to cool down before placing your child in it.
- **DO NOT** use accessories, spare parts, and components other than those supplied by Chicco.

PARTS LIST

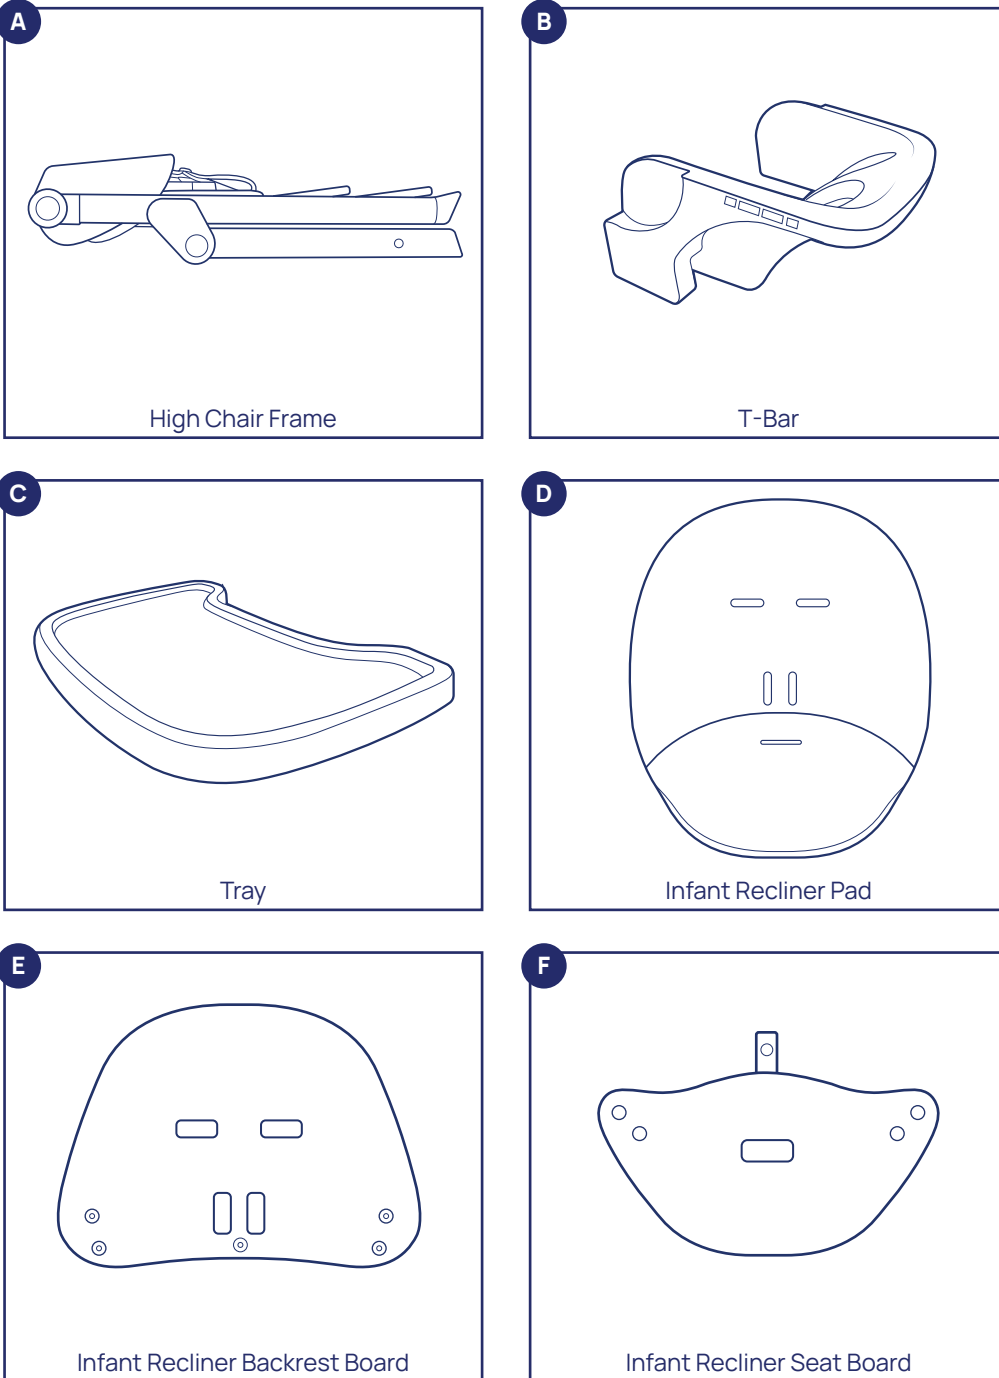

PRODUCT CONFIGURATIONS

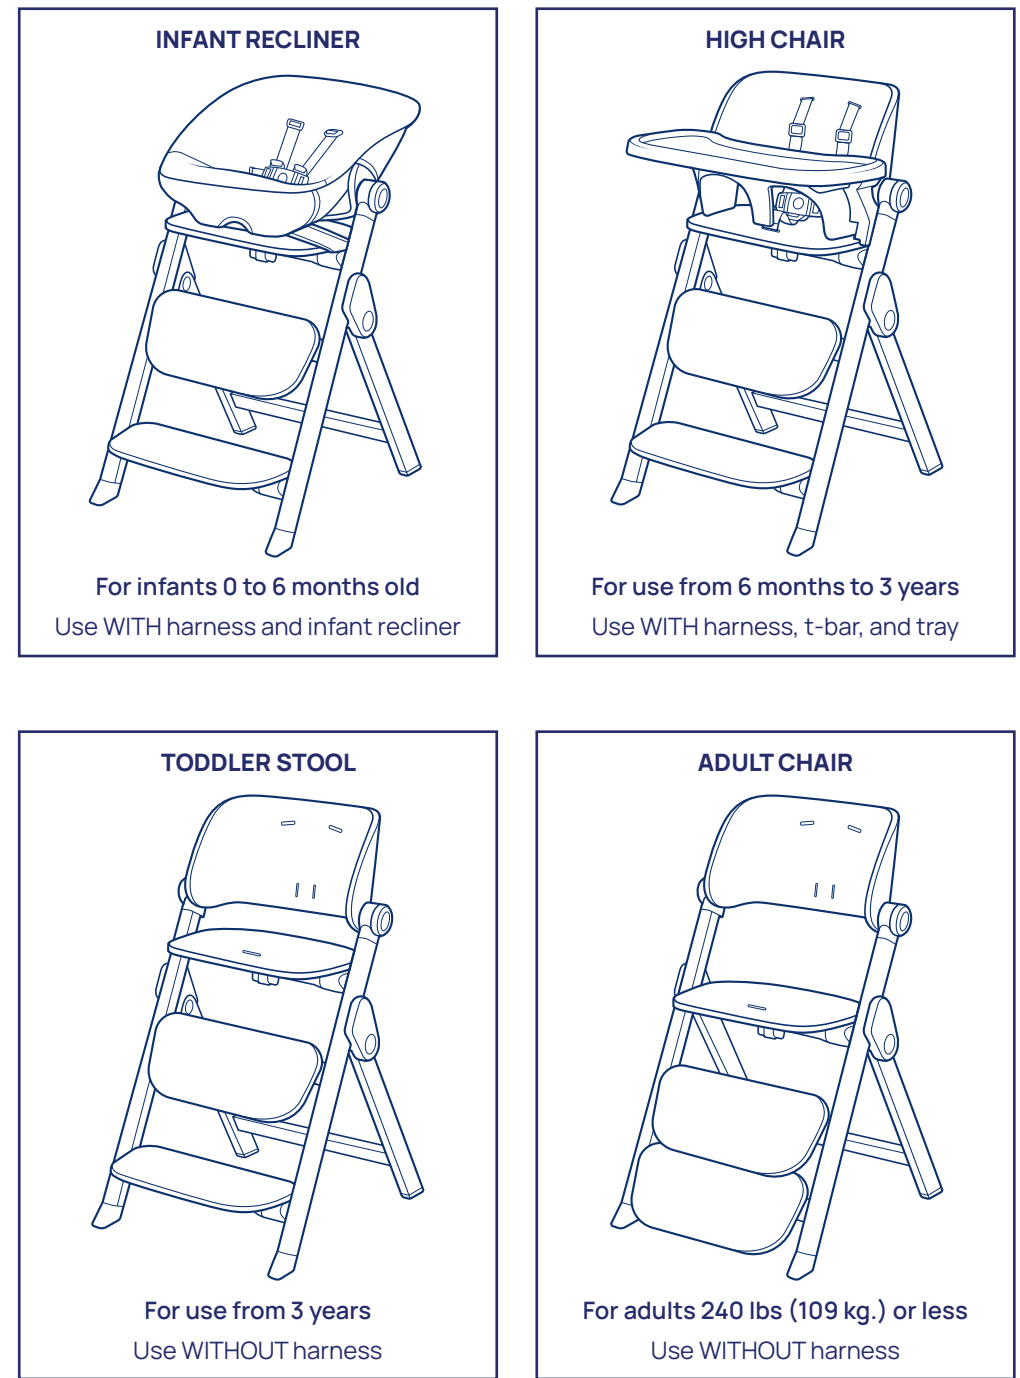


OPENING THE HIGH CHAIR


⚠ WARNING: When opening the high chair, ensure that all children are at a safe distance. Make sure the movable parts of the high chair do not come into contact with your child.

- 1 Stand the high chair frame (A) up and pull out the back legs until they lock into place.


Make sure the back legs are locked into the open position by pressing in on them.

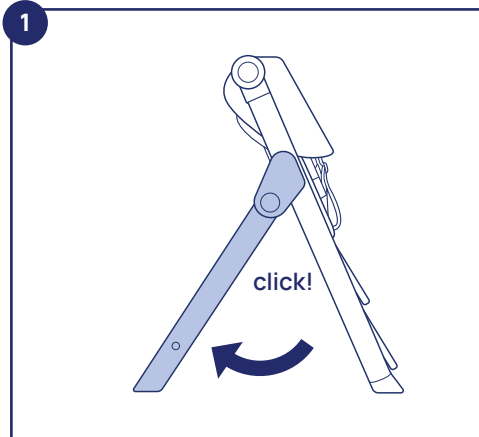

- 2 Rotate the seat back up until it locks into place.

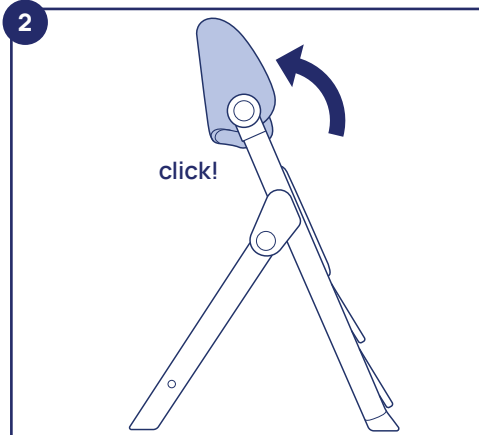

- 3 Rotate the seat bottom up until it locks into place.

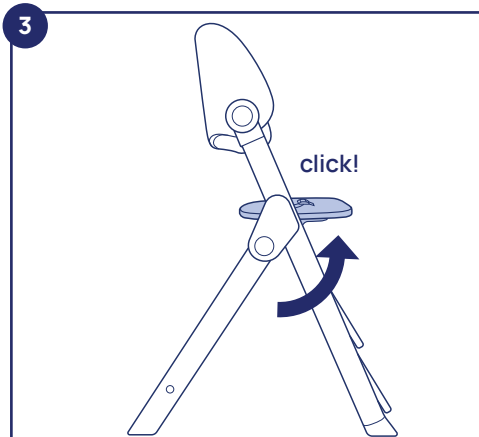


ADJUSTING THE SEAT HEIGHT AND FOOTRESTS

⚠ WARNING: DO NOT adjust the height with child in the product.


- 1 The seat height can be adjusted to 2 different height positions.

Raise or lower the seat by squeezing the adjustment buttons underneath the seat bottom and sliding it up or down.

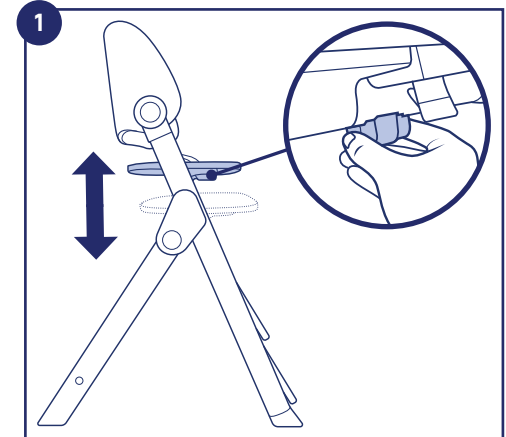


- 2 The 2 footrests, can be raised or folded down in any combination to best fit your child.

To raise the footrests, rotate them up until they lock into place.

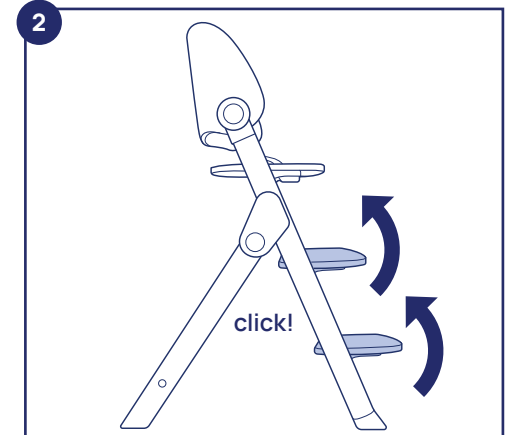


- 3 Fold down the footrests by pulling the handle underneath them.

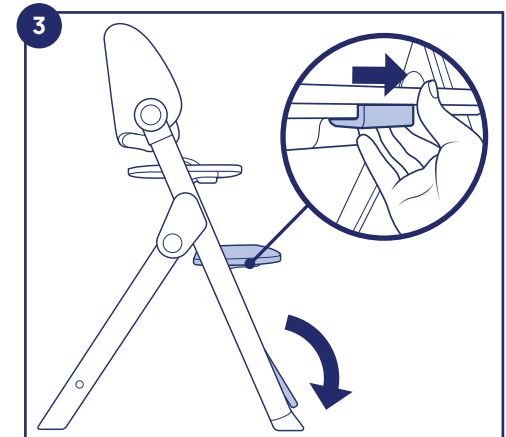

SETTING UP THE INFANT RECLINER


- 1 Remove the waist straps by flattening the ribbon tab at the back of the high chair and pushing it through the slot.

Make note of the left and the right straps.

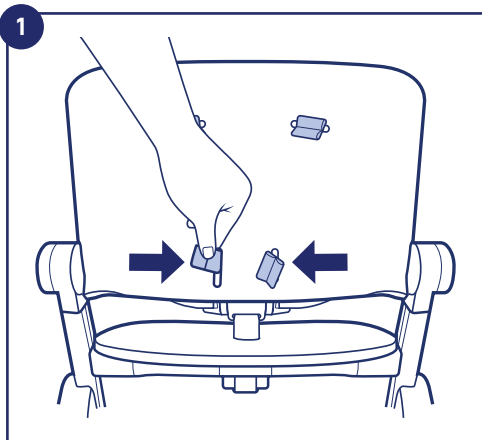


- 2 Repeat for the shoulder straps.

Make note of the left and the right straps.

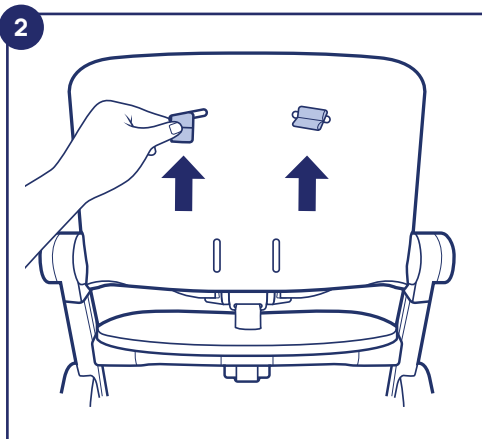


- 3 Lay the shoulder and waist straps out on a flat surface with the left and the right straps together to help when assembling the infant recliner pad.


Note: The crotch strap should be left attached to the seat.

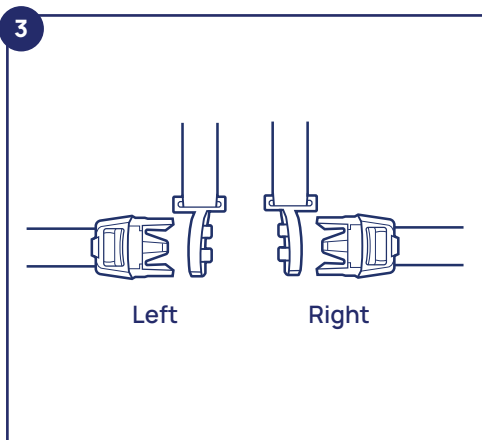


- 4 Squeeze the adjustment buttons underneath the seat bottom and slide the seat up into the highest position.

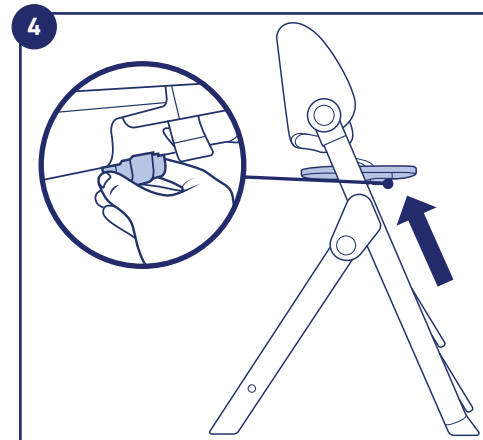


- 5 Recline the seat back by pressing the buttons on both sides.

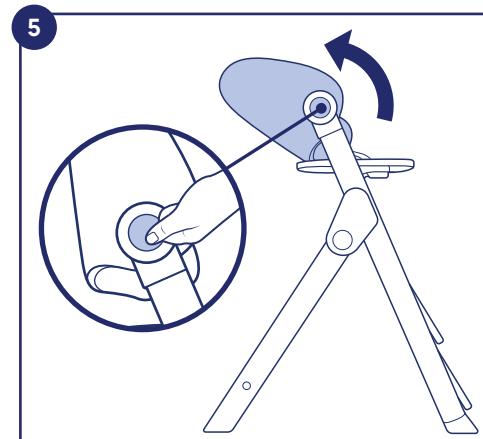


- 6 Attach the snap strap on the infant recliner seat board (F) to the infant recliner backrest board (E).

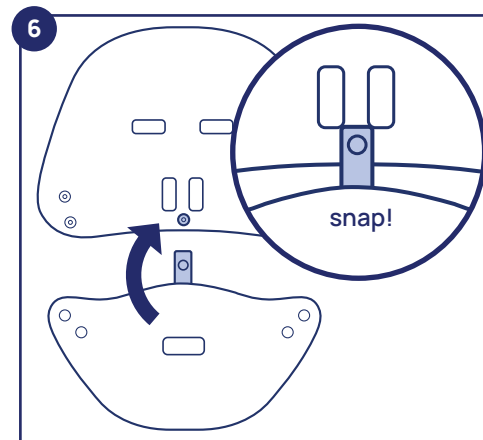

- 7** Finish attaching the **infant recliner seat board** to the **infant recliner backrest board** by securing the 4 remaining snaps.

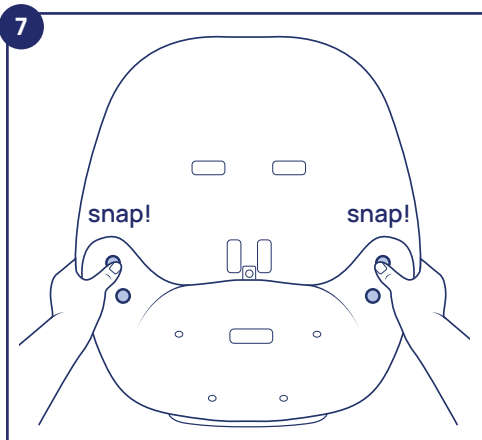


- 8** Lay the **infant recliner pad (D)** face down and open the hook-and-loop tab on the board pocket.

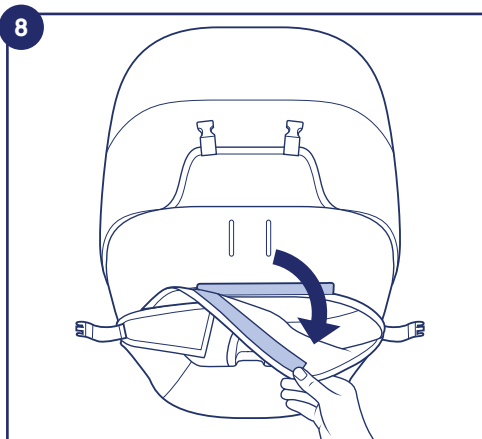


- 9** Slide the assembled infant recliner board into the board pocket face down.

Tip: The infant recliner board may be bent slightly to help when inserting it into the board pocket.

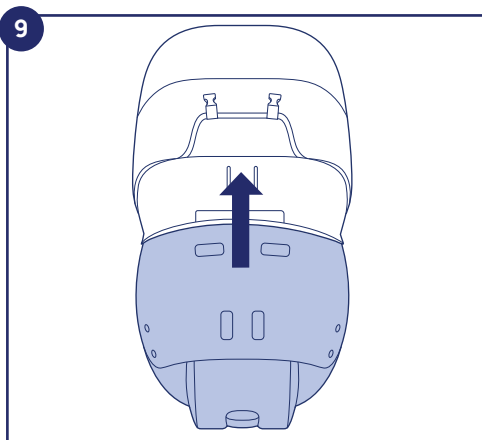


- 10** Fold the bottom of the board pocket around the infant recliner seat board and secure the hook-and-loop tab.

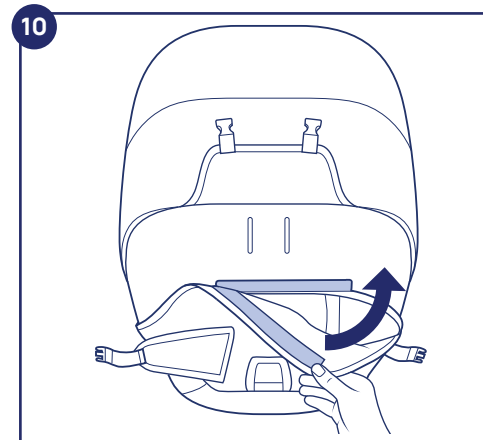


- 11** Loosen the waist straps by sliding the them through the waist clip and d-ring.

Loosen the shoulder straps by sliding the adjustment buckle down and pulling the strap out.

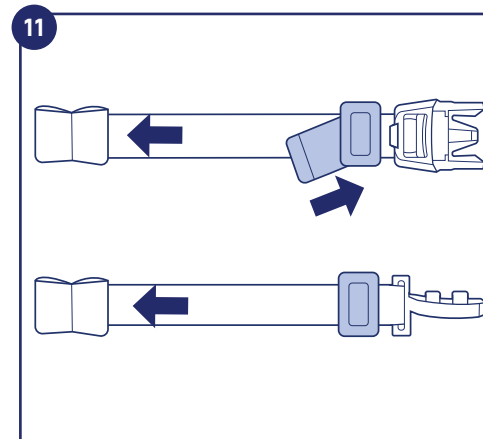


- 12** Thread the left shoulder and waist straps through the button holes on the **infant recliner pad**.

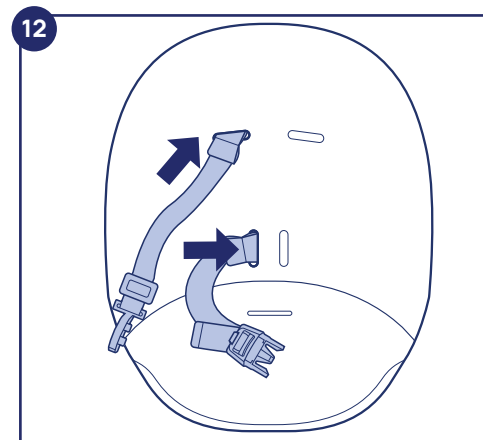

SETTING UP THE INFANT RECLINER


- 13** Flip the **infant recliner pad** over and pull the left shoulder and waist straps through the back.

Pull the straps fully through back so there is enough loose strap to attach to the chair seat back.

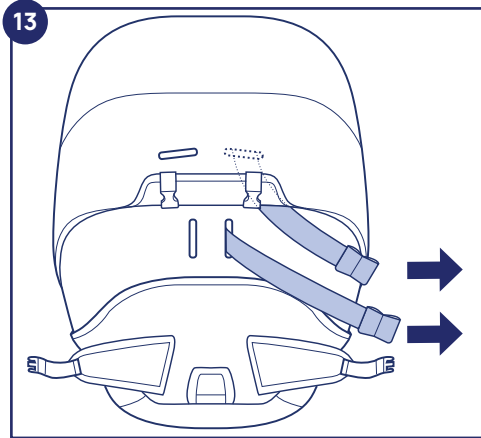


- 14** Repeat for the right shoulder and waist straps.

Pull the straps fully through back so there is enough loose strap to attach to the chair seat back.

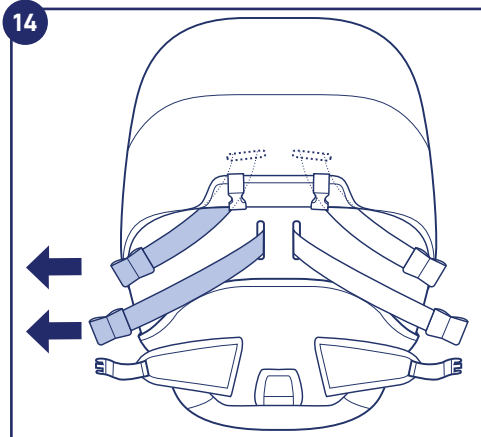


- 15** Lay the **infant recliner pad** over the seat. Thread the waist straps through the bottom slots on the back of the high chair.

Pull on the straps to ensure they are securely connected.

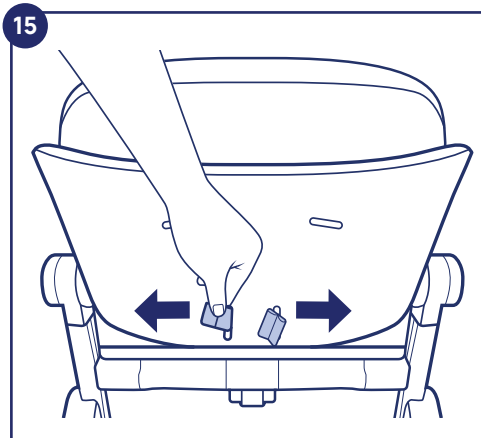


- 16** Thread the shoulder straps through the top slots on the back of the high chair.


Pull on the straps to ensure they are securely connected.

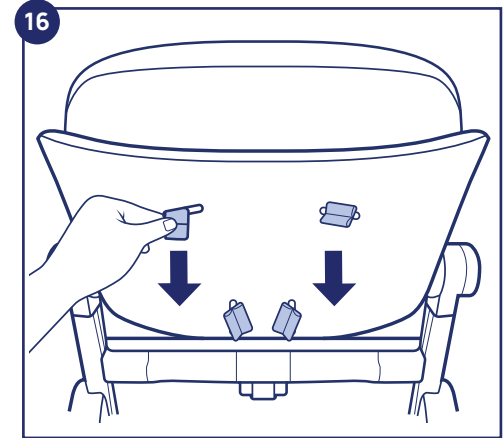

- 17** Slide the fabric pocket on the back of the **infant recliner pad** over the back of the high chair.

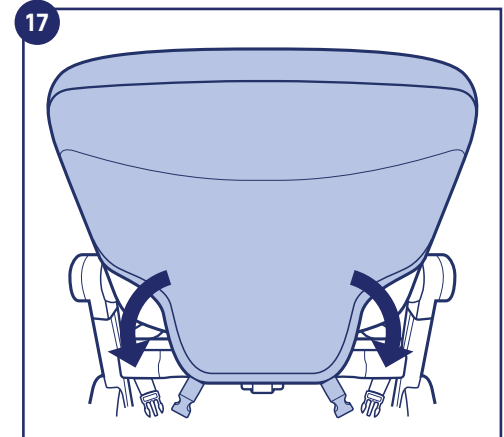


- 18** Push the crotch strap up through the bottom slot on the **infant recliner pad**.

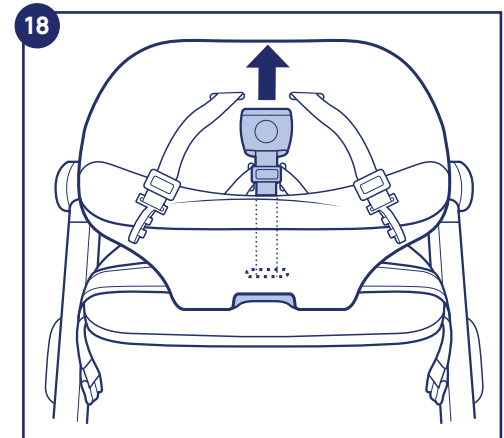

SETTING UP THE INFANT RECLINER


- 19** Buckle BOTH of the straps on the infant recliner pad under the base of the seat.

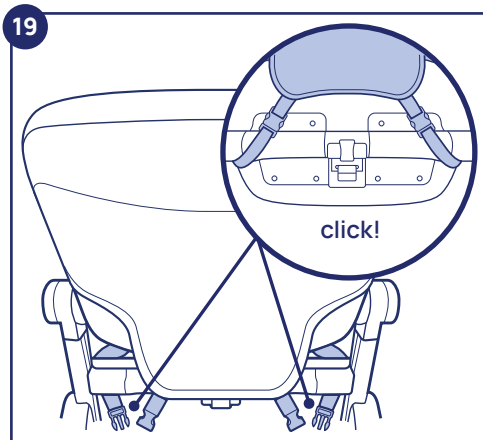

- 20** To remove the infant recliner follow steps 11 - 19 in reverse. Then reattach the waist straps and shoulder straps to the back of the high chair.


Attach the waist straps.

Pull on the straps to ensure they are securely connected.

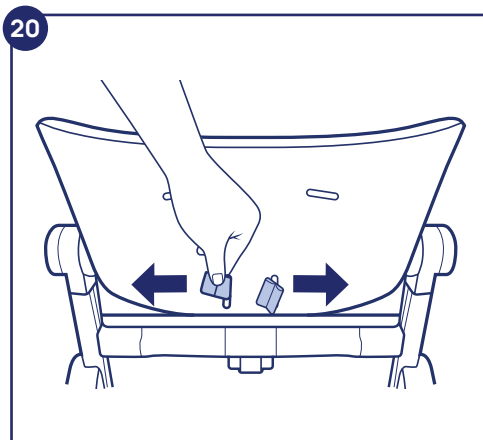


- 21** Attach the shoulder straps.

Pull on the straps to ensure they are securely connected.

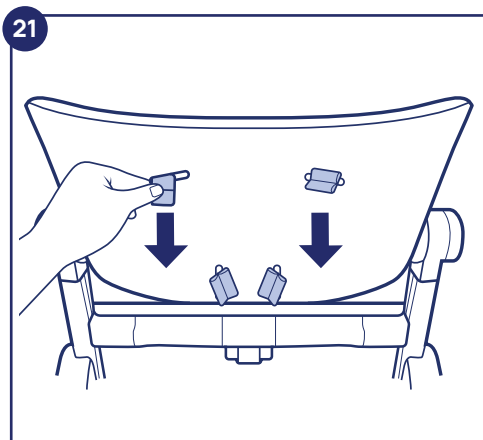


SETTING UP THE HIGH CHAIR

- 1** Make sure the seat back is locked into the upright position.

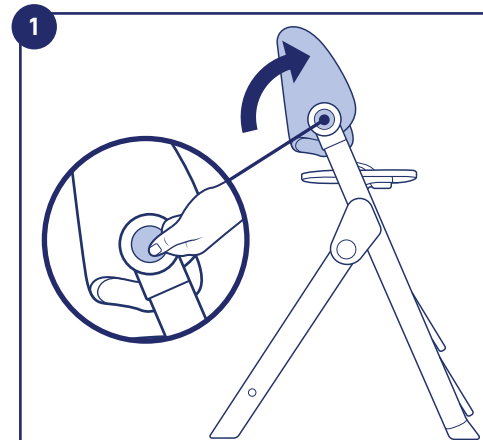


⚠ WARNING: Use the t-bar ONLY when the seat is in the top position.

- 2** Squeeze the adjustment buttons underneath the seat bottom and slide the seat into the highest position.

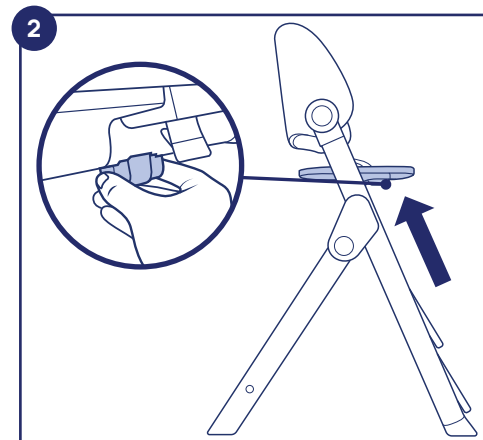


⚠ WARNING: T-bar and tray are not designed to hold child in chair.

- 3** Slide the t-bar (B) into the slots on either side of the high chair frame. Make sure the t-bar is locked into place.

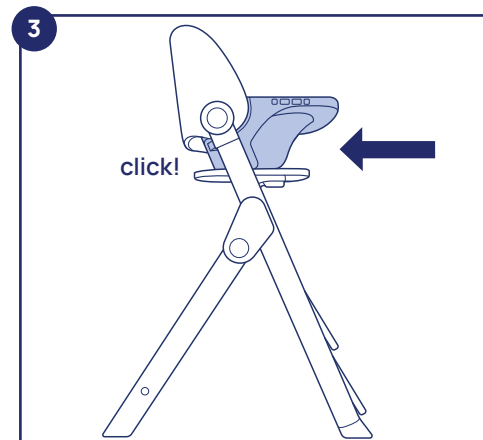


- 4 To remove the **t-bar**, squeeze both release buttons on the inside of the **t-bar** and pull it out.

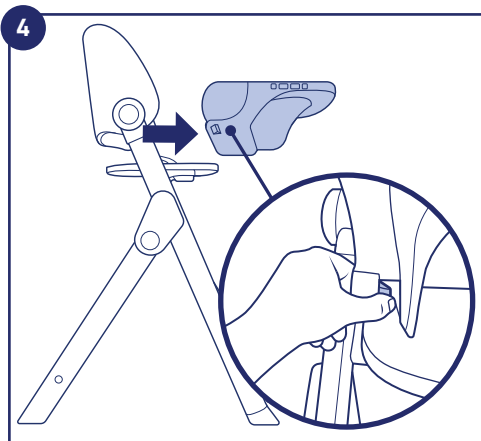


⚠ WARNING: Always ensure that the tray is locked correctly on to the **t-bar** before use.

- 5 Place the **tray (C)** on the **t-bar** and push down to click it into place.

Wiggle the **tray** front to back to ensure it is securely engaged.

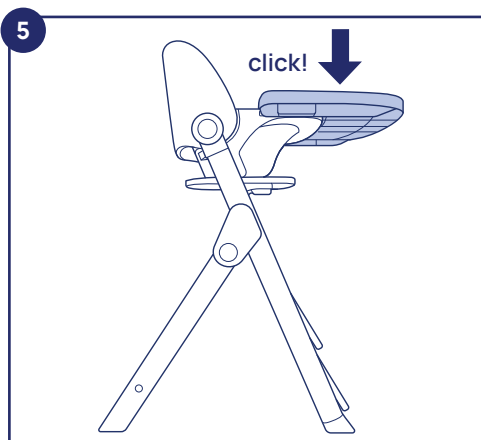


- 6 Squeeze the adjustment levers on either side of the **tray** to slide it into the desired position.

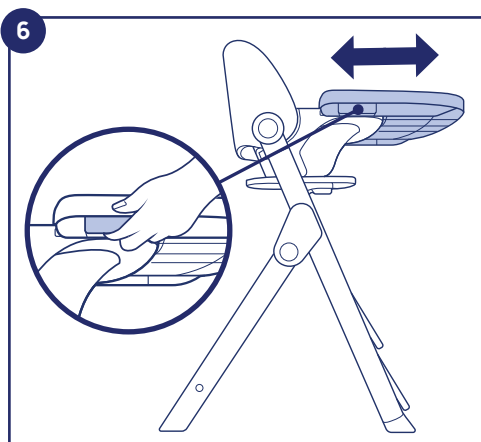


- 7 The **tray** can be adjusted to 2 positions.

Always check that the **tray** is securely connected to the **t-bar** after adjusting positions.

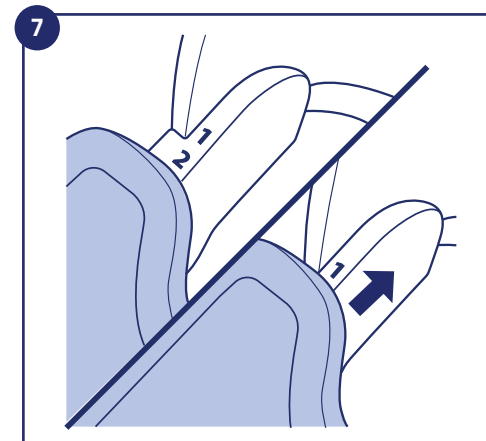


- 8 Remove the **tray** by squeezing the adjustment levers on either side and lifting up.

Using the **tray** in high chair mode is optional.

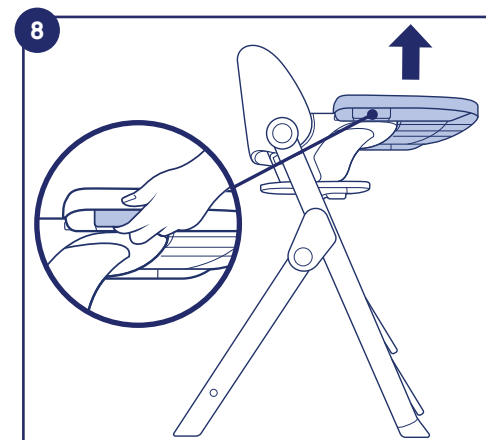


- 9 In **HIGH CHAIR MODE** the shoulder straps can be removed and the waist/crotch straps can be used alone.

To remove the shoulder straps, flatten the ribbon tab at the back of the high chair and push both straps through the slots.

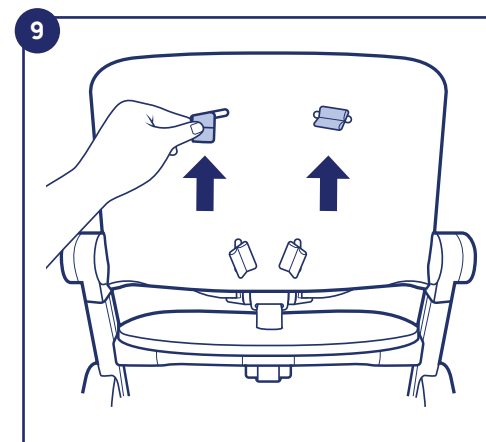


⚠ FALL HAZARD: Children have suffered **severe** head injuries including skull fractures when falling from high chairs. Falls can happen suddenly if child is not restrained properly. Always use harness, and adjust to fit snugly.

- 1 Press the button in the center of the crotch buckle and release both waist strap clips.

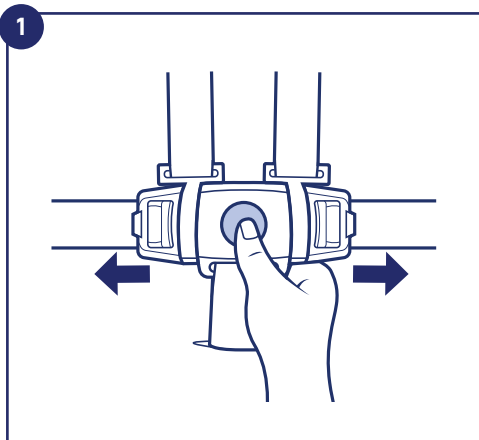


- 2 Pull up on the shoulder strap connector to unclip it from the waist strap clip.


The bottom of the shoulder strap connector is designed to break away from the waist strap clip when not secured in the crotch buckle.

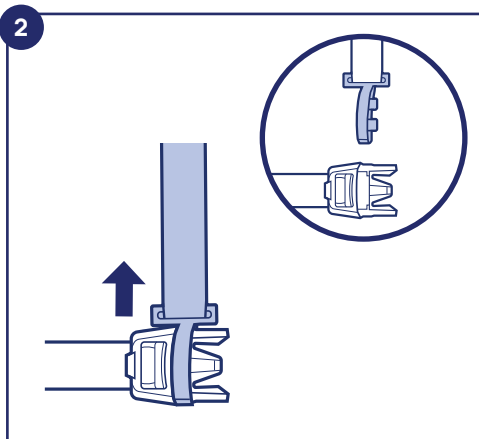

- 3 After placing your child in the high chair, lay the shoulder strap connector in the correct position.

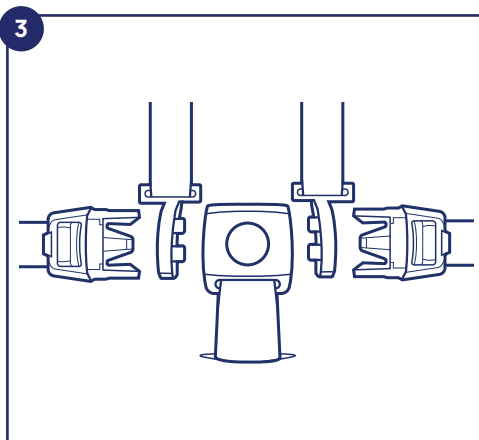


- 4 Slide the shoulder strap connector onto the waist clip.

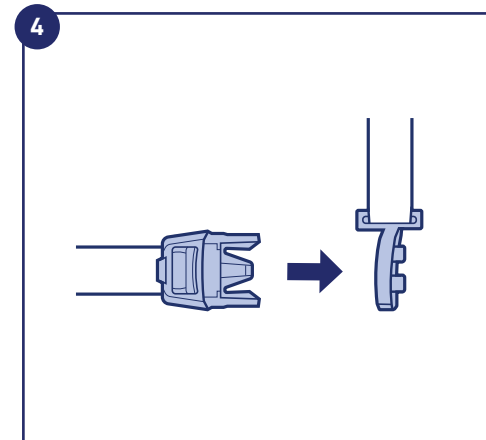


- 5 Slide the waist clip into the crotch strap buckle and listen for a click.

Repeat steps 4 and 5 for the other side.


Tip: Pinch the waist clip and shoulder strap connector together as you slide them in the crotch strap buckle.

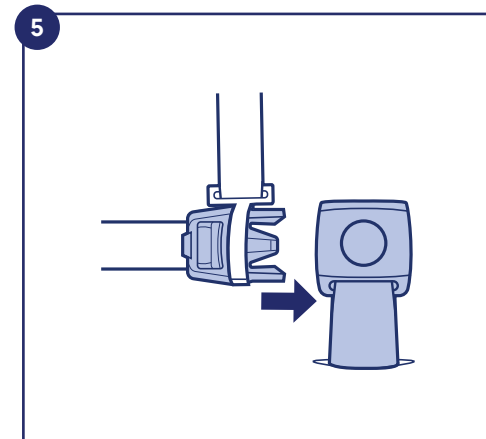


- 6 Pull both sides to make sure both clips are secured to the crotch buckle.

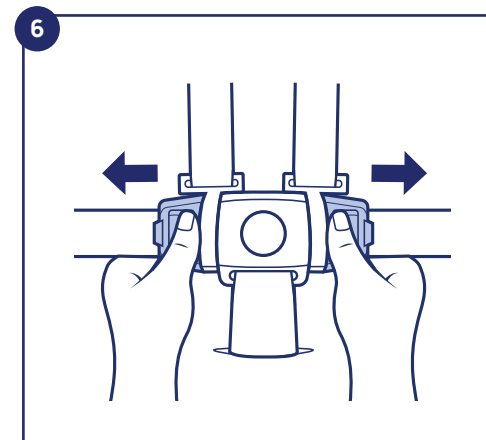

- 7 The length of the shoulder straps can be adjusted by pulling the adjustment buckles to tighten or loosen.

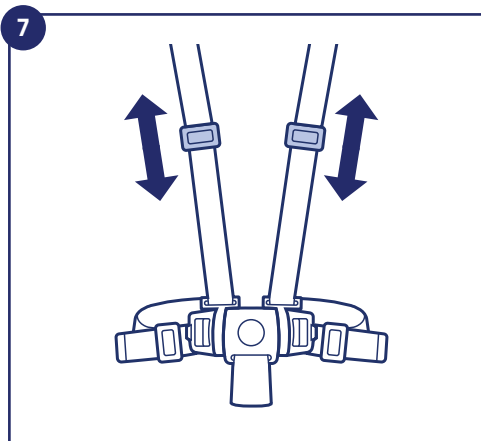


- 8 The length of the waist straps can be adjusted by sliding the strap through the waist clip and d-ring.

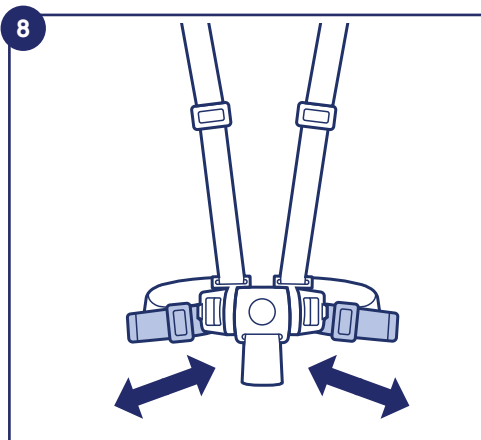


⚠ WARNING: DO NOT use TODDLER STOOL MODE for children under 3 years old.

- 1 Remove the waist and shoulder straps by flattening the ribbon tabs at the back of the high chair and pushing them through the slots.

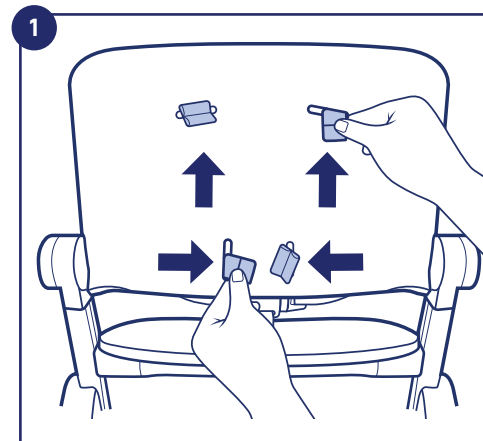


- 2 Remove the crotch strap by flattening the ribbon tab underneath the seat and pushing it through the slot.

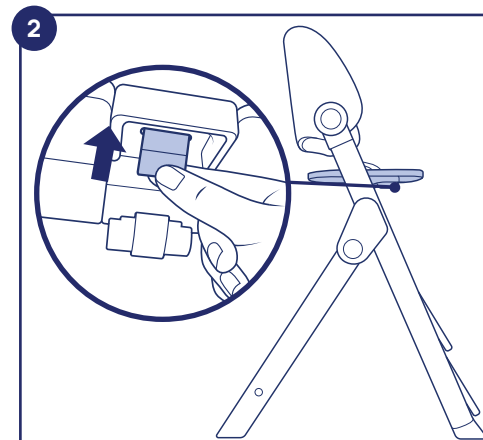


- 3 Squeeze the adjustment buttons underneath the seat bottom and slide the seat into the highest position.

The 2 footrests can be rotated to best fit your needs.

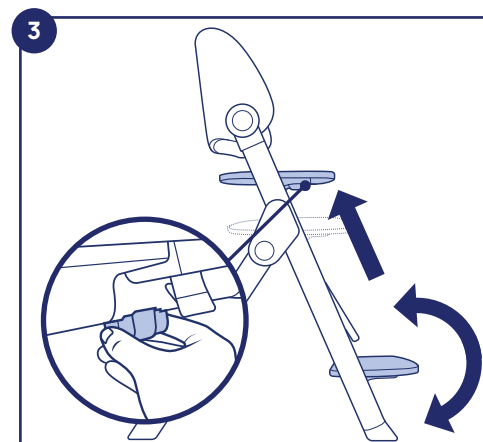


⚠ WARNING: DO NOT use ADULT CHAIR MODE for adults weighing more than 240 lbs (109 kg.).

- 1 Remove the waist and shoulder straps by flattening the ribbon tabs at the back of the high chair and pushing them through the slots.

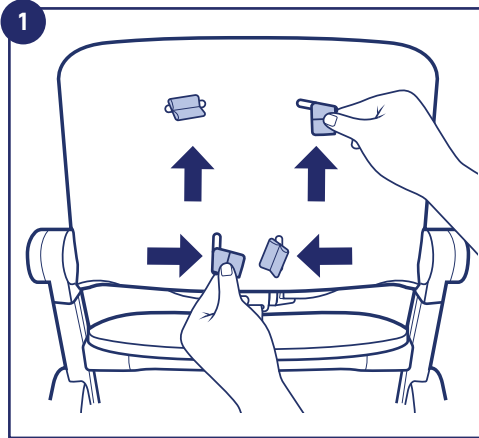


- 2 Remove the crotch strap by flattening the ribbon tab underneath the seat and pushing it through the slot.

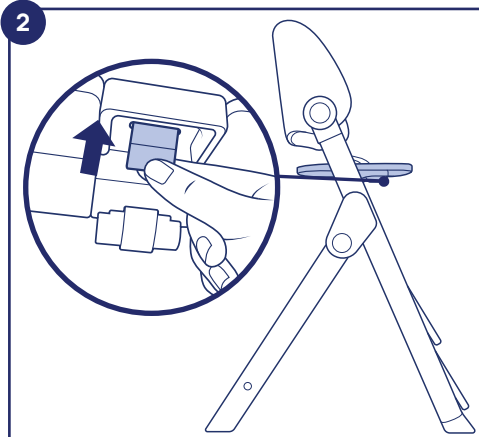


- 3 Squeeze the adjustment buttons underneath the seat bottom and slide the seat into the lowest position.

The 2 footrests can be rotated to best fit your needs.

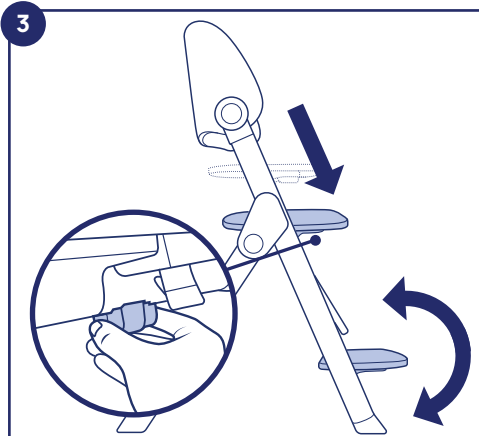


- 1 Remove the infant recliner, tray, and t-bar, if in use.


Fold both footrests by pulling the handle underneath them.

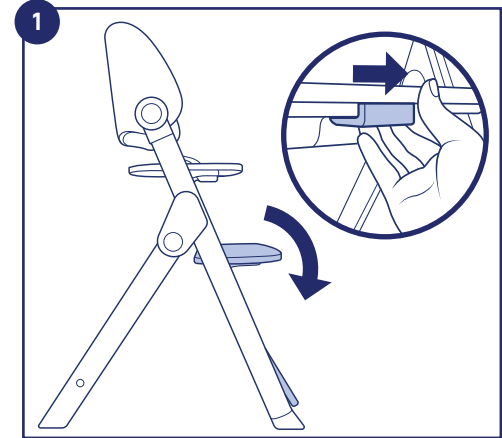

- 2 Squeeze the adjustment buttons underneath the seat bottom and slide the seat into the lowest position.

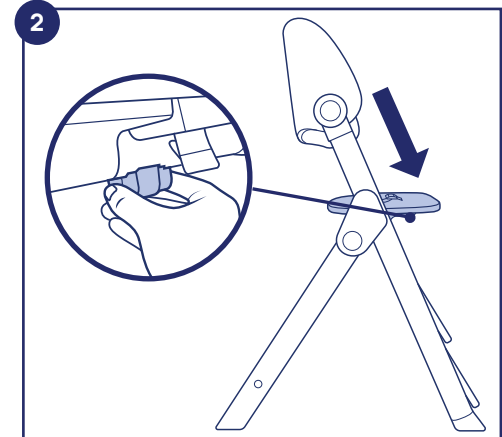


- 3 Pull the handle underneath the seat bottom and fold the seat bottom down.

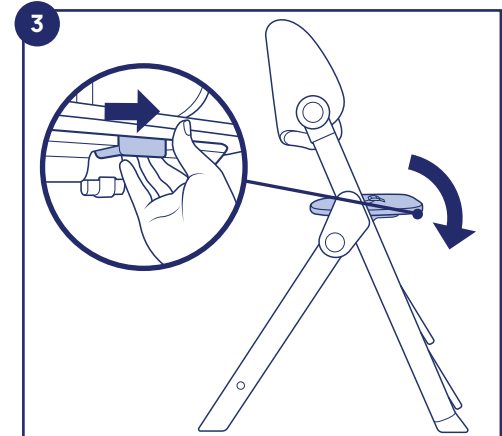


FOLDING THE FRAME

- 4 Press the buttons on both sides of the seat back and rotate forward.

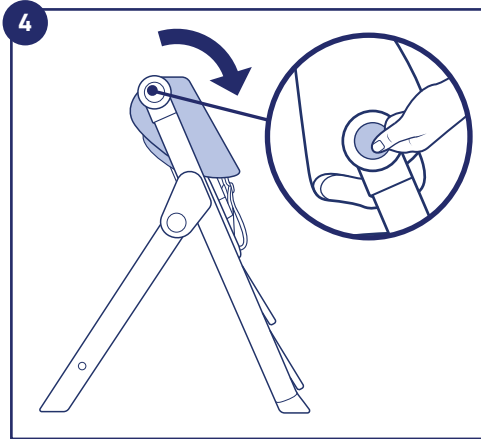


- 5 Press the buttons on both sides of the frame while tilting the **high chair frame** forward.

The rear legs will rotate in.

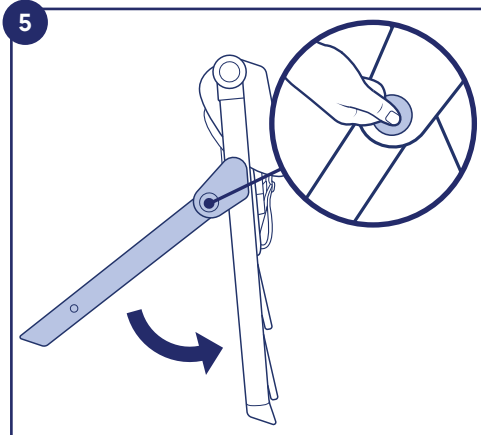


- 6 When the front and rear legs are rotated in, the folded **high chair frame** will stand.

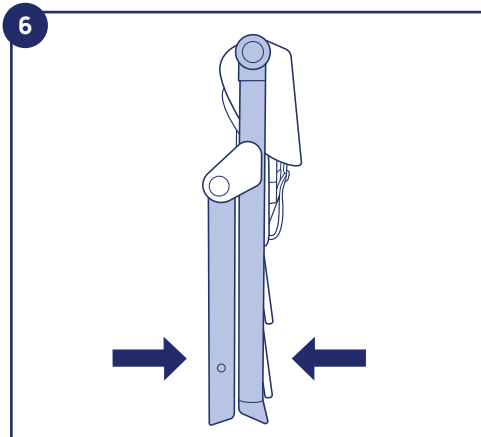


CLEANING THE INFANT RECLINER

- 1 The **infant recliner pad** can be machine washed separately in cold water on delicate cycle using mild detergent.

The boards need to be removed before washing. Lay the **infant recliner pad** face down and open up the hook-and-loop tab on the board pocket.

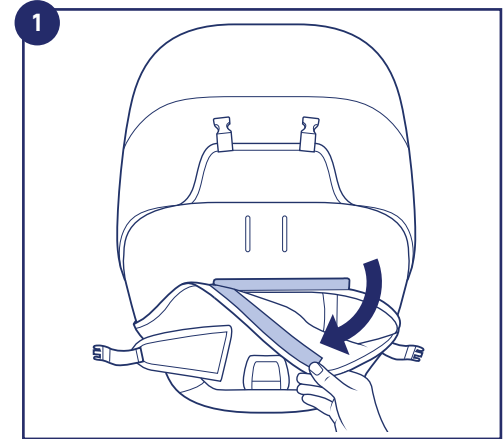

- 2 Slide the infant recliner boards out of the board pocket.

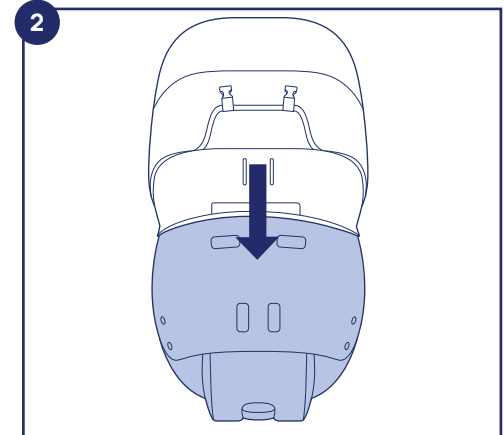

This product performs best with regular maintenance. The cleaning and maintenance of the high chair must only be carried out by an adult.

CLEANING

Spot clean wood using warm water and mild detergent; air dry.

The **Infant recliner pad** may be machine washed separately in cold water on delicate cycle using mild detergent. Always remove the backrest board and seat board from the **Infant recliner pad** before cleaning. Do not use bleach; hang dry.

The silicone 5-point harness can be wiped clean using a soft damp cloth.

Periodically wipe plastic parts clean with a soft damp cloth. The **tray** and **t-bar** can be wiped clean using a soft damp cloth. Do not bleach and do not submerge in water.

MAINTENANCE

Lubricate the moving parts only if necessary with a light application of a silicone-based lubricant.



Live it. *Love it.*

If you have any problems with your Chicco product, or any questions regarding use, please do not return this product to the store. Contact us in one of the following ways:

Call Chicco Customer Service:

1-877-424-4226

Visit our website:

ChiccoUSA.com

Email us:

info.usa@artsana.com

[**Kee-Ko**] If you say it right it makes you *smile*

