




⚠️WARNING: Avoid serious injury or death to your child. Never use your Bravo Stroller without Wheels PROPERLY attached! You must read and understand the Rubber Wheel Accessory Kit instructions and the instructions in the User Guide. If you do not understand these instructions, **DO NOT** attempt to attach the Wheels, **STOP** and call Chicco at **1-877-424-4226**.

SS0014E_01

INSTRUCTIONS: Bravo Rubber Wheel Accessory Kit


IMPORTANT: Please also refer to the instructions that came with your product.

TO REMOVE FRONT AND REAR WHEELS:


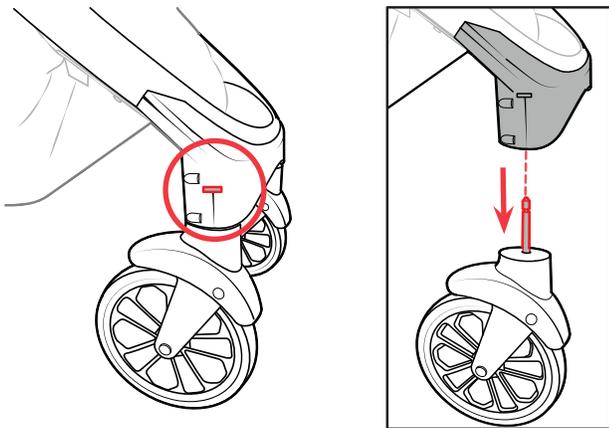


1 Remove the Front Wheels by **pushing in on the Release Button, just above the wheel** (as shown). And, at the same time, pull the Front Wheel off of the Stroller Frame. Repeat for the other Front Wheel.


Kit Includes:

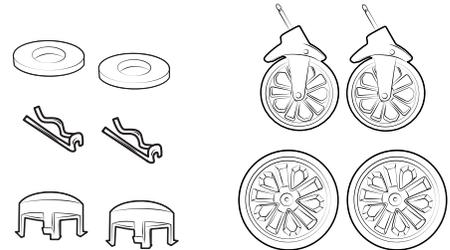


Tools Needed: Flat Blade Screwdriver
(1/8" wide)

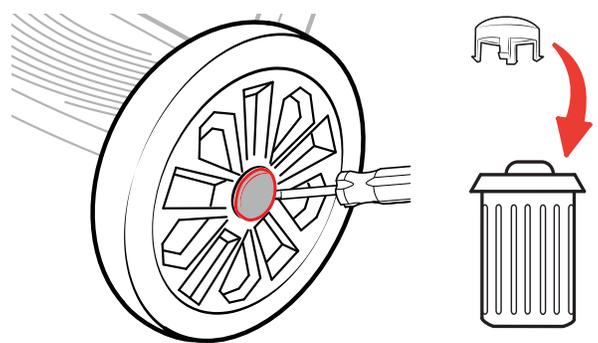


2 On one side of the stroller remove the Rear Wheel Hubcap using a flat blade screwdriver, as shown. **Discard the old Hubcap.**

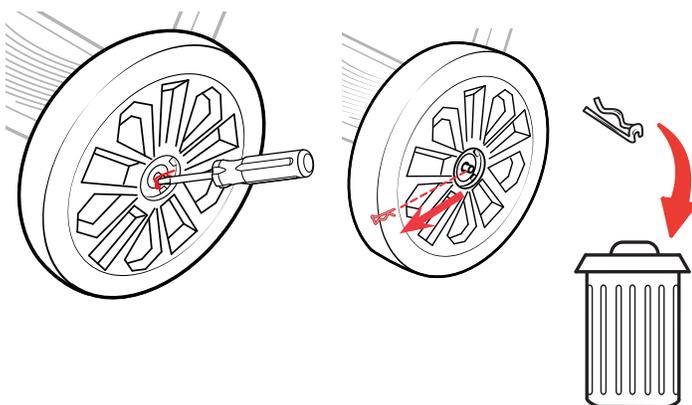

3 Remove the Pin from the Rear Axle using a flat blade screwdriver, as shown. **Discard the old Pin.**

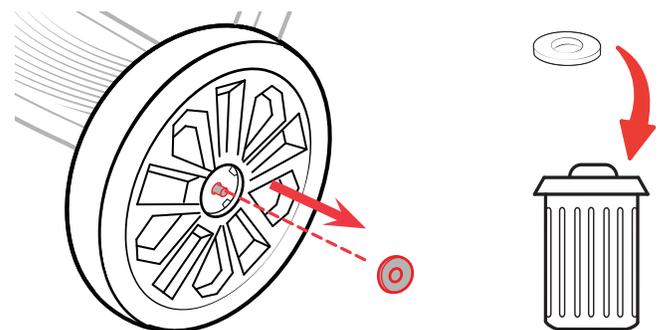


4 Remove the Washer from the Rear Axle. **Discard the old Washer.**

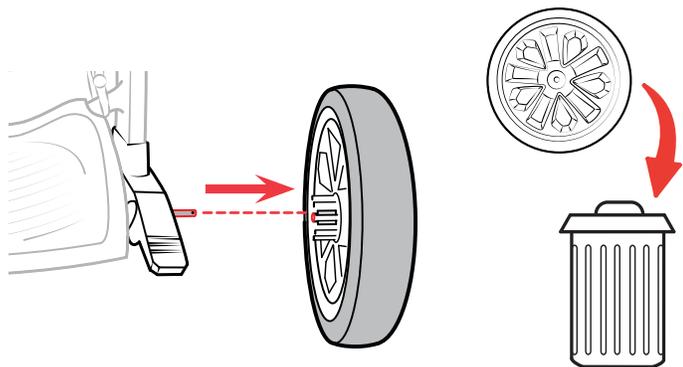


5 Remove the Wheel from the Rear Axle. **Discard the old Wheel. Repeat Steps 2-5 for other Rear Wheel.**


TO ATTACH NEW RUBBER WHEELS ACCESSORY KIT:

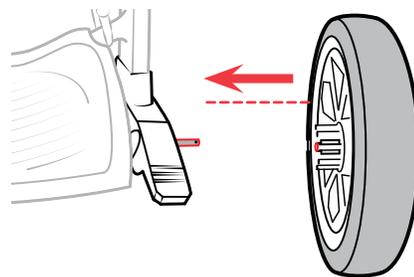


6 On one side of the Rear Axle, **slide on a Rear Wheel.** You may need to turn the Wheel until the brake tab fits into one of the grooves on the Wheel if the brake lever is down.

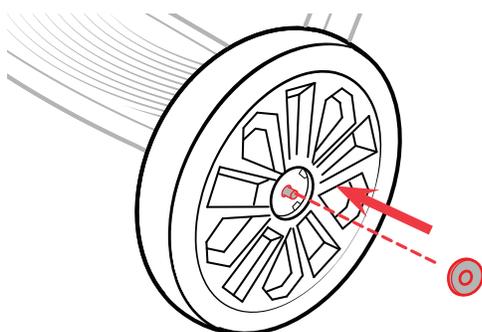


7 On the same side, **slide a Washer onto the Rear Axle.**

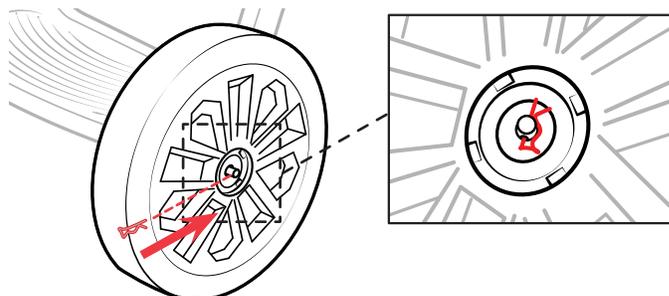

8 Secure the Wheel to the Rear Axle using the Pin. **Push the straight side of the Pin through the hole on the Rear Axle.** The curve on the Pin must curve around the outside of the Rear Axle, as shown. Make sure Washer is between the Pin and Wheel.

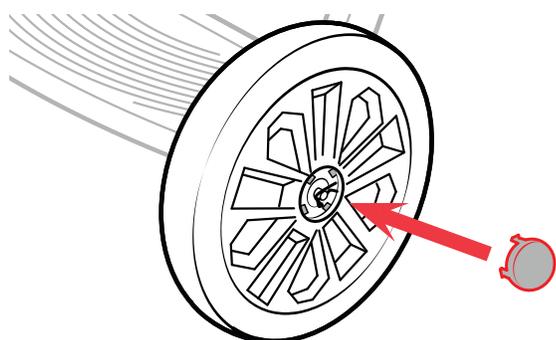

9 Line up the tabs on the Hubcap with the holes on the Wheel. **Snap the Hubcap onto the Wheel to cover the Washer and Pin.** Repeat Steps 6-9 for other side. Pull on each Wheel to make sure the Wheel assembly is securely attached to the frame.

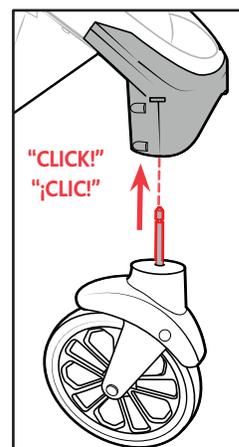

10 Attach the Front Wheel to the Stroller Frame, **line up and insert the Front Wheel Pin into the corresponding opening on the Stroller Front Leg, as shown.** Repeat for the other side.

Make sure both Front Wheels are secure by pulling down on Wheel assemblies.

⚠ WARNING: Check that the wheels are fitted correctly. Pull on Wheels after installation is complete. Make sure all wheels are properly attached. If you have a problem, retry these instructions provided AND review your User Guide. If you still have problems, STOP, Do Not use the Bravo Stroller, and call Chicco at 1-877-424-4226.