



Read all instructions **BEFORE** assembly
and **USE** of product.

KEEP INSTRUCTIONS FOR FUTURE USE.

CORSO™ PRIMO

Stroller

WARNING

Failure to follow all warnings and instructions may result in serious injury or death. For your child's safety, read the labels and owner's manual before using the product.

- PLEASE SAVE OWNER'S MANUAL FOR FUTURE USE.
- ADULT ASSEMBLY REQUIRED.
- NEVER LEAVE CHILD UNATTENDED. Always keep child in view while in the stroller.
- AVOID SERIOUS INJURY from falling or sliding out. Always use the Safety Harness. After fastening buckles, adjust belts to get a snug fit around your child.
- AVOID FINGER ENTRAPMENT: Use care when folding and unfolding the stroller. Be certain the stroller is fully opened and latched before allowing your child near the stroller.
- USE OF THE STROLLER with a child weighing more than 50 lbs (22.7 kg), will cause excessive wear and stress on the stroller. Use the stroller with only one child at a time.
- STROLLER TO BE USED only at walking speed. Product not intended for use while jogging, skating, etc.
- TO PREVENT A HAZARDOUS, UNSTABLE CONDITION, never place purses, shopping bags, parcels or accessory items on the canopy or handle. Do not place more than 10 lbs (4.5 kg) in the storage basket. Do not place more than 1 lb (0.5 kg) in the seat back pocket.
- AVOID BURNS. Never put hot liquids in cup holder.
- Do not place more than 2 lbs (0.9 kg) in the cup holder.
- AVOID BURNS. Never put hot liquids in child tray.
- Max weight in child tray 1lb (0.5 kg).
- DO NOT use storage basket as a child carrier.
- NEVER ALLOW YOUR STROLLER to be used as a toy.
- DISCONTINUE USING YOUR STROLLER should it become damaged or broken.
- AVOID STRANGULATION. DO NOT place items with a string around your child's neck, suspend strings from this product, or attach strings to toys.

WARNING

Failure to follow all warnings and instructions may result in serious injury or death. For your child's safety, read the labels and owner's manual before using the product.


- NEVER USE STROLLER ON STAIRS or escalators. You may suddenly lose control of the product and your child may fall out. Also, use extra care when going up or down a step or curb.
- Do not attempt to attach any infant car seat to the stroller other than the Chicco infant car seat. Injury or death may result when attempting to use this stroller in conjunction with infant car seats from other manufacturers.
- Before use, remove and dispose of all plastic bags and packaging materials and keep them out of reach of children.
- Before assembly, check that the product and all of its components have not been damaged during transportation.
- Do not use accessories, spare parts, or any component not supplied or approved by Chicco as they may make the stroller unsafe.

Using a Chicco Infant Car Seat with this Stroller:

- Infant Car Seat Adapter must be properly attached to use the Chicco infant car seat.
- ONLY USE a Chicco infant car seat with this product.
- Only use this product to transport infants that are within the size and weight limitations of the infant car seat.
- FALL HAZARD: Always check that infant car seat is securely attached to stroller frame by pulling up on the infant car seat.
- ALWAYS SECURE your child with the car seat harness. Always make sure child is properly harnessed in the car seat.
- Refer to your Chicco infant car seat owner's manual for additional warnings and use instructions before using this product.


Components

A.

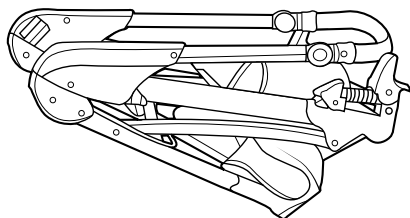


A. Stroller Frame Assembly x 1 qty

B.

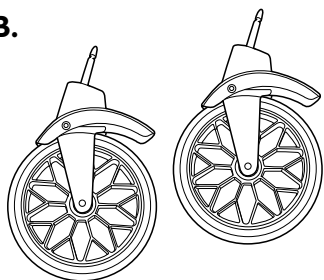


B. Front Swivel Wheels x 2 qty

C.

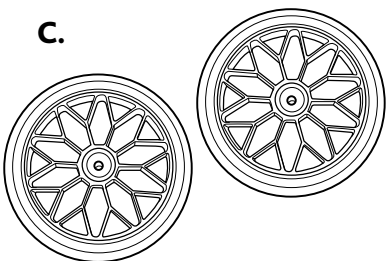

C. Rear Wheels x 2 qty

D.

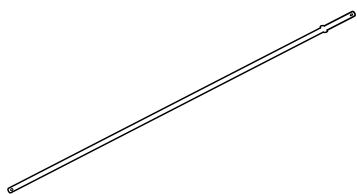


D. Rear Axle x 1 qty

Components

Parts E, F, and G are in a small red bag with the rear wheels.

E.

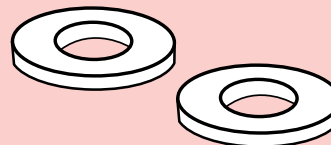


E. Washers
(Rear Wheel Hardware) x 2 qty

F.




F. Pins
(Rear Wheel Hardware) x 2 qty

G.

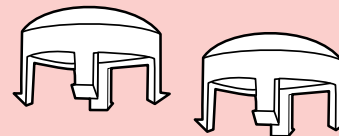


G. Hubcaps
(Rear Wheel Hardware) x 2 qty

H.

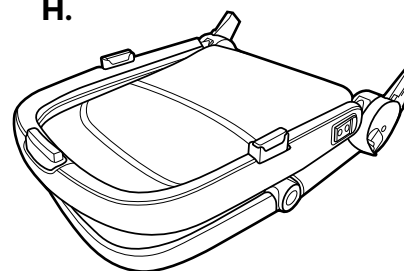

H. Modular Seat x 1 qty


I.

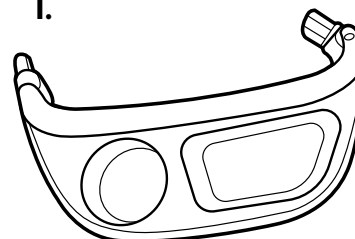

I. Child Tray x 1 qty


Components

J.

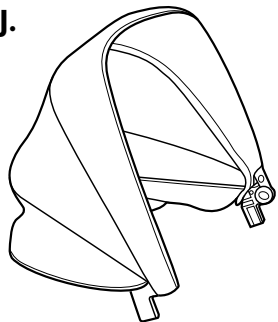


J. Canopy x 1 qty

K.

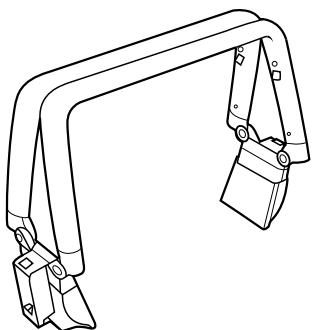

K. Infant Car Seat Adapter x 1 qty


L.

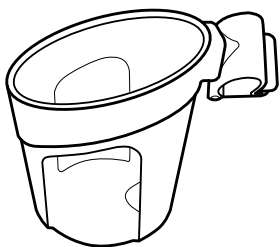

L. Corso Parent Cup Holder x 1 qty


Components

M.

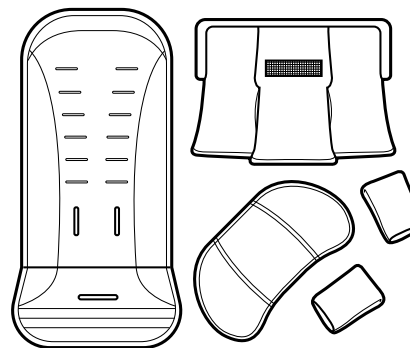

M. Corso Infant Seat Insert x 1 qty

N.

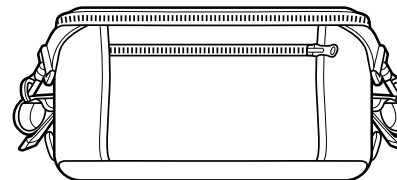


N. Parent Stash Organizer x 1 qty

How to Assemble the Stroller

⚠ WARNING


When opening the Stroller, ensure that your child, or other children, are at a safe distance. Ensure that during these operations, the movable parts of the Stroller do not come into contact with your child.

1

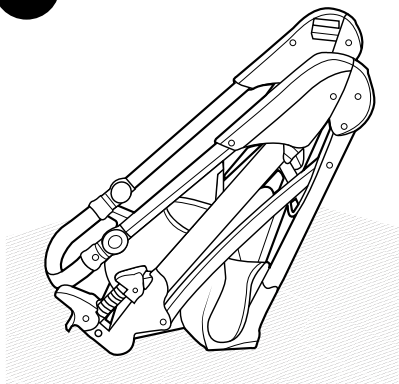


If you have hardwood floors or linoleum you may want to perform this step on carpeting or lay down some protection for your floors.

1. Stand the Stroller Frame (A) on end, as shown. Locate the handle and rotate the handle up and unfold the Stroller Frame. Make sure the frame is fully open and locked by pressing down on the handle.


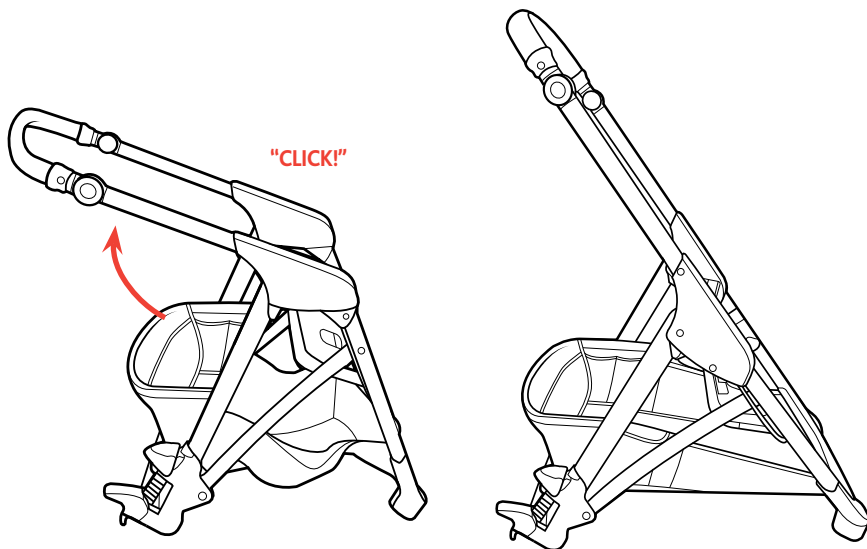


How to Assemble the Stroller

2

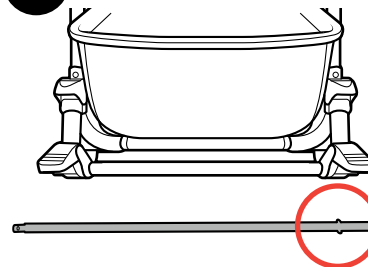


2. Insert the Rear Axle (D) into the opening on the Rear Axle Mount, as shown. Make sure to insert the end without the ears first. Slide it through until the axle comes out on the other side. Make sure the Axle is centered between both brake levers.

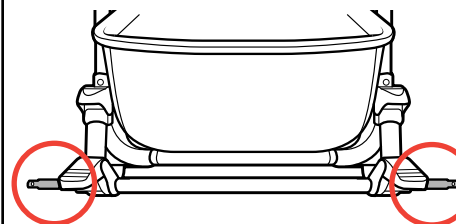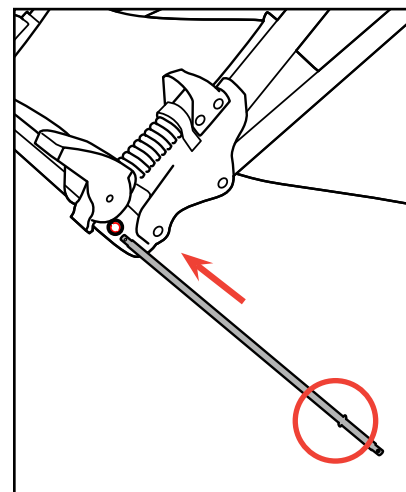


How to Assemble the Stroller

3A

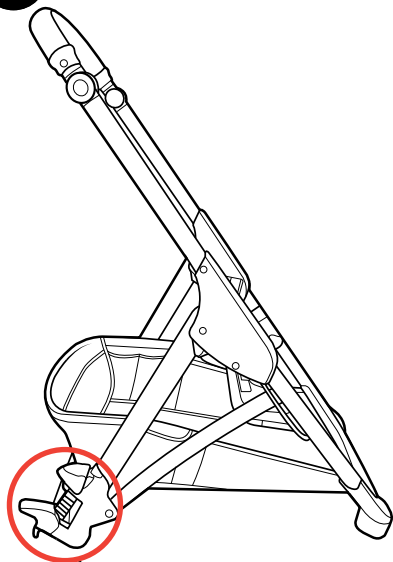


3A. On one side of the Rear Axle, slide a Rear Wheel (C), and turn the Wheel until the brake tab fits into one of the grooves on the Wheel.

The Rear Wheel is on the axle when the brake lug is in contact with the Rear Axle Mount.

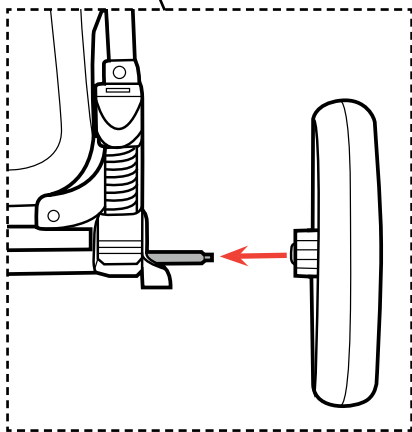


3B

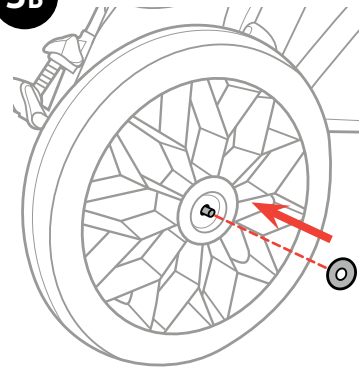


3B. On the same side slide a Washer (E) onto the Rear Axle.

3C

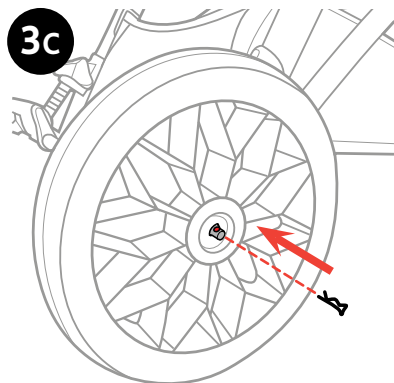

3C. Secure the Wheel to the Rear Axle using Pin (F). Push the straight side of the Pin through the hole on the Rear Axle. The curve on the Pin must curve around the outside of the Rear Axle, as shown. Make sure Washer is between the Pin and Wheel.

Repeat Steps 3A-3C for other side.

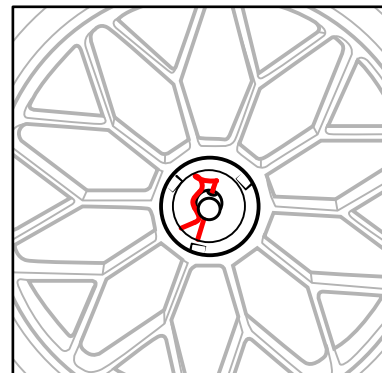


How to Assemble the Stroller

How to Assemble the Stroller

⚠ WARNING


Check that the wheels are fitted correctly.

3D

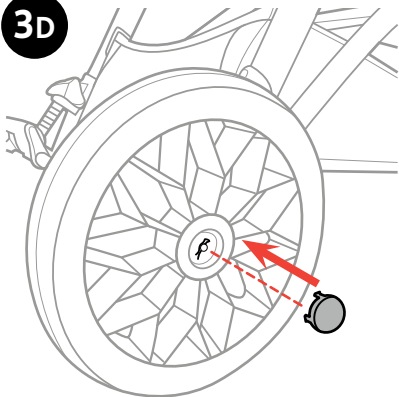


3D. Line up the tabs on the Hubcaps (G) with the holes on the Wheel. Snap the Hubcap onto the Wheel to cover the Washer and Pin. Repeat Step 3D for other side.

Note: Pull on each Wheel to ensure the Wheel Assemblies are securely attached to the axle.

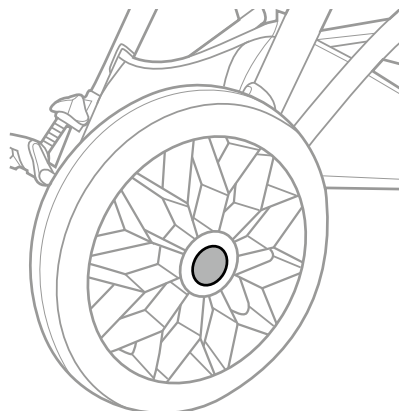


How to Assemble the Stroller

4

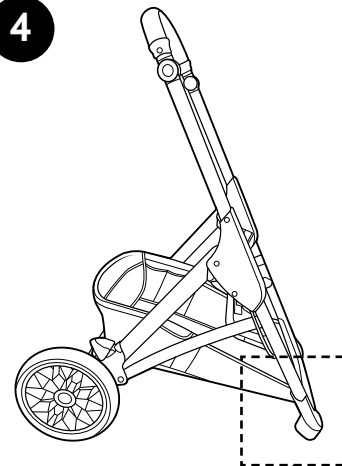


4. Attach the Front Wheel (B) to the Stroller Frame by lining up and inserting the Front Wheel Pin into the corresponding opening on the Stroller Front Leg, as shown. Repeat for the other side.

Make sure both Wheels are secure by pulling down on Wheel Assemblies.

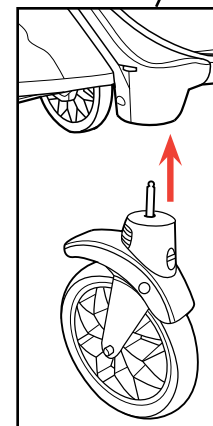

Front Wheel Swivel Locks


The stroller has front Swivel/Fixed wheels. It is recommended that you use the Swivel Mode on smooth road surfaces and the Fixed Mode on uneven surfaces. When using swivel locks, make sure both front wheels are in the same mode.

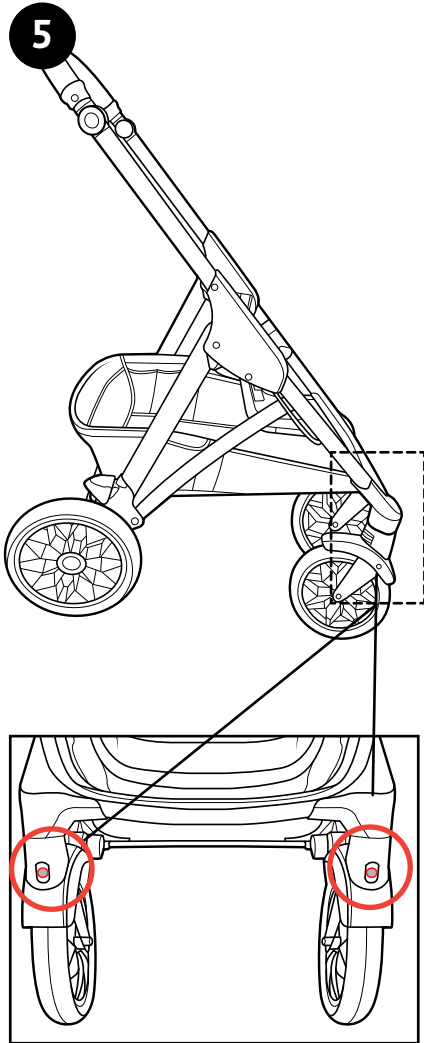

5. To release the Front Wheels to Swivel Mode, push down on the Swivel Lock Buttons located above the Front Wheels, as shown.

To lock the Front Wheels to Fixed Mode, push up on the Swivel Lock Buttons and move the stroller forward. The wheels will lock into a straight position.

How to Remove the Front Wheels

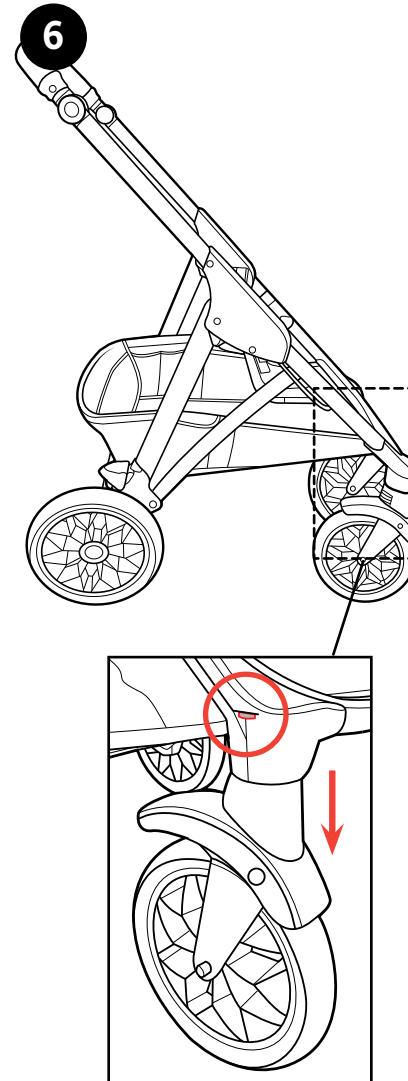


6. Remove the Front Wheels by pushing in on the Release Button above the wheel, as shown. When the Release Button is fully pressed, pull the Front Wheel off of the Stroller Frame.

Repeat for the other side.


How to Use the Seat

7A

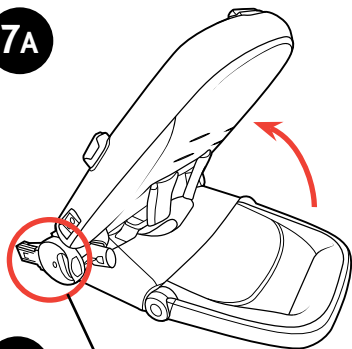


7A. Open the Modular Seat (H).

7B

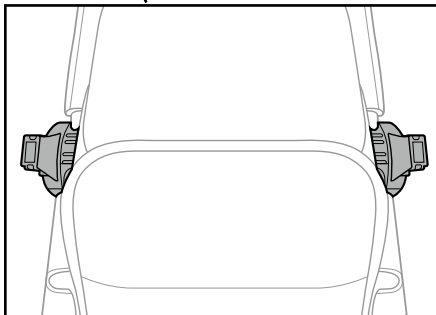


7B. Make sure both hubs on the Modular Seat are in the same position. If not, squeeze the recline handle with one hand and rotate the hub posts to align in the same position.

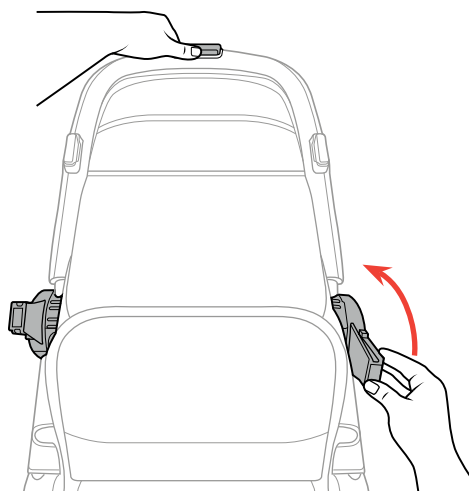


How to Use the Seat

7C

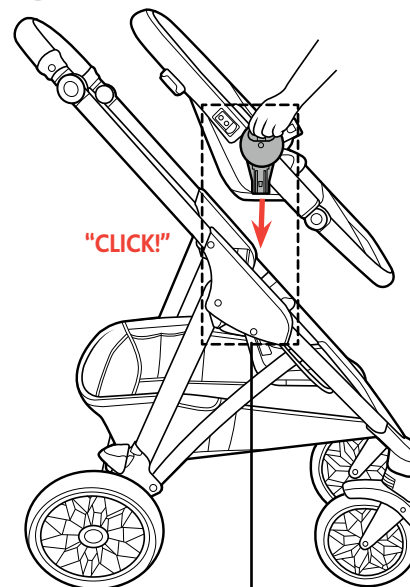


7C. Line up and insert the hubs on both sides of the Modular Seat into the hub slots on the Stroller Frame as shown (7C).

Pull up on the seat hubs to make sure it is securely attached to the Stroller Frame.

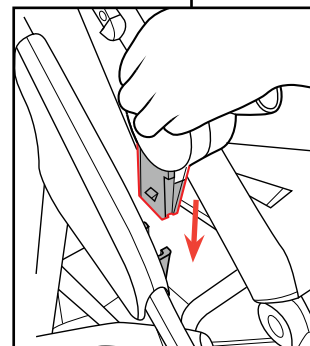


How to Use the Seat

8

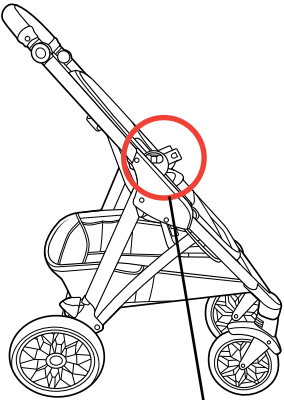


8. Press the buttons on both hubs, as shown, and pull up to remove the Modular Seat.



Note: The Modular Seat can be attached in a Forward-Facing position or a Parent-Facing position, as shown.

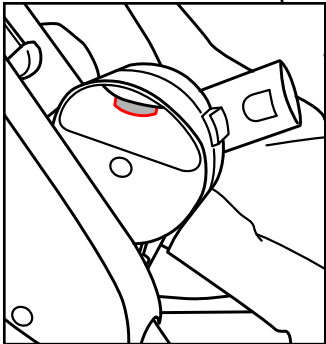

Forward-Facing Position

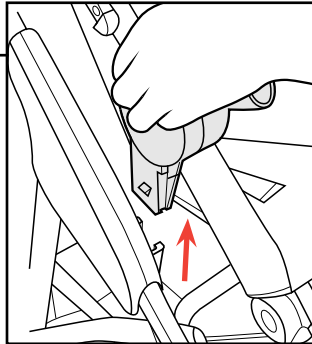


Parent-Facing Position

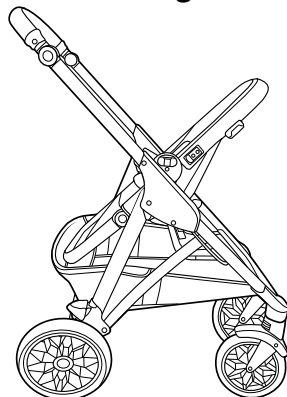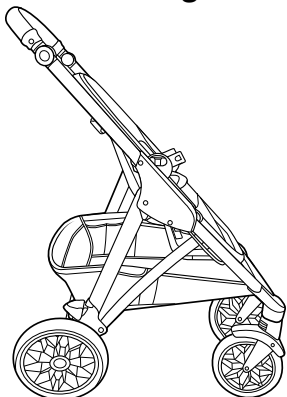

How to Adjust the Parent Handle


9

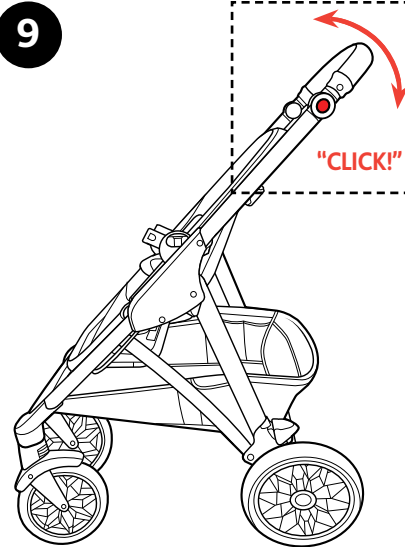


9. The Parent Handle height can be adjusted to 4 positions, as shown.

Press in on both side buttons and, at the same time, rotate the Parent Handle up or down to the desired position.


1.

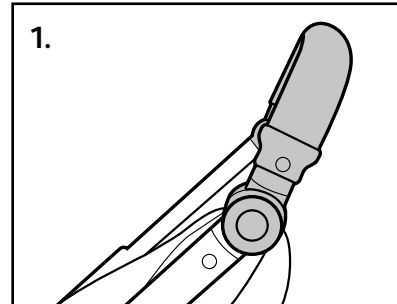


2.

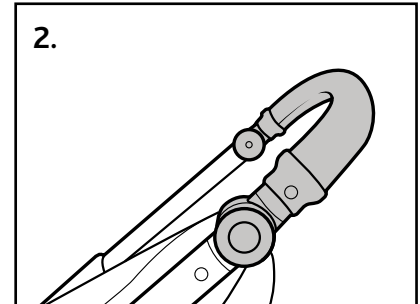

3.

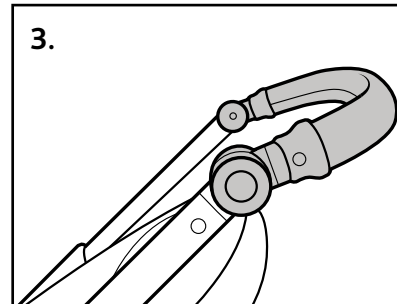


4.

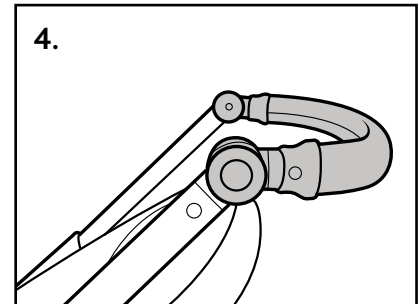


How to Use the Seat

10

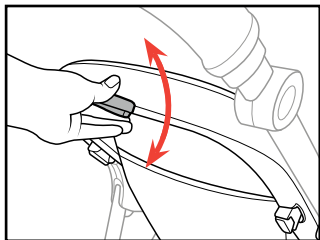


The Seat can be adjusted to 3 positions.


10. To adjust the Seat, press the Recline Button on the back of the Seat, as shown. Rotate the Seat up or down to the desired position.

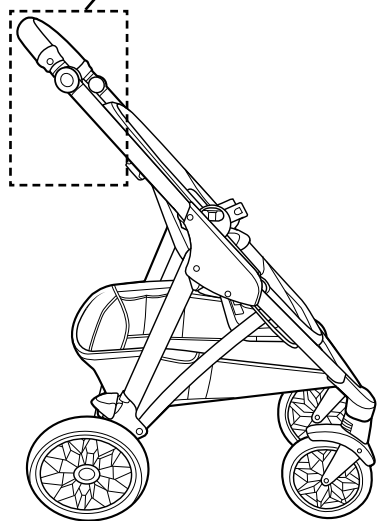


1.

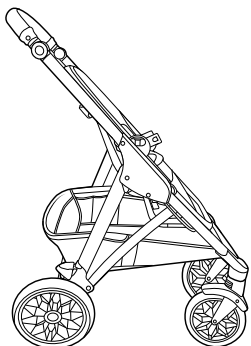

2.

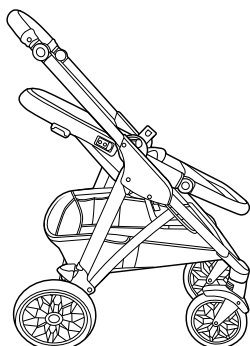


3.

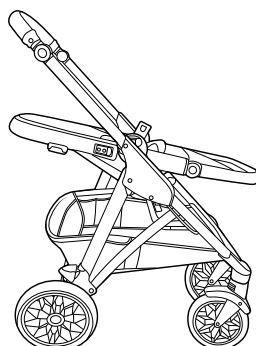

How to Use the Seat


11

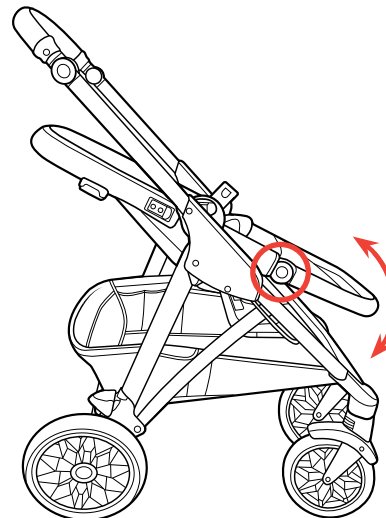


The Footrest can be adjusted to 4 positions.

11. Press in on both Footrest Buttons and, at the same time, rotate the Footrest up or down to the desired position.


1.

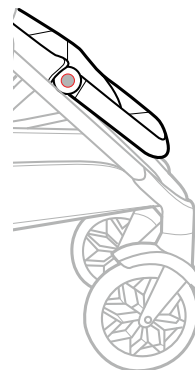


2.

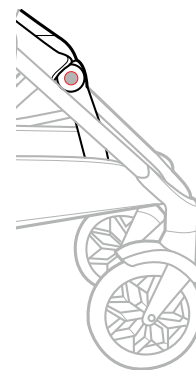

3.


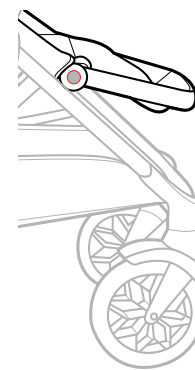


4.

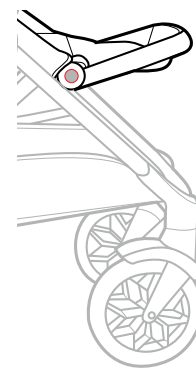


How to Use the Canopy

12

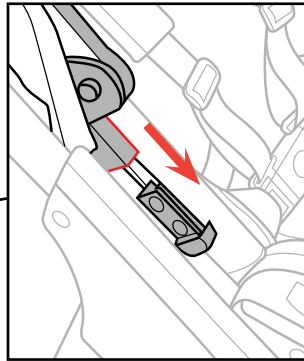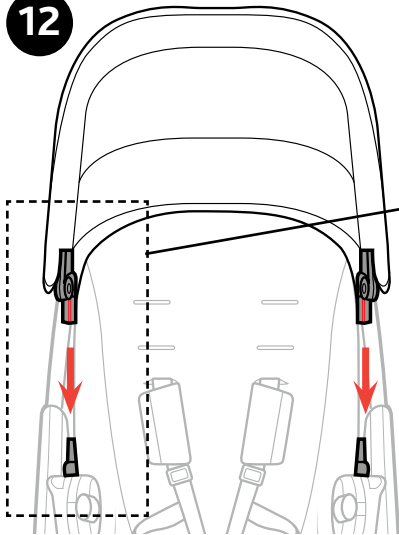


12. To attach the Canopy (J), make sure that back panel of Canopy is located behind the seat frame and slide the Canopy attachment clips onto the corresponding attachment points on the Seat Frame, as shown.

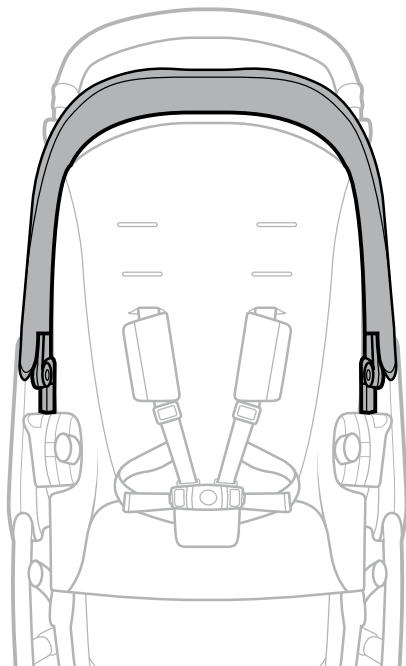

How to Use the Canopy



13A

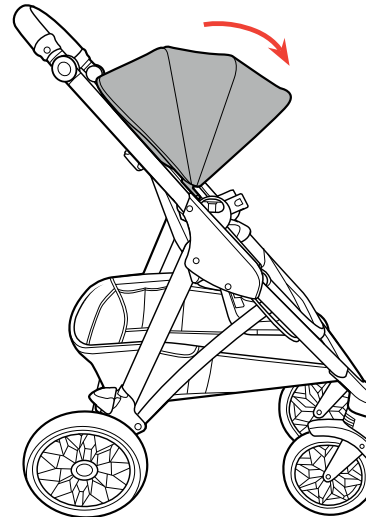

13A. To open the Canopy, pull the front edge of the Canopy forward. Reverse this step to close the Canopy.


13B. Pull forward on the Canopy flap to uncover the mesh panel. Reverse this step to close the mesh panel.

13B

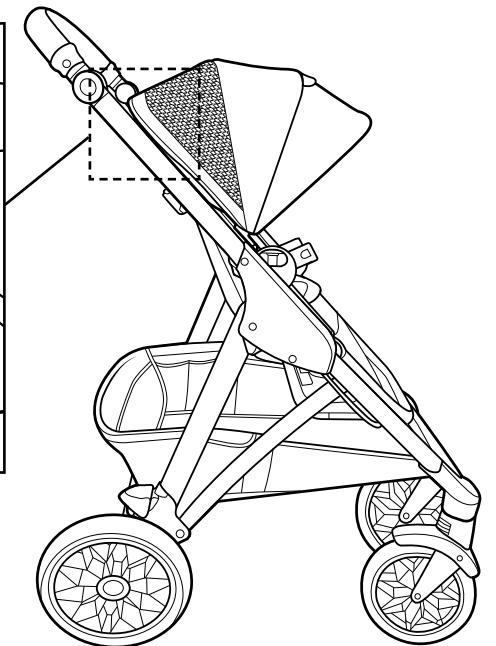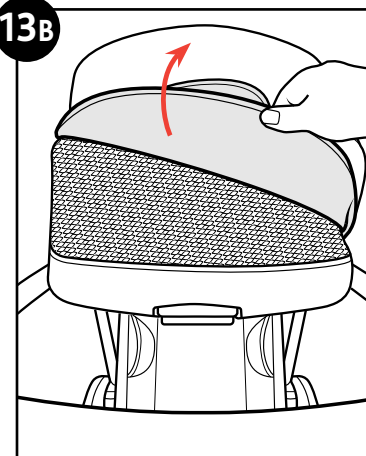

How to Use the Canopy


13c

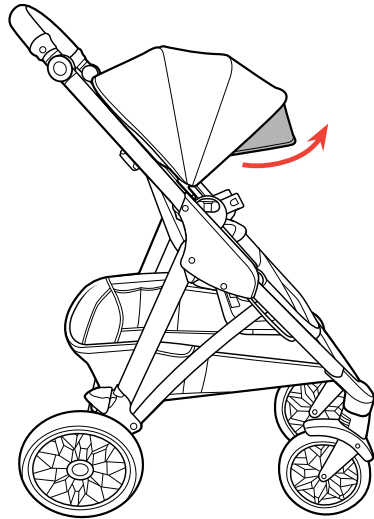

13C. The Canopy also has an additional extension panel tucked under the front panel. Locate and pull out the additional visor panel, as shown.

How to Use the Canopy

14

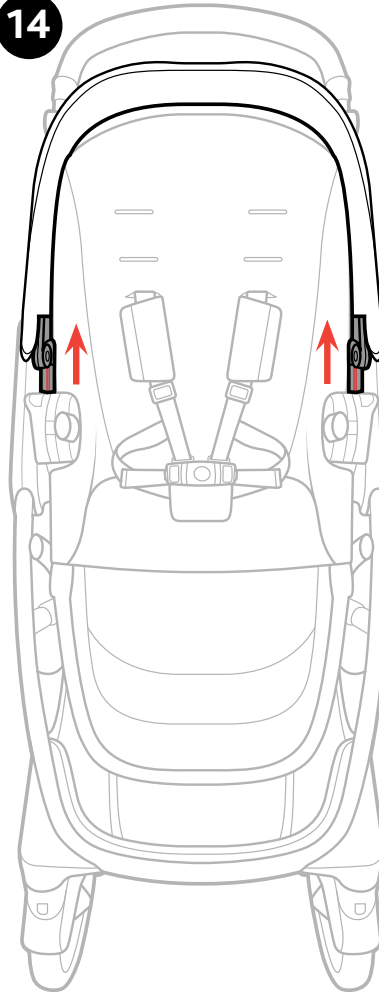

14. To remove the Canopy, pull up on the attachment clips on each side of the Canopy at the same time.


How to Use the Brakes

⚠ WARNING

Always apply the brakes whenever the stroller is stationary. Never leave the stroller on a sloped surface, with a child onboard, even with the brakes applied.


Check that brakes are engaged by trying to push stroller.

15A

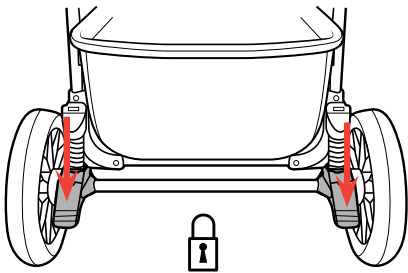

15A. Push down on the Brake Lock Levers, located on each side of the Rear Wheel assembly, to lock the Rear Wheels.


15B

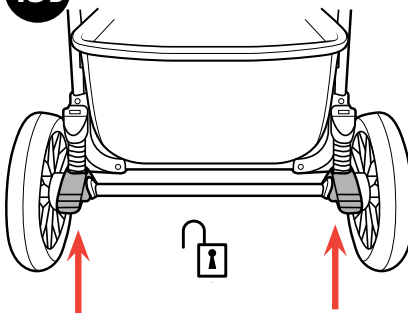

15B. Pull up on the Brake Lock Levers to unlock the Rear Wheels.


Adjusting the Rear Suspension

16

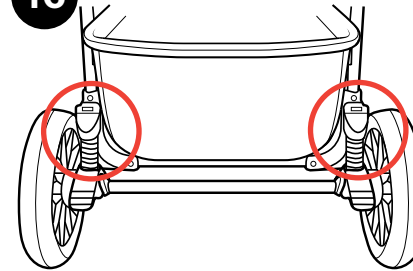


The Stroller has 2 Suspension Modes.

16. Flip the Lever up for smooth terrain and flip the Lever down for rough terrain. Make sure both of the Suspension Levers are in the same position.

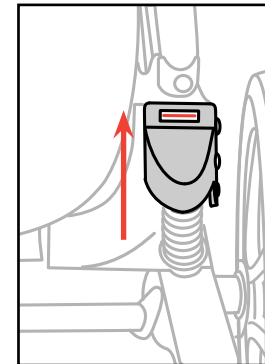

A straight line (—) indicates a stiff suspension, a stable ride for more control on smooth terrain.

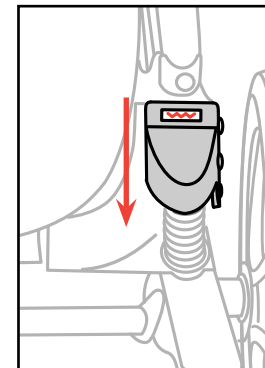

A wavy line (~~~~) indicates a soft suspension, a smoother ride on rough terrain.


Accessory Pocket

⚠ WARNING

Never place more than 1 lb (0.5 kg) in seat back pocket.

17

17. Locate the accessory pocket on the back of the seat.

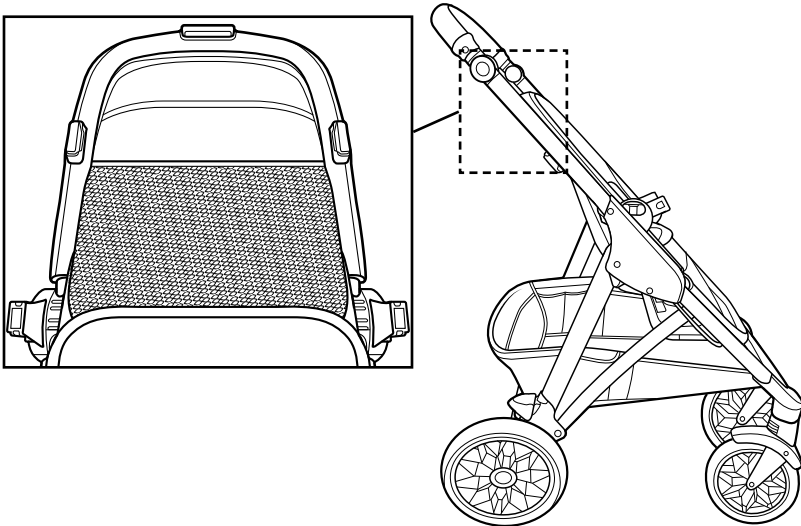


How to Use the Basket

18A

18A. Locate the 2 bottle pockets on the sides of the basket to store bottles in an upright position.

The basket can be used normally or opened up to stash and conceal your items inside the basket.


Unzip the zippers on the back of the basket and lift up on the fabric to access the Zip & Stash Basket.

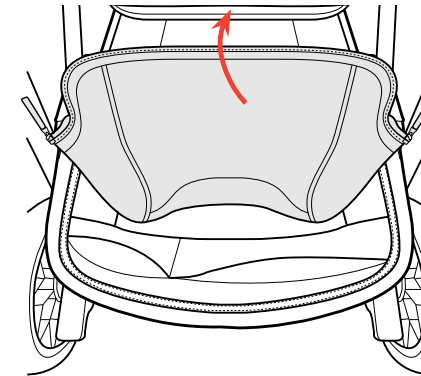

18B

18B. Inside the Zip & Stash Basket on the back panel, locate 2 storage pockets and the basket fob.

- 2 organizer pockets on the inside of the back panel.
- 1 basket fob.

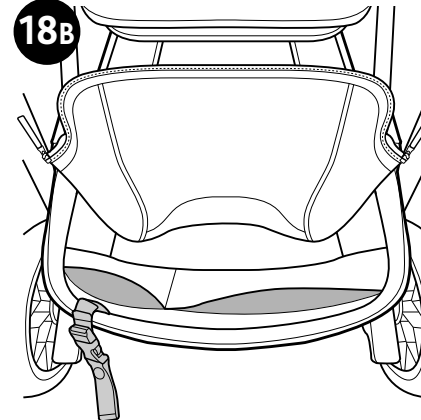


How to Use the Safety Harness

⚠ WARNING

This stroller features three harness positions. Always use a harness position located ABOVE the child's shoulder line. If multiple harness positions are above the child's shoulder line, use the one closest to it.


19A

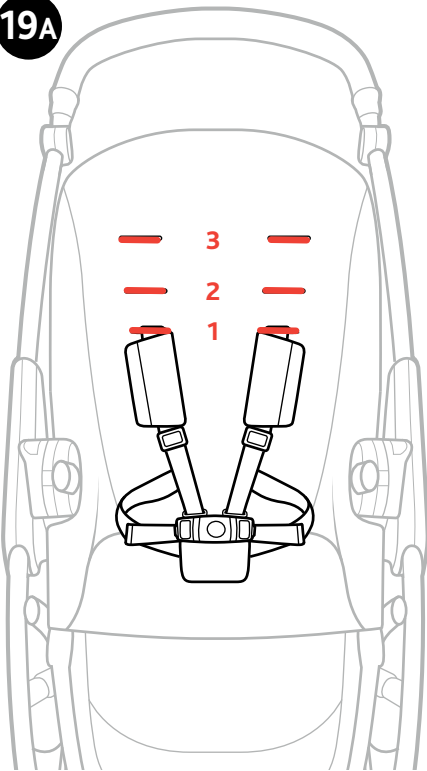

19A. The Shoulder Straps can be adjusted to 3 height positions as shown.

How to Use the Safety Harness

19B

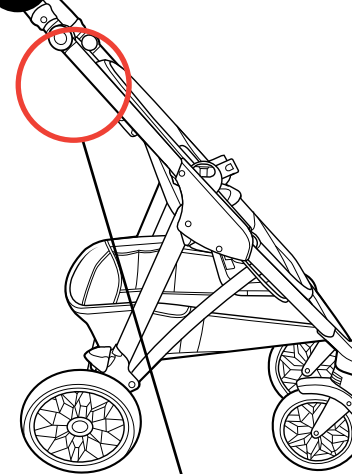

19B. To adjust the Shoulder Harness to another height position, locate the D-ring on the back of the seat as shown.



Slide the D-ring through opening on the seat back. Then pull through the opening on the front seat pad.

Re-insert the D-ring into the correct height position, through the seat pad and securing through the seat back.


Repeat for the other side.

Always use the same height position for both straps.

Note: Depending on Shoulder Harness height position, the D-ring may be located below visible opening in seat back.

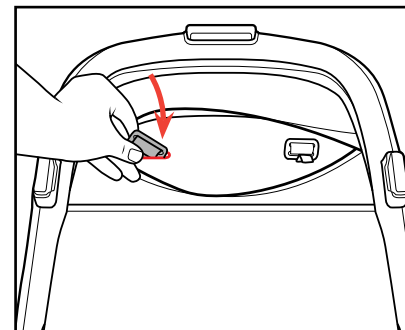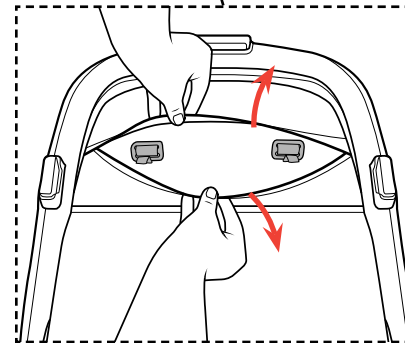


Seat Front

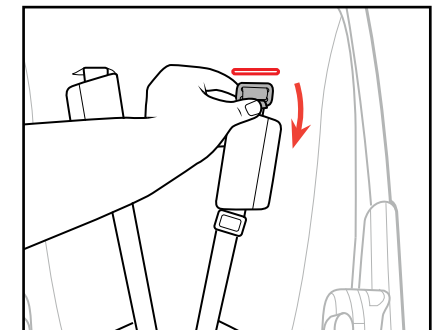



How to Use the Safety Harness

20

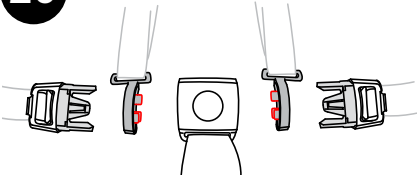

20. This stroller has a 5-point safety harness. The Shoulder Strap Connector is designed to break away from the Waist Clip when not secured in the Crotch Strap Buckle.

Make sure the Shoulder Strap Connector is in the correct position, as shown. Slide the Shoulder Strap Connector onto the Waist Strap Clip and repeat for the other side. Then slide both Waist Clips into the Crotch Strap Buckle, as shown. Pull on both sides to make sure the Clips are secured to the Buckle.

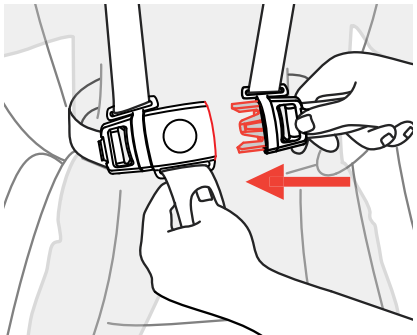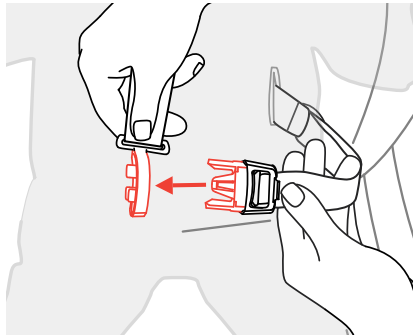


How to Use the Safety Harness

⚠ WARNING


Never leave child unattended. Avoid serious injury from falling or sliding out. Always use seat belt.

21

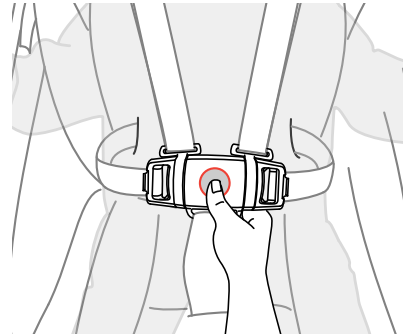


21. The Safety Harness can be released by pressing the button on the center of the Buckle and pulling both Waist Clips out.

Pull up on the Shoulder Strap Connector to remove it from the Waist Strap Clip.

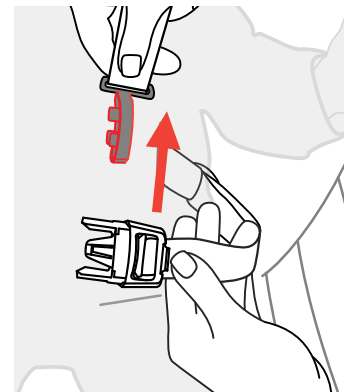

How to Use the Safety Harness

22

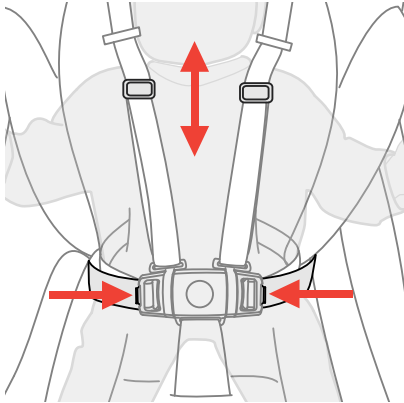

22. The length of the Shoulder Straps can be adjusted by pulling on the adjustment buckles to tighten or loosen.


The length of the waist straps can be adjusted. Press the tab at the end of the Waist Strap Clip and pull on the strap to tighten or loosen, to better fit your child.

How to Use the Child Tray

⚠ WARNING

AVOID BURNS. Never put hot liquids in child tray.
Max weight in child tray 1lb (0.5 kg).

23A

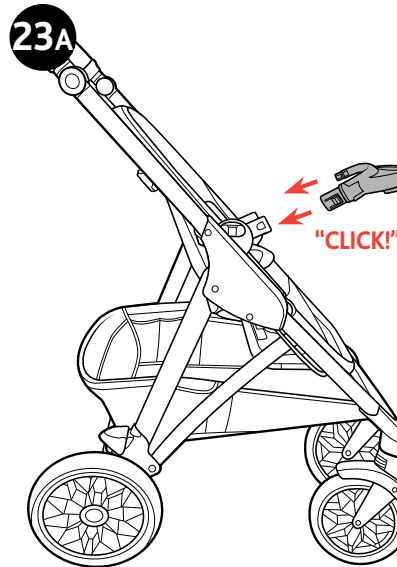


23A. To use the Child Tray (I), Insert the Child Tray Tongues into the corresponding openings on the Seat Frame.

To release the Child Tray press in on the buttons located at the sides of the Child Tray, as shown (23B).

Undo one side of the Child Tray, and swing away to the side for clear access to the seat. Undo both sides and remove completely.

23B

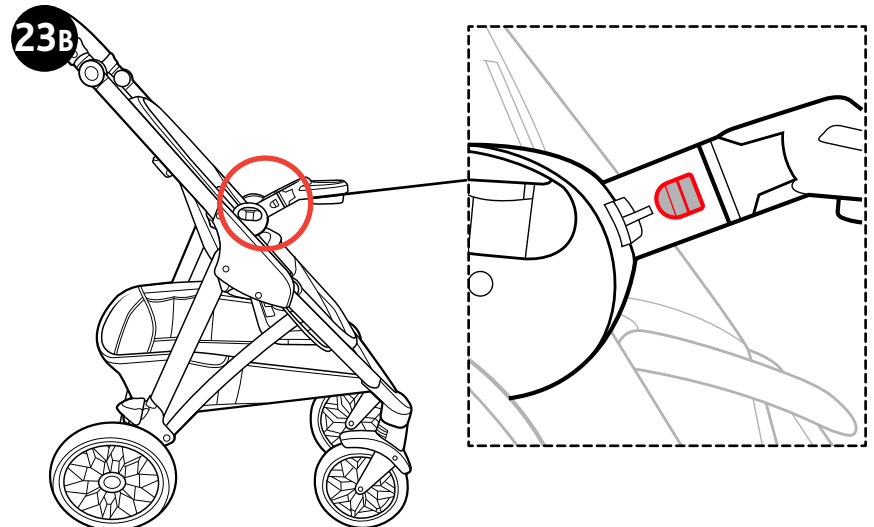


How to Use the Infant Car Seat Adapter


⚠ WARNING

Do not remove the Seat from the Stroller frame with the child inside.

24A

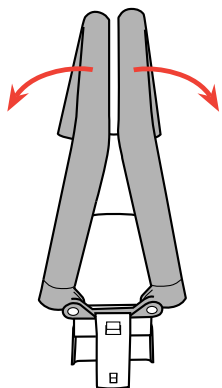


24A. Remove the Seat from the Stroller Frame (refer to Step 8). Rotate both arms on the Infant Car Seat Adapter (K) down, as shown.

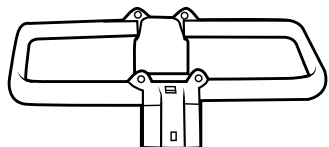


How to Use the Infant Car Seat Adapter

24B

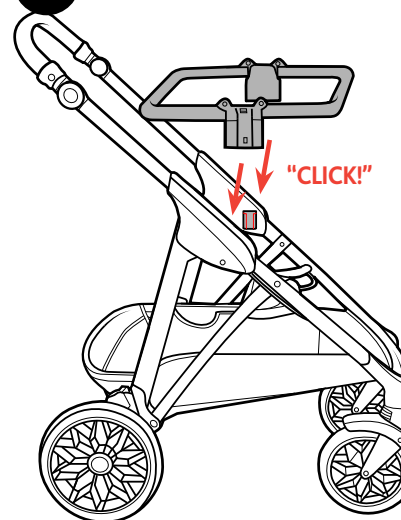


24B. Line up the Tongues on both sides of the Infant Car Seat Adapter to the slots on the Stroller frame as shown. Push down until it clicks into place. Pull up on the Infant Car Seat Adapter to make sure it is securely attached to the Stroller Frame.

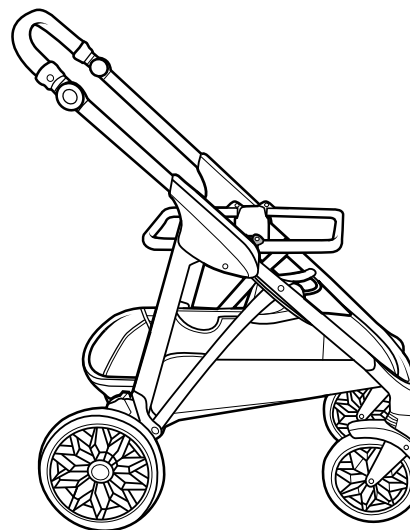


How to Use the Infant Car Seat Adapter

24c

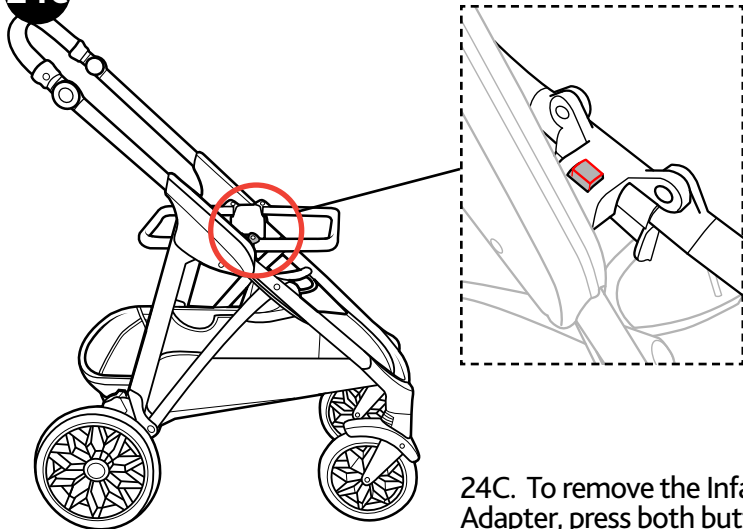

24C. To remove the Infant Car Seat Adapter, press both buttons on the attachment and pull up.

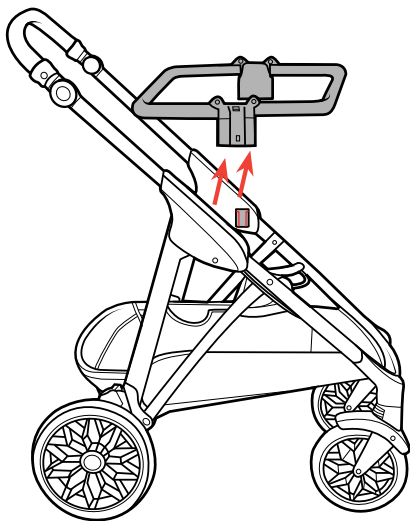


Using with a Chicco Infant Car Seat

⚠ WARNING



ONLY USE a Chicco infant car seat with this product. Make sure to properly install the Infant Car Seat Adapter prior to using a Chicco infant car seat. Always make sure child is properly harnessed in the car seat. Only use this product to transport infants that are within the size and weight limitations of the infant car seat. Refer to your Chicco infant car seat Owner's Manual for additional warnings and use instructions before using this product.

Using with a Chicco Infant Car Seat

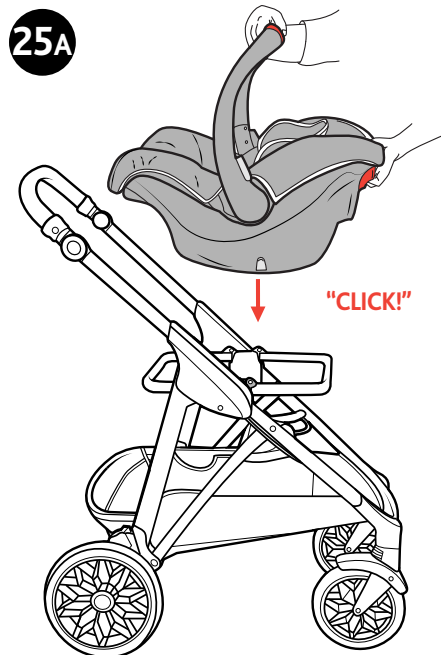

25A. With the Infant Car Seat Adapter attached, place the Chicco infant car seat into the Stroller Frame. The infant car seat can be attached in a Parent-Facing or Forward-Facing position. Make sure infant car seat clicks into the Infant Car Seat Adapter on both sides.

Pull up on the infant car seat; make sure it is secured to Stroller Frame (25B). If the infant car seat is not secured see Step 24 to make sure the Infant Car Seat Adapter is assembled and attached correctly.

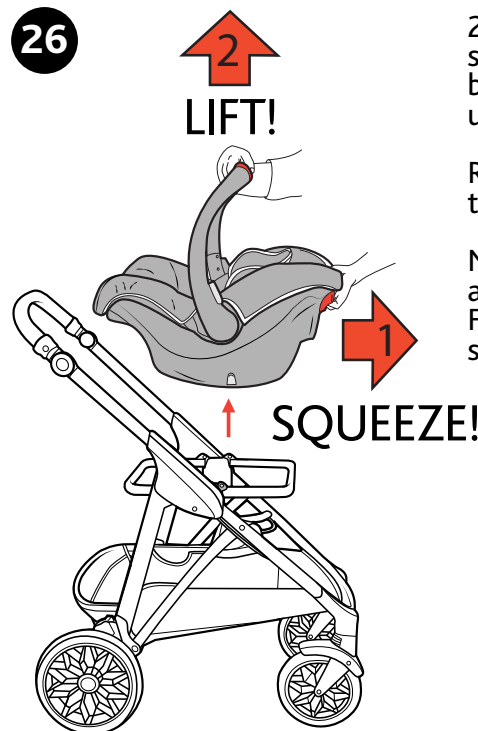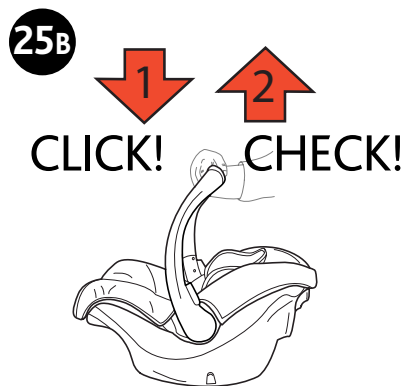


26. To remove the infant car seat, squeeze the Release Handle on the back of the infant car seat and lift up on the carrying handle.

Remove the infant car seat from the Stroller.

Note: The infant car seat can be attached in a Parent-Facing or Forward-Facing positions, as shown.

Parent-Facing Position

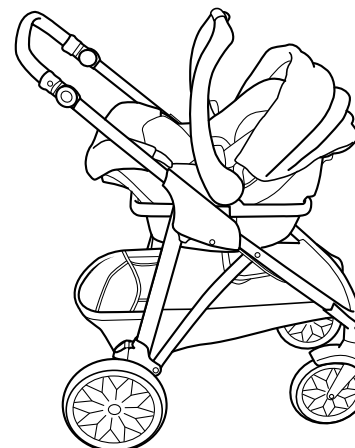


Forward-Facing Position



How to Fold the Stroller - Forward-Facing Seat

⚠ WARNING


When folding the Stroller, make sure that your child and other children are at a safe distance. Ensure that during the operations, the movable parts of the Stroller do not come in contact with your child. Always apply the brakes whenever the stroller is stationary.

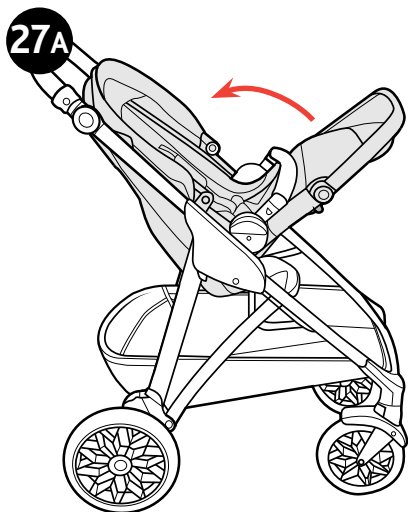



With the Seat attached in Forward-Facing position:

27A. To Fold the Stroller, lock rear wheel brakes, and make sure the Front Wheels are in Swivel Mode.

Lift up on the bottom edge of the Seat frame and fold seat in half. This will expose the stroller Fold Handle.

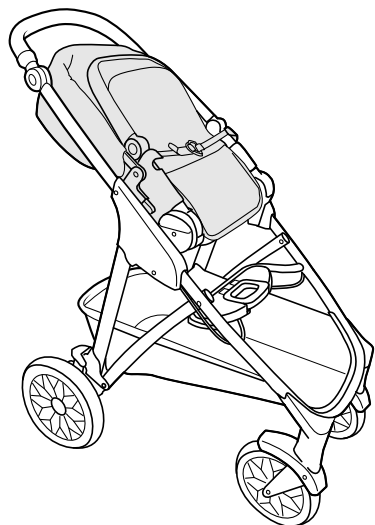


How to Fold the Stroller - Forward-Facing Seat

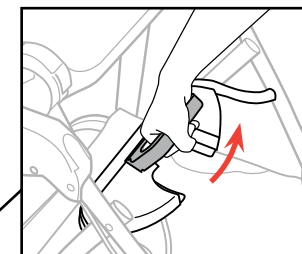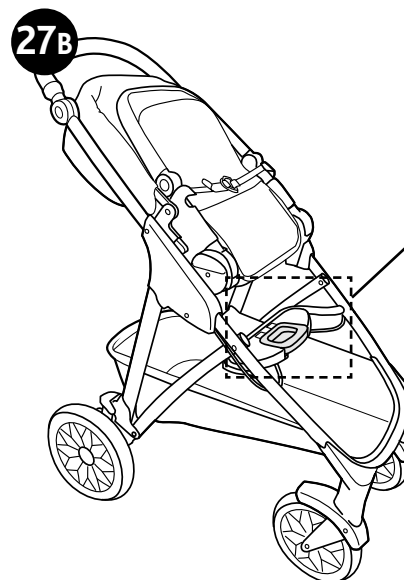

27B. Locate the Fold Handle. Squeeze the release button in the handle and rotate the handle up until it stops, as shown.

With all four wheels on the ground, the front wheels will swivel to the side and the Push Handle will fold down.


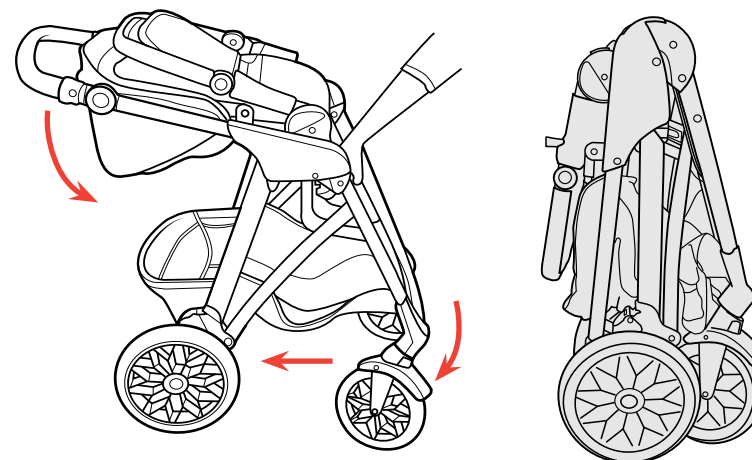


Front Wheels swiveled backwards

How to Fold the Stroller - Parent-Facing Seat

⚠ WARNING

When folding the Stroller, make sure that your child and other children are at a safe distance. Ensure that during the operations, the movable parts of the Stroller do not come in contact with your child. Always apply the brakes whenever the stroller is stationary.

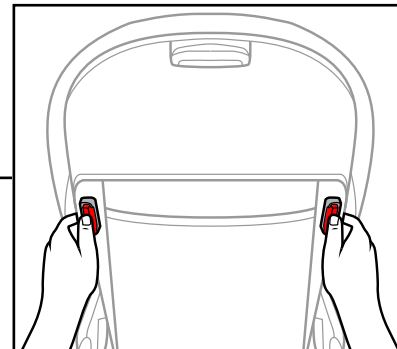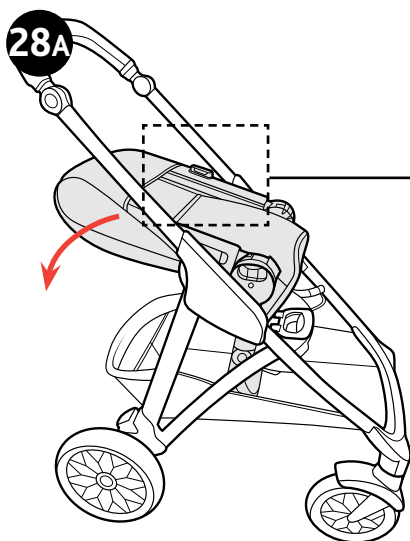


With the Seat attached in Parent-Facing position:

28A. To Fold the Stroller, lock rear wheel brakes, and make sure the Front Wheels are in Swivel Mode.


Press both buttons along the back of the seat frame and rotate the top of the seat down, as shown.

This will expose the stroller Fold Handle.

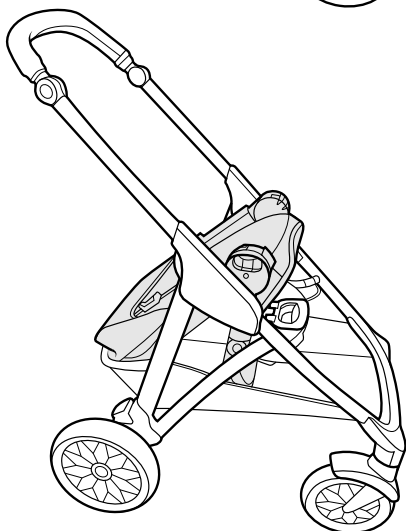


How to Fold the Stroller - Parent-Facing Seat

28B

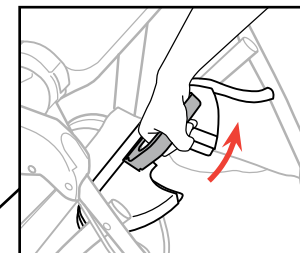

28B. Locate the Fold Handle. Squeeze the release button in the handle and rotate the handle up until it stops, as shown.


With all four wheels on the ground, the front wheels will swivel to the side and the Push Handle will fold down.

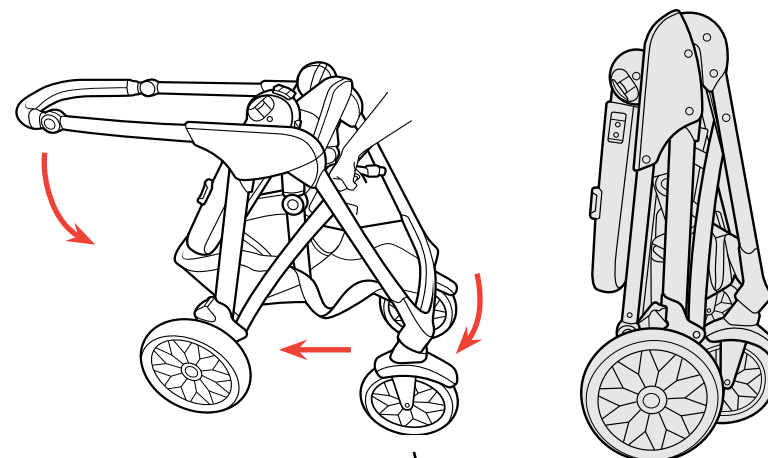

Front Wheels swiveled backwards

How to Fold the Stroller - Infant Car Seat Adapter

29

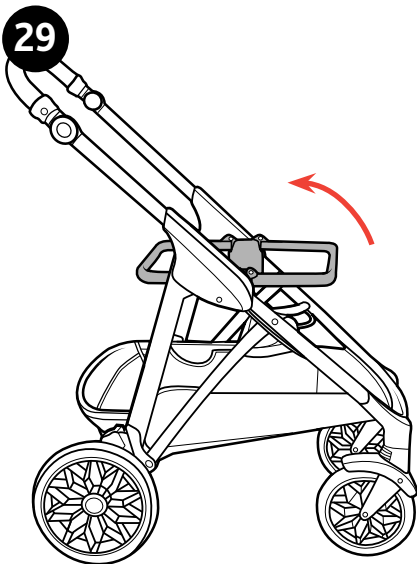



With the Infant Car Seat Adapter attached:

29. To Fold the Stroller, lock rear wheel brakes, and make sure the Front Wheels are in Swivel Mode.


Fold the front section of the Infant Car Seat Adapter towards the back section.

Locate the Fold Handle. Squeeze the release button in the handle and rotate the handle up until it stops.

With all four wheels on the ground, the front wheels will swivel to the side and the Push Handle will fold down.

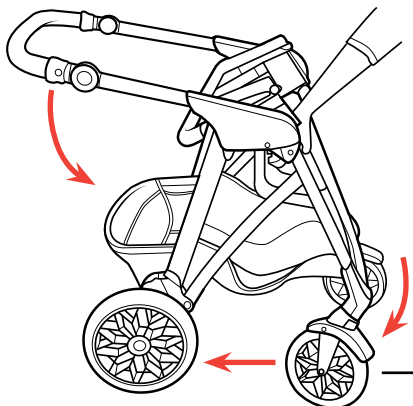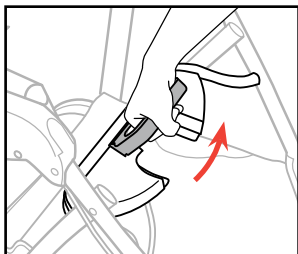


Front Wheels swiveled backwards

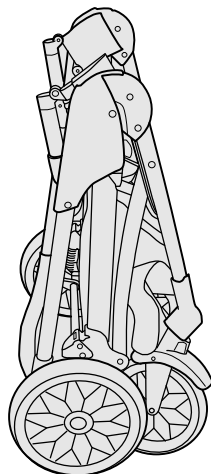


How to Use the Travel Lock

30A

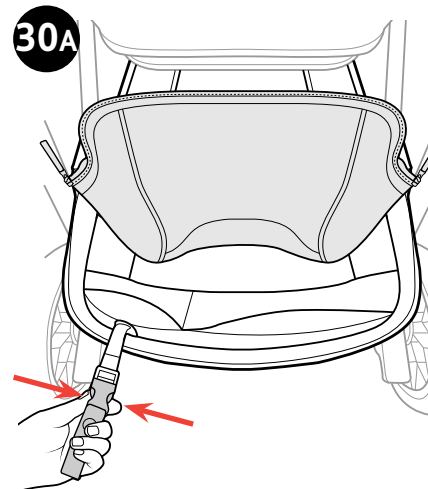

30A. To keep the Stroller from opening while traveling unzip the Zip & Stash Basket and unclip the key fob from the Basket. Leave the basket fob hang over the basket tube.


30B

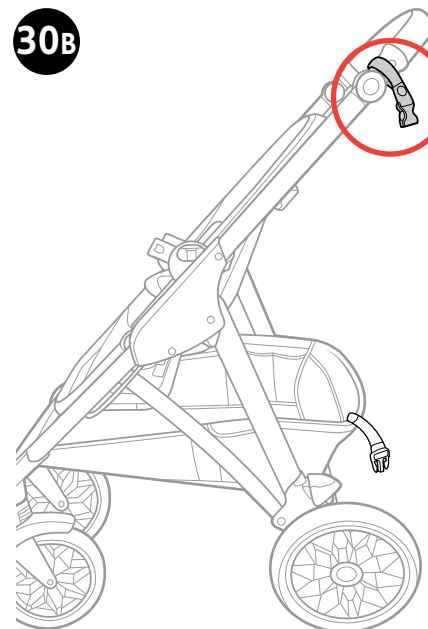

30B. Attach the bottom of the key fob to the handle using the snap.


How to Use the Travel Lock

30c

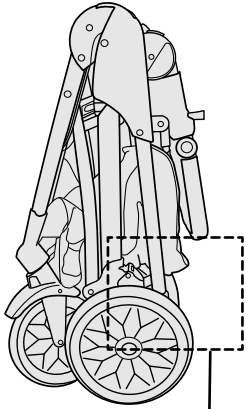


30C. Fold the Stroller.

Clip the key fob on the handle to the clip on the basket, as shown.

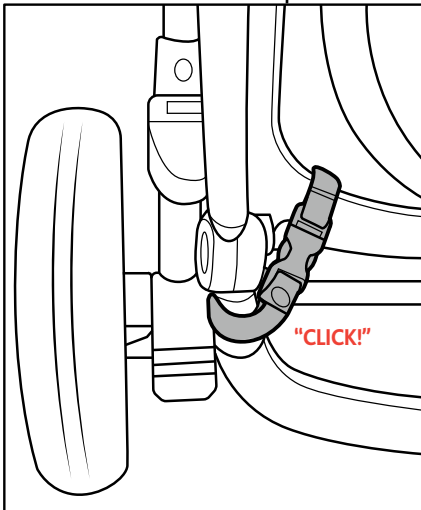

How to Remove the Seat Fabric

31

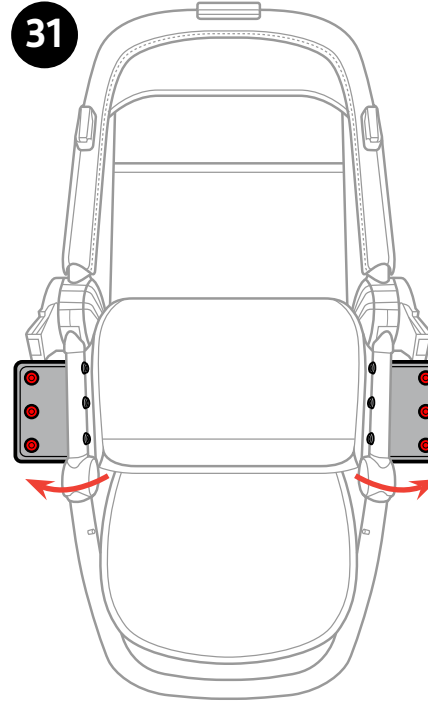


31. With the Modular Seat removed from the Stroller, lay the seat down with the back facing you.

Unsnap 3 snap buttons on both sides of the Seat Frame, as shown.



How to Remove the Seat Fabric

32

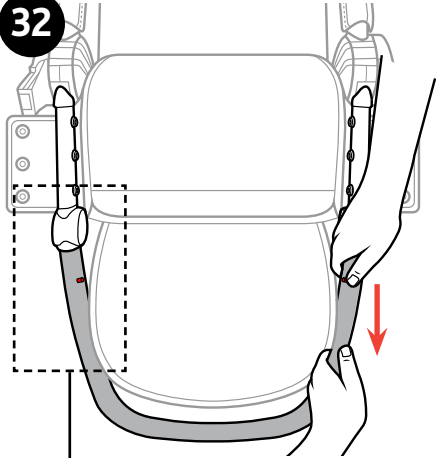


32. Locate both snap buttons on the inside of the Footrest Frame. Press in on the snap button and pull the footrest from the Seat Frame.

Repeat for the other side.

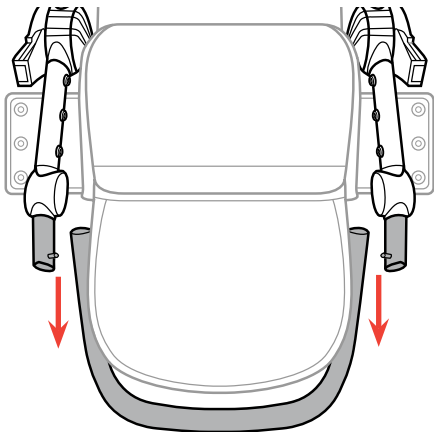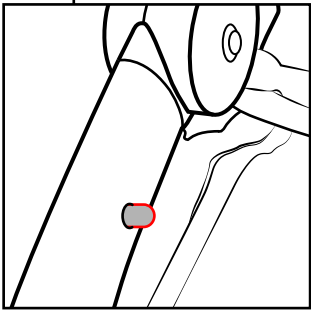


How to Remove the Seat Fabric

33

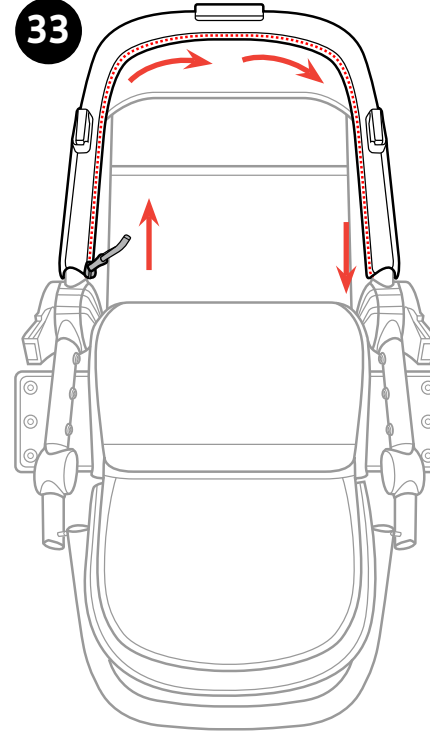


33. Locate the zipper on the inside of the seatback and undo the zipper completely.

Remove the Seat Fabric from the top of the Seat Frame.


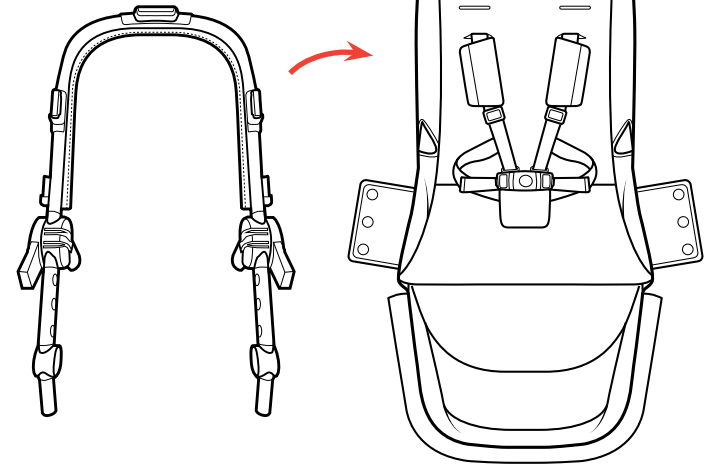


How to Remove the Seat Fabric

34

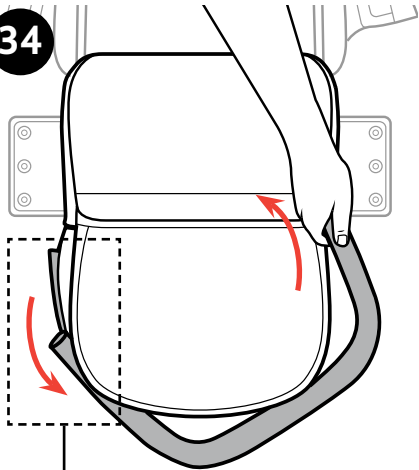


34. Pull the Footrest Frame in a twisting motion to remove it from the ridge on the Footrest Fabric.

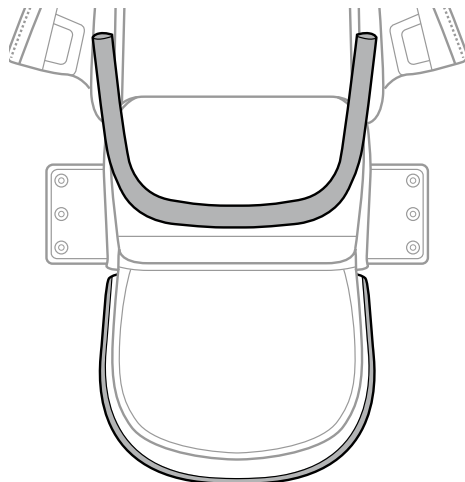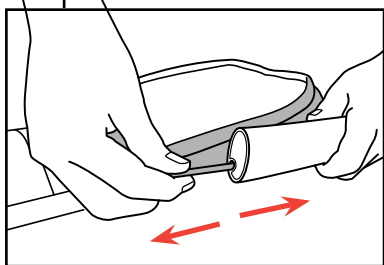


How to Remove the Seat Fabric

35A

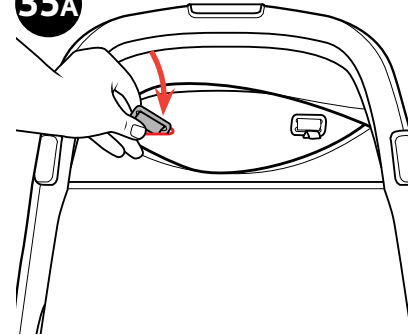


35A. Undo the hook and loop on the back of the seat fabric to locate the Shoulder Strap D-rings. Push the Shoulder Strap D-rings through the seat back (refer to Step 19B). Pull the Shoulder Straps through the front side to remove.

Seat Front

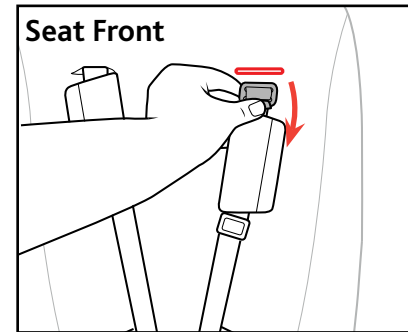


35B

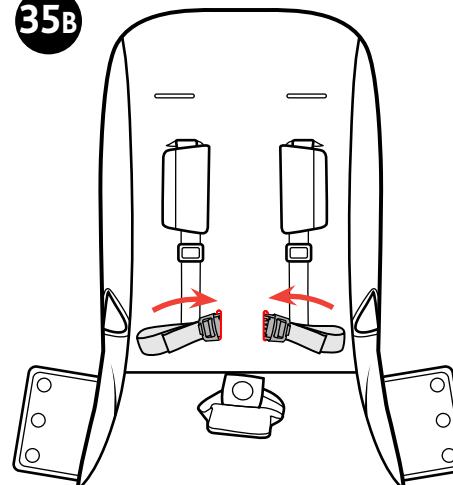

35B. Make sure to push the waist belt straps through the openings in the seat fabric, as shown.

How to Remove the Seat Fabric


35C

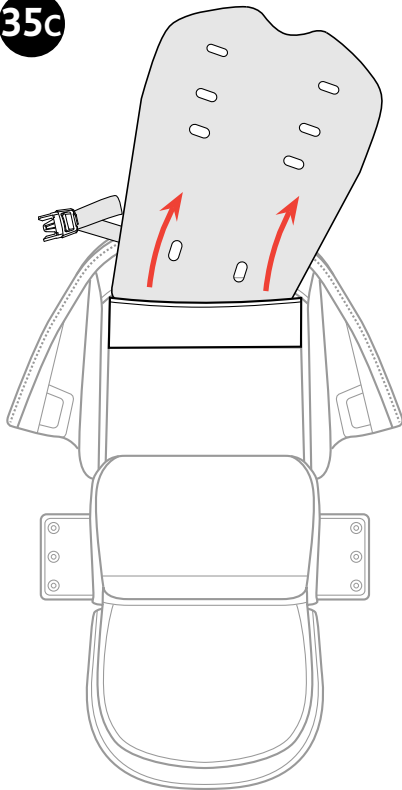

35C. Remove the plastic board in the seat back.


How to Remove the Seat Fabric

36A

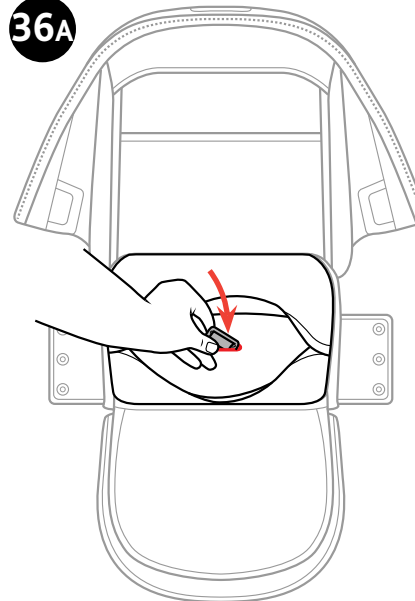

36A. Undo the hook and loop on the bottom of the seat to locate the crotch strap D-ring. Push the D-ring through the opening on the seat bottom. Pull the crotch strap through the front side to remove.


36B

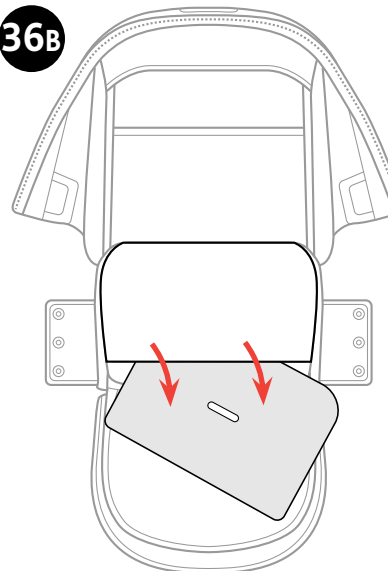

36B. Remove the plastic board from the seat bottom.


How to Attach the Seat Fabric

37A

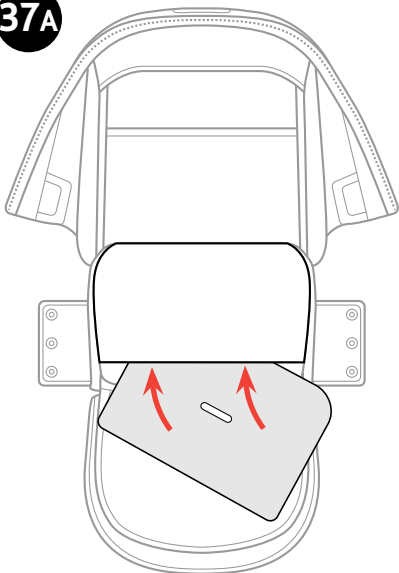


37A. Insert the plastic board into the seat bottom.

37B

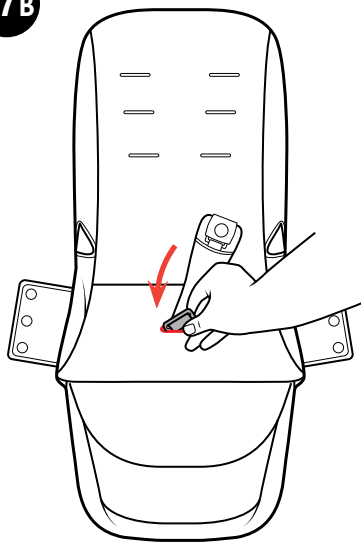


37B. Push the Crotch Strap D-ring through the opening on the seat top. Pull the D-ring through the bottom of the seat.

Make sure the Crotch Strap D-ring lay flat against the seat bottom.

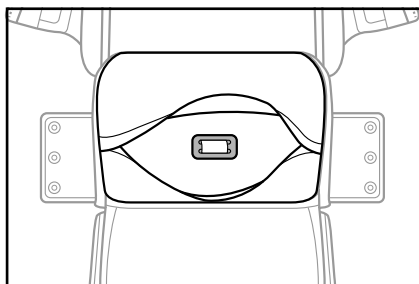

How to Attach the Seat Fabric


38

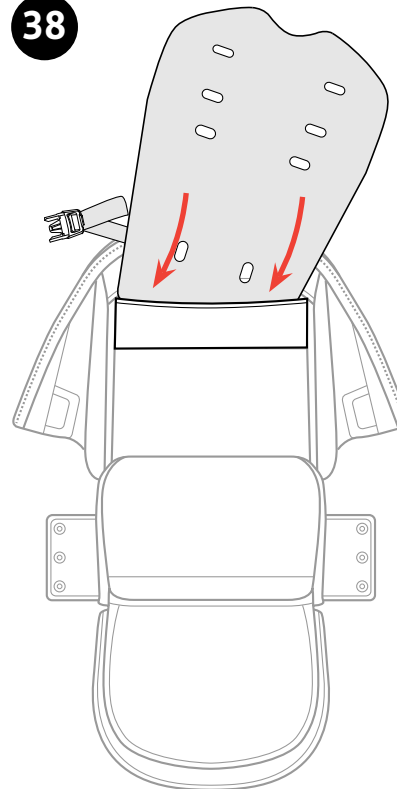

38. Insert the plastic board into the seat back.


How to Attach the Seat Fabric

39A

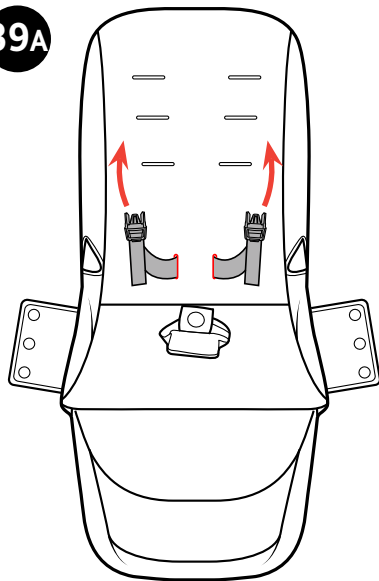


39A. Pull the waist belt straps through the openings in the seat fabric, as shown.

39B

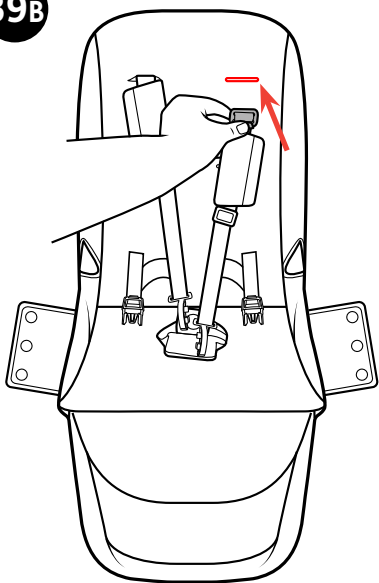


39B. Thread the Shoulder Strap D-rings into the openings in the seat fabric, as shown. Pull the Shoulder Strap D-rings through the seat back.

Make sure the Shoulder Strap D-rings lay flat against the seat back.

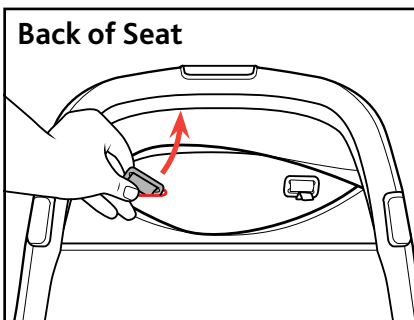

How to Attach the Seat Fabric


40A

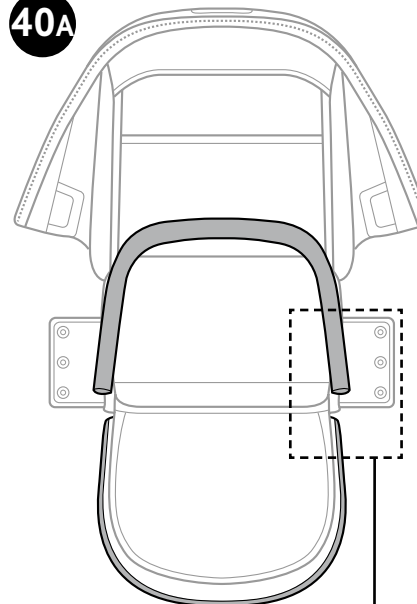

40A. Lay the seat fabric down with the back facing you.

Place the Footrest Frame down on seat pad in the same orientation, as shown.

To correctly attach the Footrest Frame the track on the footrest must be oriented with the track closest to the fabric, as shown.

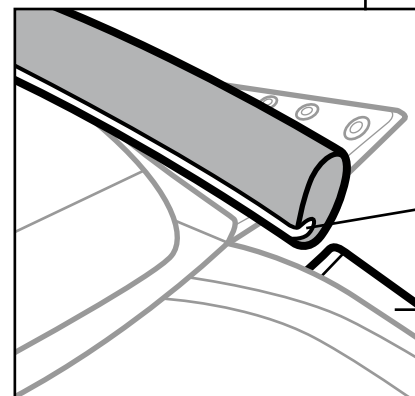


Footrest Frame Track

Footrest Fabric Ridge




How to Attach the Seat Fabric

40B

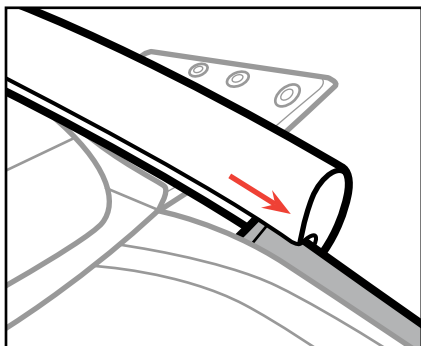


40B. Begin feeding the ridge on the Footrest Fabric into the track on the Footrest Frame, as shown.

Hold tightly onto the fabric and feed the Footrest Frame track completely around the Footrest Fabric ridge.

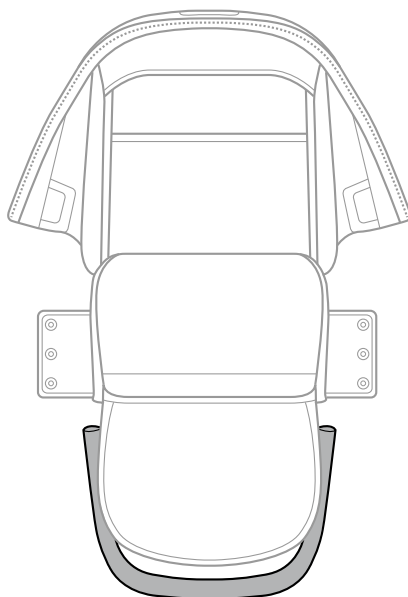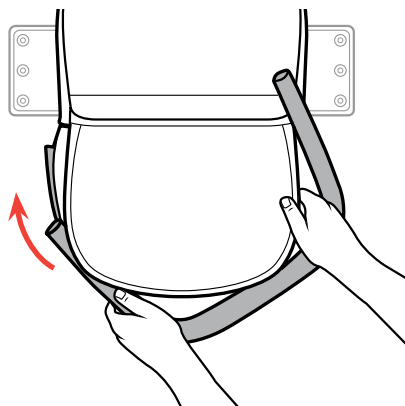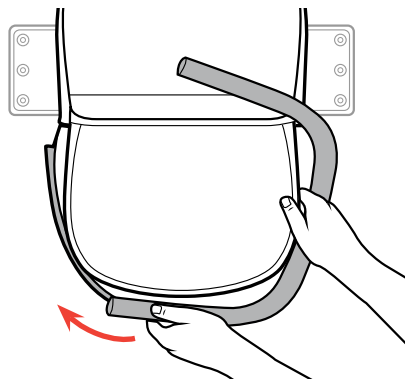

How to Attach the Seat Fabric


41A

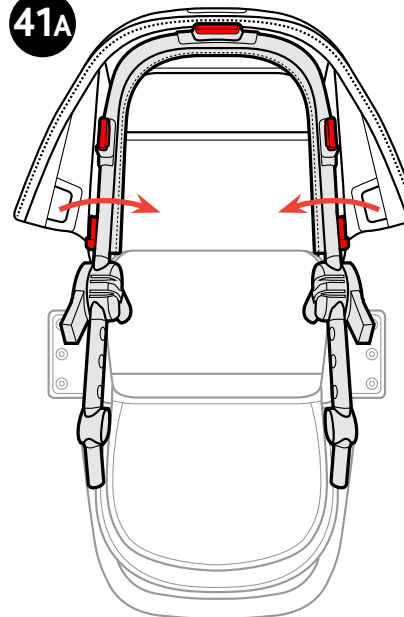

41A. Place the Seat Frame on top of the seat fabric with the recline/fold buttons facing up.

Next, fold the seat fabric around the Seat Frame lining up the cutouts on the seat fabric with the canopy mounts and recline/fold buttons.


41B

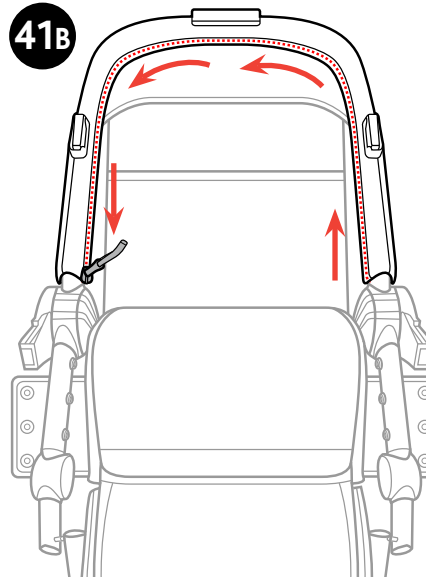

41B. Zip up the seat fabric completely around the Seat Frame.

How to Attach the Seat Fabric

42A


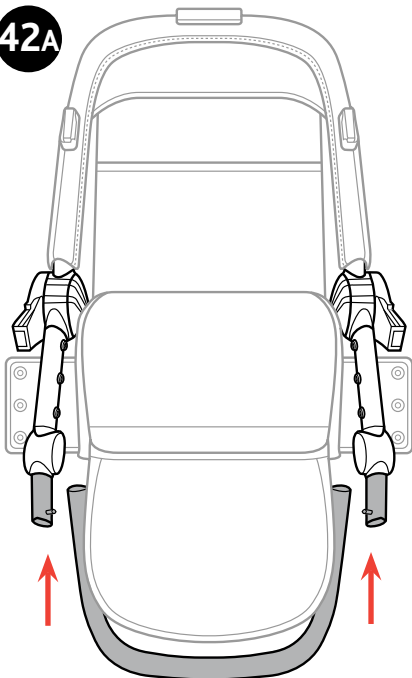


42A. Attach both ends of the Footrest Frame onto the Seat Frame, as shown.

The Footrest Frame is attached when both snap buttons click into the holes in the frame (42B).


Note: Pull down on the Footrest Frame to make sure it is secured to the Seat Frame.

42B

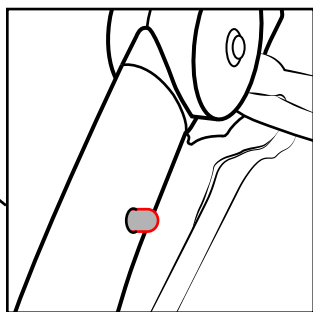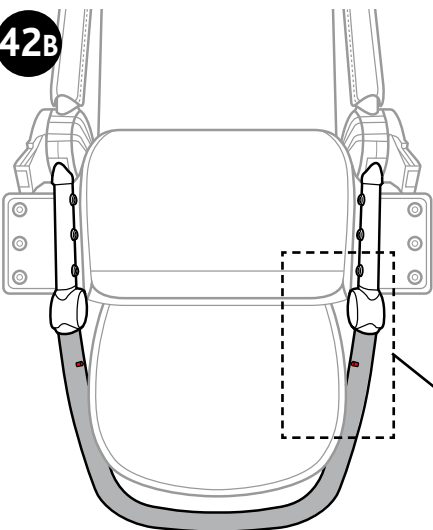

How to Attach the Seat Fabric


43

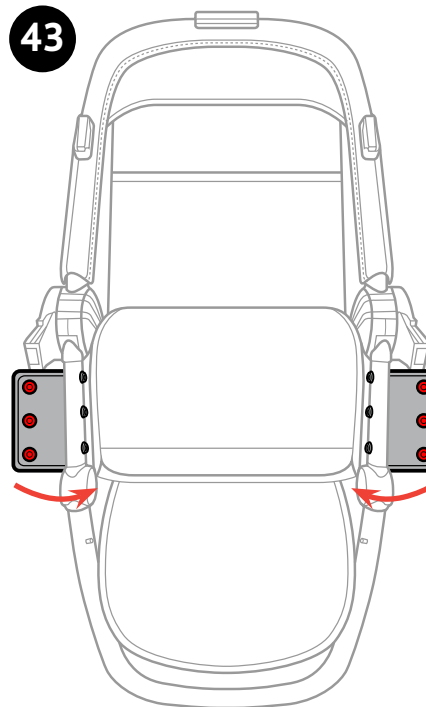

43. Attach 3 snap buttons on both sides of the Seat Frame, as shown.

How to Remove the Harness Pads


44A

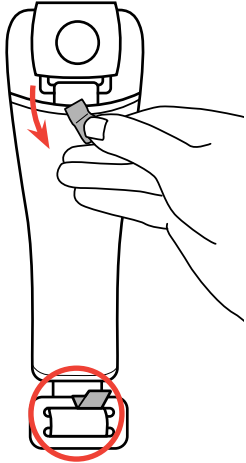

44A. To remove the crotch strap pad, locate the positioner tab (on the crotch pad) and thread it through the Crotch Strap Buckle slot.

Repeat for the D-ring on the bottom of the crotch strap.


44B

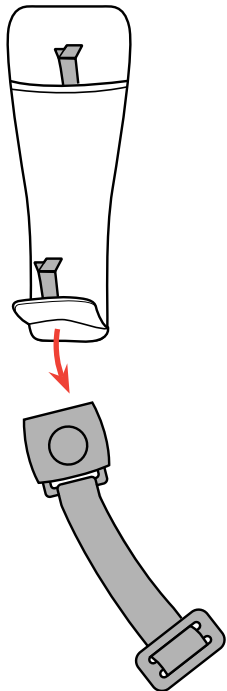

44B. Remove the crotch strap from the pad by feeding through the bottom of the crotch strap pad.

How to Attach the Harness Pads

45

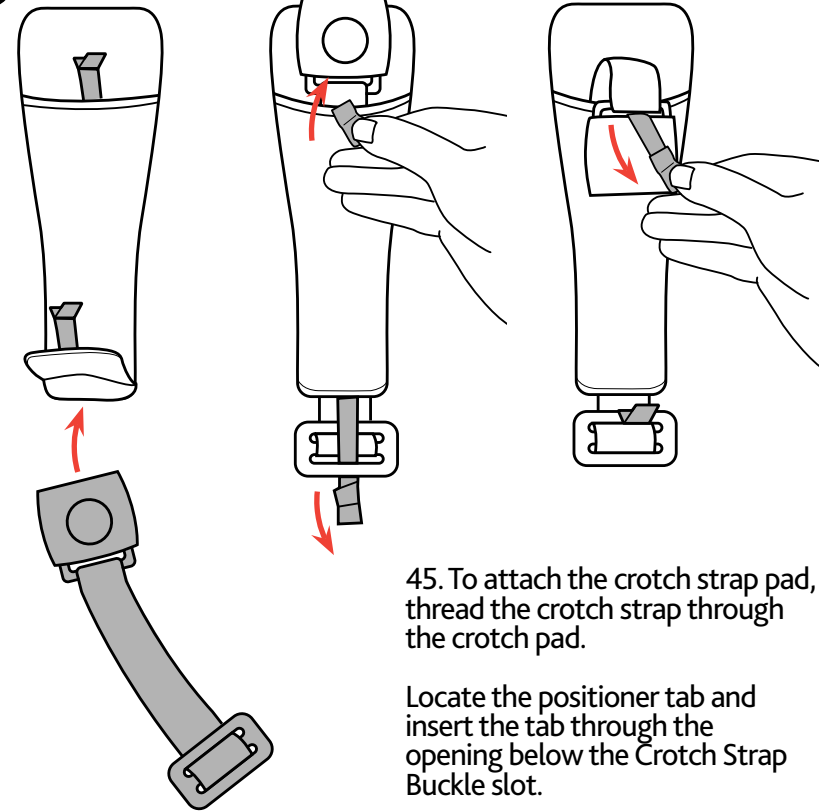

45. To attach the crotch strap pad, thread the crotch strap through the crotch pad.

Locate the positioner tab and insert the tab through the opening below the Crotch Strap Buckle slot.

Repeat for the D-ring on the bottom of the crotch strap.

Cleaning and Maintenance

This product requires regular maintenance. The cleaning and maintenance of the stroller must only be carried out by an adult.

CLEANING

Removable fabric parts of the product may be machine washed separately in cold water and mild soap on delicate cycle. No bleach. Drip dry.

Periodically wipe clean plastic parts with a soft damp cloth. Always dry the metal parts to prevent the formation of rust if the stroller has come into contact with water.

MAINTENANCE

Lubricate the moving parts only if necessary, with a light application of a silicone based lubricant. Periodically check the condition of the wheels, and keep them clean of dust and sand. To avoid friction that may prevent the correct operation of the stroller, ensure that all the movable plastic parts placed along the metal frame are clean of dust, dirt or sand. Keep the stroller in a dry place. Prolonged exposure to direct sunlight may cause the fabric to fade.

For More Information

If you have any questions or comments about this product, or are missing any of the parts please do not return this product to the store. Contact us in one of the following ways:



(877)-424-4226



info.usa@artsana.com



www.chiccousa.com



1826 William Penn Way
Lancaster, PA 17601

[Kee-Ko] If you say it right it makes you *smile*

