



Read all instructions **BEFORE** assembly and **USE** of product.

KEEP INSTRUCTIONS FOR FUTURE USE.

CINCH™

Booster


⚠ WARNING

Children have suffered severe head injuries, including skull fractures, after falling with or from boosters.

- Check that booster seat is securely attached to adult chair before each use.
- Always use restraints until child is able to get in and out of booster seat without help. Adjust to fit snugly.
- Never allow child to push away from table.
- Never lift and carry child in booster seat.
- Stay near and watch your child during use.
- Until child is able to get in and out of the booster seat without help (about 2 ½ years old), the child should be secured in the booster seat at all times by the restraint system.
- Never allow child to sit in unsecured chair. Always secure the booster seat to chair using the attachment straps or fold-away arm. Always check that the attachment is secure before each use.
- Prevent serious injury or death. Do not use in motor vehicles.
- Use this booster only for children capable of sitting upright unassisted.

- Do not use for children weighing more than 50 lbs (22.7 kg).
- Do not use on any elevated surface other than a full sized dining room chair.
- Never fit the booster seat to damaged or unstable chairs, folding chairs, pedestal chairs or bar stools.
- Only use on chairs with a rigid seat at least 15 5/8 inches (39.7 cm) wide, 14 1/4 inches (36.2 cm) deep, and a backrest at least 12 inches (30.5 cm) high.
- Always check that the surface of the floor is even and the chair is stable before fitting the booster seat to the chair.
- Do not use the product if any part is broken or missing.
- Ensure that all components are correctly fitted and adjusted before use.
- To avoid the danger of suffocation, remove all plastic covers before using the product.
- Do not leave the product near walls, curtains, or windows, where the child can become entangled.
- Do not attach any parts to the product that are not supplied or expressly approved by Chicco.

Parts/Components

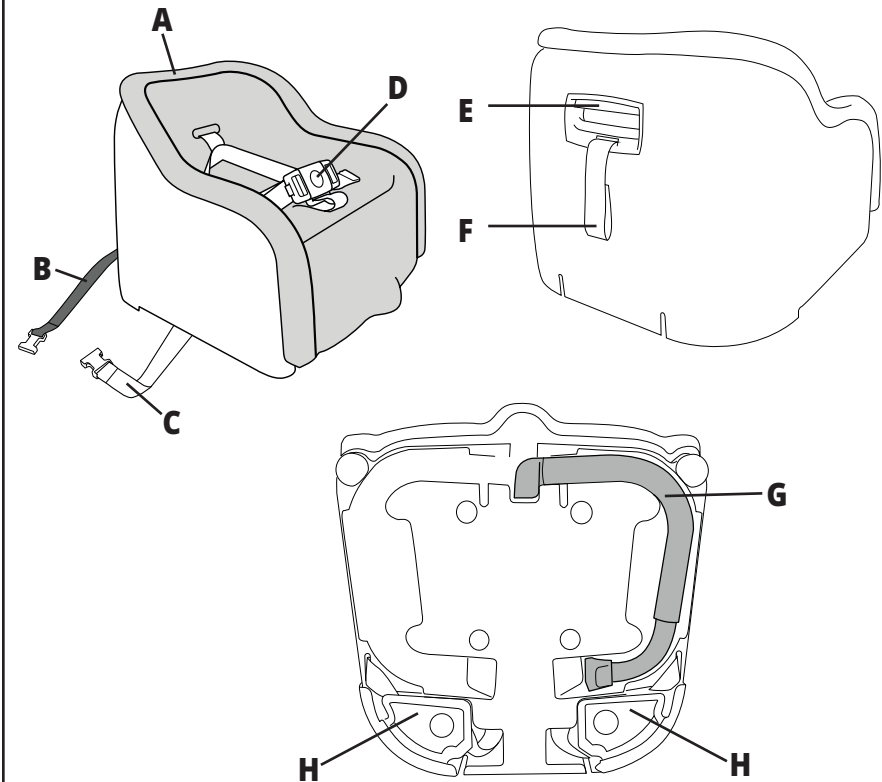


- A - Seat Pad
- B - Rear Attachment Straps (black)
- C - Lower Attachment Straps (gray)
- D - Restraint System

- E - Release Button
- F - Cinch Strap
- G - Fold-away Arm
- H - Storage for Rear and Lower Attachment Straps

Attach to Chair: Fold-away Arm


NOTE: Only one method of installation is required; choose either installation with Fold-away Arm or installation with Straps.

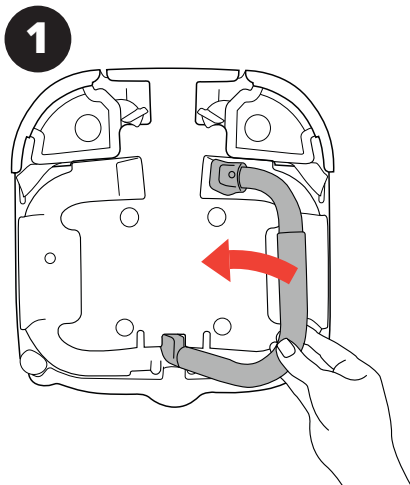


Fold-away Arm Install:

NOTE: Fold-away Arm installation might not be possible on all chairs due to design differences among chair types. Only use Fold-away Arm attachment on chairs that have a rigid bottom and where the arm is able to move freely under the seat while installing.


1. Turn the Booster Seat over, and pull up on the Fold-away Arm. Rotate the arm until it springs into the open position.

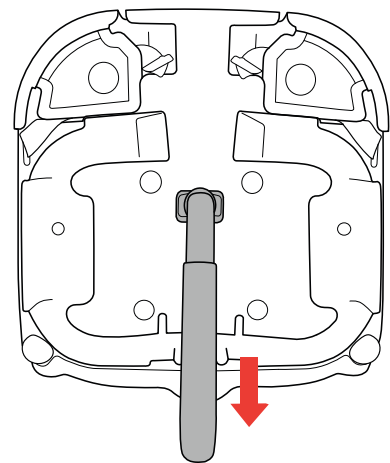

Attach to Chair: Fold-away Arm

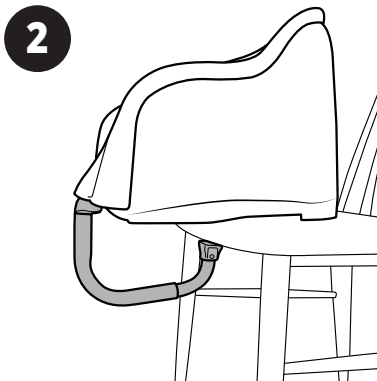


2. Line up the Booster Seat with the front of the Chair. Slide the Booster Seat towards the back of the Chair. Make sure the Fold-away Arm is completely under the Chair, as shown.


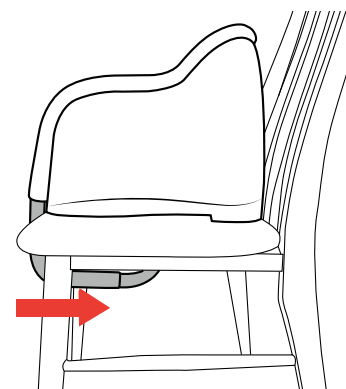


Attach to Chair: Fold-away Arm

3


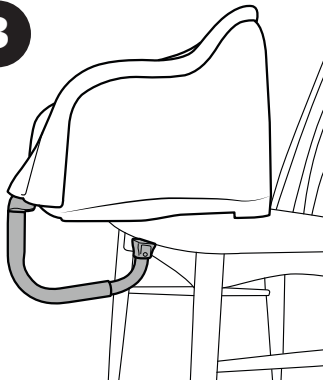


3. If the chair has skirting and is not allowing the Fold-away Arm/Booster Seat to slide backwards on the chair seat, rotate the front of the Fold-away Arm to the side, as shown. Slide the Booster Seat towards the back of the chair. Make sure the Fold-away Arm is completely under the chair and the Booster does not hang over the seat. Rotate the front of the Fold-away Arm back into the upright position, as shown.

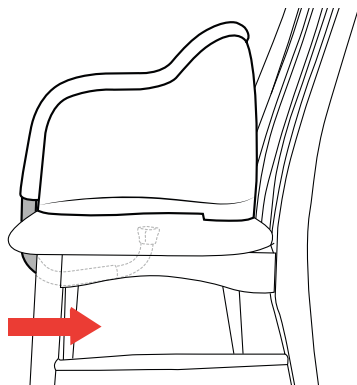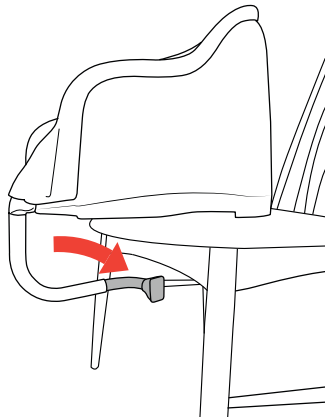


Attach to Chair: Fold-away Arm

4A

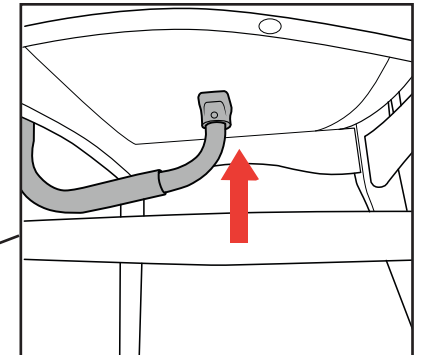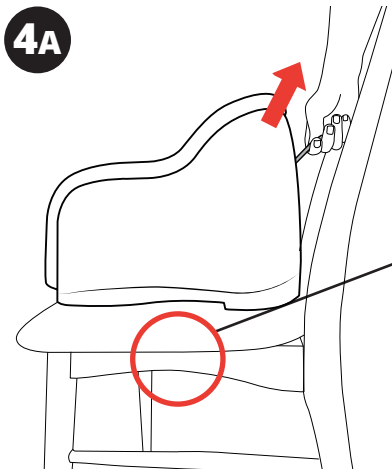

4a. Check to make sure the foot of the Fold-away Arm is flat against the bottom of the chair (as shown). Locate the Cinch Strap on the back of the booster. Pull on the Cinch Strap to tighten the Fold-away Arm and lock down Booster Seat.

4B

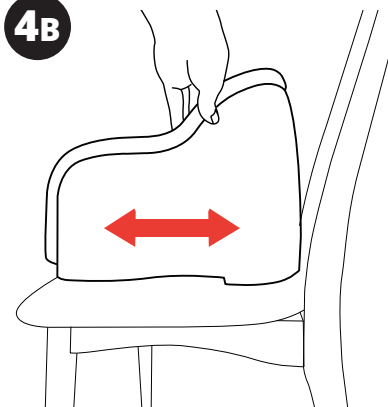

4b. Pull on the Booster to check that the Booster is connected to the chair securely.



NOTE: Always check to make sure the foot of the Fold-away Arm is flat against the bottom of the chair.

Remove from Chair: Fold-away Arm

5




5. To release the Booster Seat, squeeze the release button to allow the Cinch Strap to slide through the handle and release tension on the Fold-away Arm. If necessary, pull down on the Fold-away Arm while squeezing the release button. Slide the Booster Seat off of the chair. If chair design does not allow this, rotate the front of the Fold-away Arm to the side before sliding the Booster Seat off the chair.

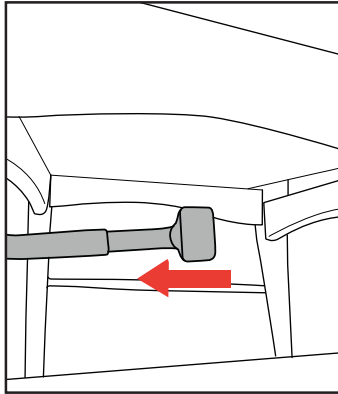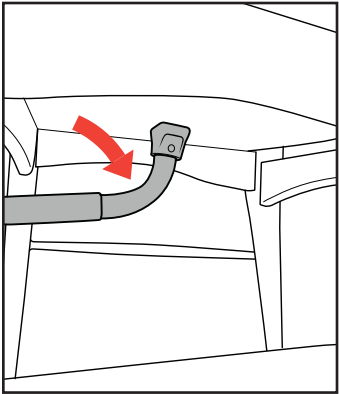

Attach to Chair: Attachment Straps

NOTE: Only one method of installation is required; choose either installation with Fold-away Arm or installation with Straps.


6A

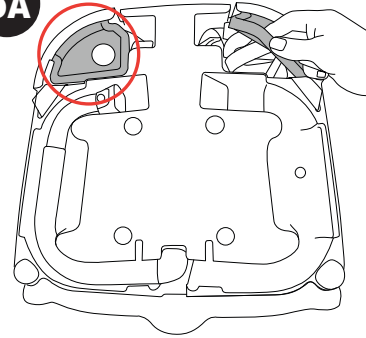


Attachment Strap Install:

6A. On the bottom of the Booster Seat, locate both Storage compartments for the Rear (black) and Lower Attachment Straps. Remove both sets of straps.

6B

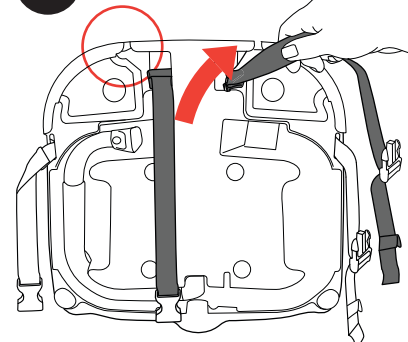


6B. Thread the Rear Attachment Straps through the guides on the back of the Booster Seat.

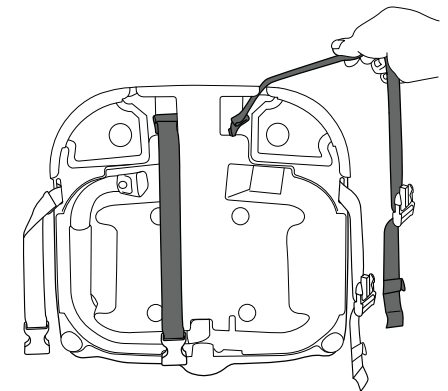


Attach to Chair: Attachment Straps

7

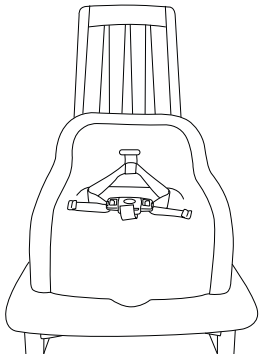

7. Center the seat on the chair, making sure the back of the Booster is against the chair back.


8A

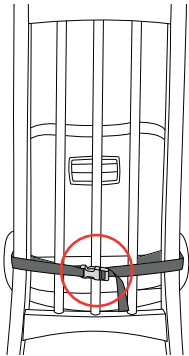

8A. Ensure that the Rear Attachment Straps are routed through the vertical guide slots on the back of the Seat (Step 6B).

Fasten the Rear Attachment Straps, passing them behind the backrest of the chair. Pull the Rear Attachment Strap snug - Do not fully tighten.


8B

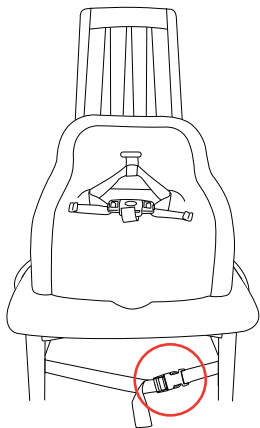

8B. Then fasten the Lower Attachment Straps, passing them underneath the seat of the chair. Pull the Lower Attachment Strap snug - Do not fully tighten.



Attach to Chair: Attachment Straps

9

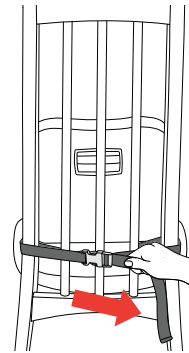


9. Make sure the Booster is not overhanging the chair seat and the Booster is centered, then secure the Booster by fully tightening the Rear and Lower Attachment Straps as shown.

Once tight, pull on the seat and make sure attachment straps do not become loose. If they become loose, reposition the straps and retighten to make sure the straps do not become loose.

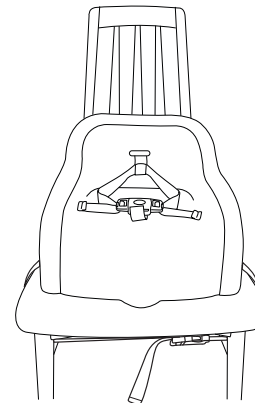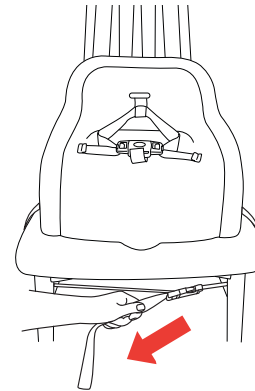


Using the 3-point Harness

10A

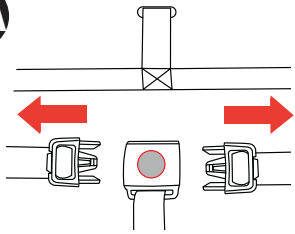


10A. Unfasten the 3-point harness by pressing the center button on Crotch Strap Buckle. Pull out both Waist Clips from the Crotch Strap Buckle.

10B

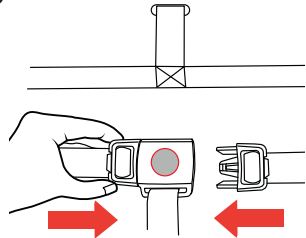

10B. To fasten the 3-point harness, slide both Waist Clips into the Crotch Strap Buckle. Pull on both sides to make sure the Waist Clips are secured to the Crotch Strap Buckle.

10C

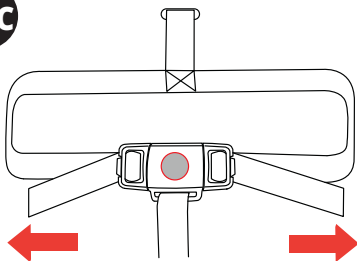


10C. Adjust the 3-point harness to fit your child.

The length of the Waist Straps can be adjusted by pressing the tab at the end of the Waist Strap Clip and pulling on the strap to tighten or loosen to better fit your child.

Removing Seat Pad


11A

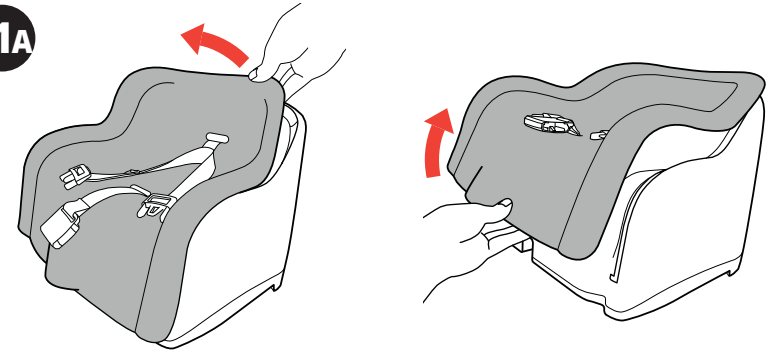

11A. Remove the Seat Pad from the base for cleaning. Lift up on the front and back of the edge of the Seat Pad to release the outer tabs.

Then pull forward on the areas where the straps thread through the seat pad.


11B

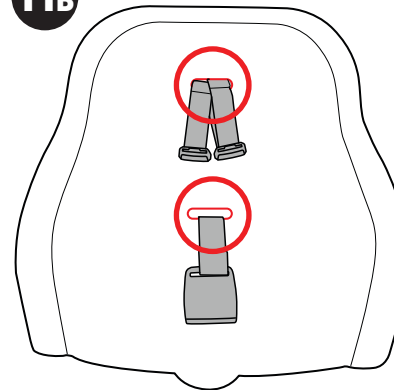

11B. Thread the Harness Straps through the openings on the Seat Pad and remove the pad.


Removing Harness Straps

12A

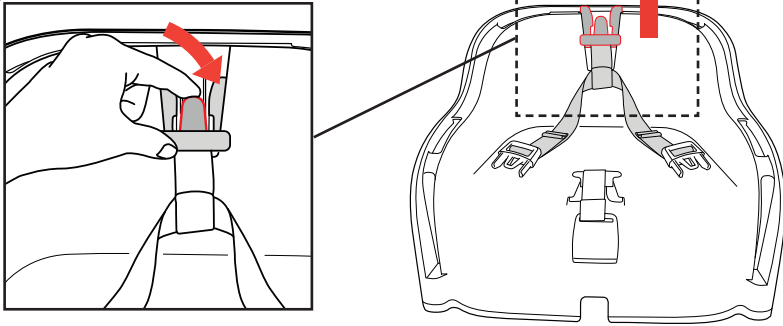


12A. Lift up on the center clip to release the Harness Strap Plate. Then slide the Harness Strap Plate out of the Harness Strap Slot. Repeat for the Crotch Strap 12B.

12B




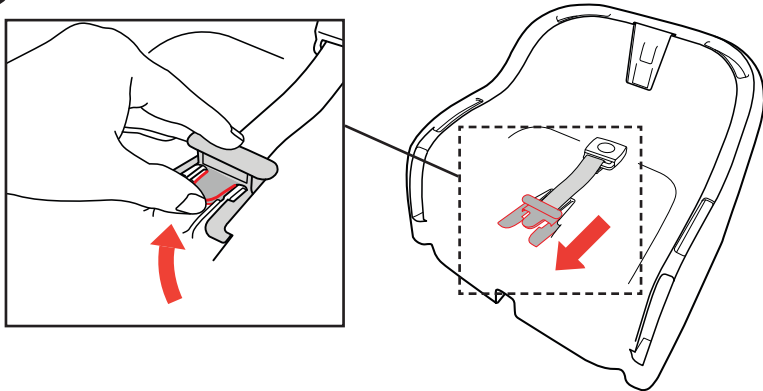


Removing Harness Straps


13

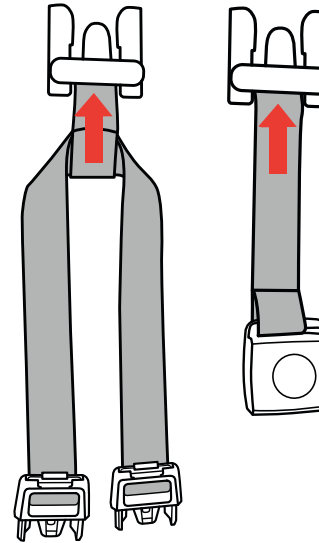


13. To remove the Straps from the Harness Strap Plates. Push the Strap up to release the fold lock loops. Unfold the loops to lay flat and then pull the Strap from the Harness Strap Plate, as shown.

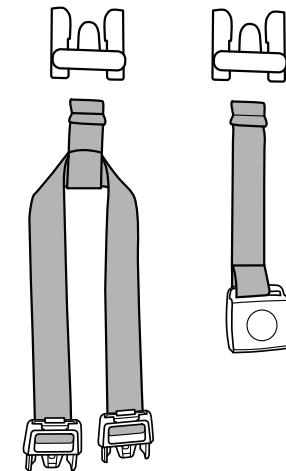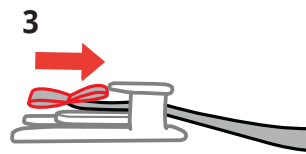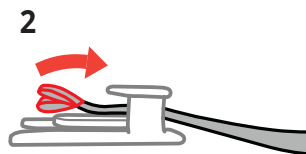

Re-attaching Harness Straps

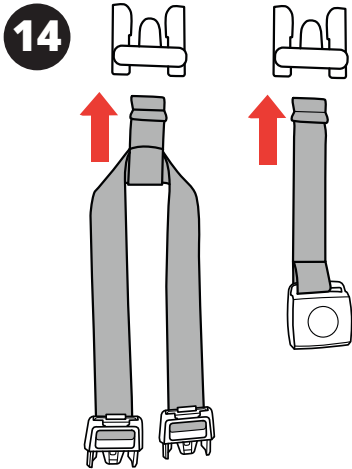


14. To re-attach the Harness Straps, lay out the Harness Plate and the Harness Straps as shown. With the loops flat, thread the Harness Straps through the bottom of Harness Plates.




Re-attaching Harness Straps



15. Then fold the loops together and pull down on the Harness Strap to secure them to the Harness Plate.

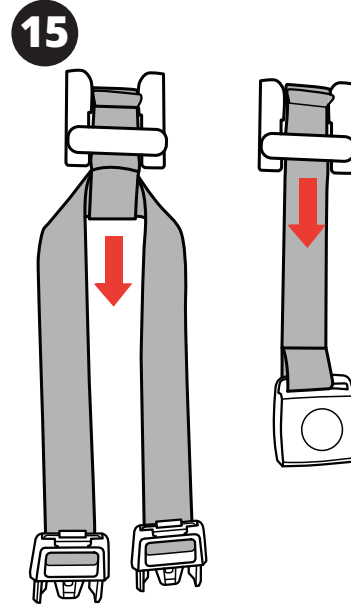


NOTE: When re-attaching the straps make sure the Waist Belt Strap adjustment ends are on the outside of the strap.

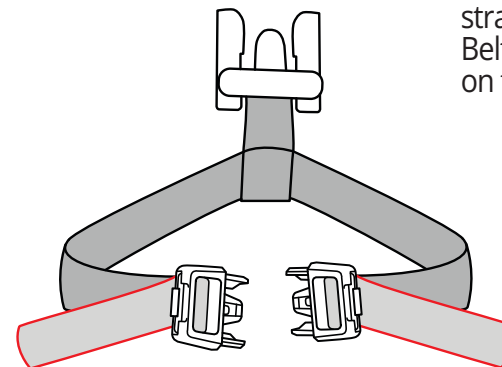


Re-attaching Harness Straps

16A

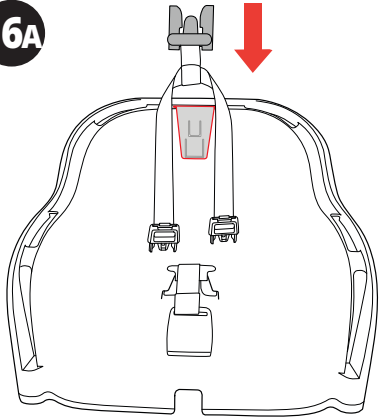

16A. Line up the Waist Belt Harness Plate with the Harness Slot (as shown) and slide it down until it clicks into place.


16B

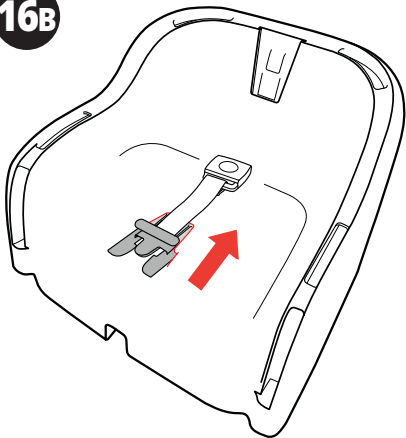

16B. Repeat this step with the Crotch Strap Harness Plate. Line up the Crotch Strap Harness Plate with the Harness Slot (as shown) and slide it back until it clicks into place.


Re-attaching Seat Pad

17A

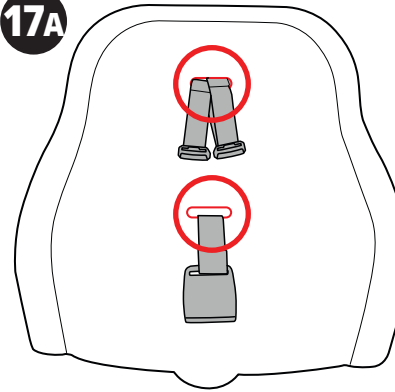

17A. To re-attach the Seat Pad, thread the Harness Straps through the correct openings and press the Seat Pad down and around the Harness Plate.


17B

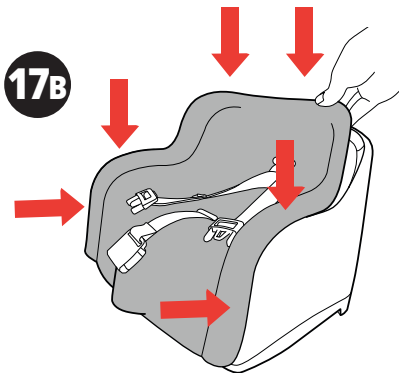

17B. Then push down along the Seat Pad edges to secure it to the Seat Base.

Closing and Transporting the Seat


18A

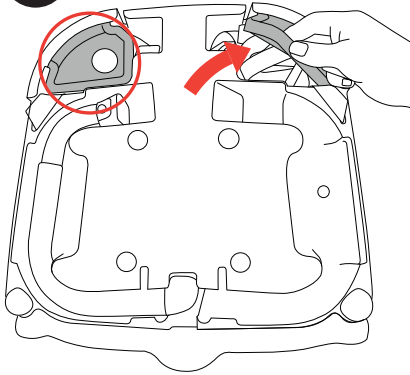

Attachment Strap:


18A. To store the Rear and Lower Attachment Straps; fold and tuck each strap into their corresponding openings, as shown. Store the straps for later use.

18B

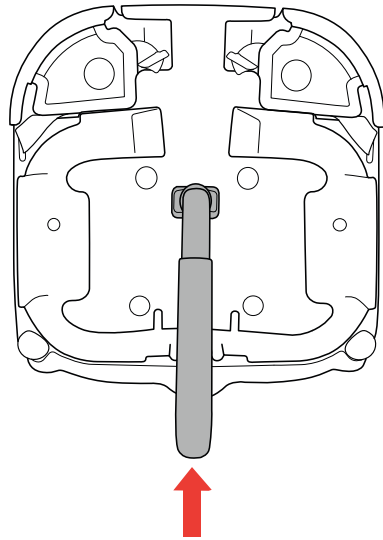

Fold-away Arm:

18B. To store the Fold-away Arm, press in on the front of the Fold-away Arm, as shown. While holding the Fold-away Arm all the way in, rotate it down into the storage compartment on either side.

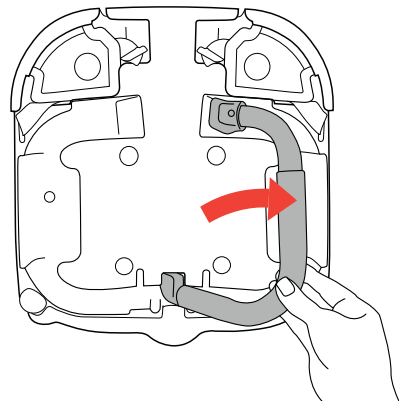

Cleaning and Maintenance

This product requires regular maintenance. The cleaning and maintenance of the product must only be carried out by an adult.

CLEANING

Do not use bleach, spray, or wipes on this product. Periodically wipe clean plastic parts with a soft damp cloth. Seat Pad can be hand washed with warm water and mild soap, or cleaned off with a soft damp cloth. Seat Pad is NOT dishwasher safe. Always dry the metal parts to prevent the formation of rust if the product has come into contact with water.

MAINTENANCE

Periodically check the product for loose screws, or worn parts. Replace or repair the parts as needed. Use only Chicco replacement parts. Keep product in a dry place. Prolonged exposure to direct sunlight may cause plastic parts to warp.

For More Information

For USA customers :
If you have any questions or comments about this product, or are missing any of the parts, please do not return this product to the store. Contact us in one of the following ways:



(877)-424-4226



info.usa@artsana.com




www.chiccousa.com



1826 William Penn Way
Lancaster, PA 17601

[**Kee-Ko**] If you say it right it makes you *smile*

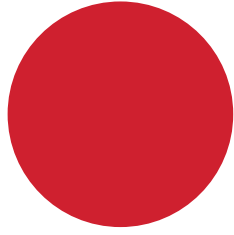

KEE-KO